Sanitized Copy Approved for Release 2011/02/08 : CIA-RDP82-00038R001400280001-7 NFORMA 50X1-HUM CENTRAL INTELLIGENCE AGENCY This material contains information affection Defense of the United States within the meaning of the Espionage Laws, Title 18, U.S.C. Secs. 793 and 794, the transmi CONFIDENTIAL. COUNTRY Czechoslovakia SUBJECT DATE DISTR. Catalogues of Electronic 1 Gear and Equipment for 1 Radioastive Substances NO. PAGES RD REFERENCES DATE OF INFO. 50X1-HUM PLACE & DATE ACQ. THIS IS UNEVALUATED INFORMATION. SOURCE GRADINGS ARE DEFINITIVE. APPRAISAL OF CONTENT IS TENTATIVE. patelogues 50X1-HUM describing electromic equipment manufactured in Czechoslowakia, mostly by Tesla and Omnia. Approximately half of these catalogues describe equipment for bandling radioactive substances, including wrendum, such as containers, probes, torge, and a wide variety of measuring desicas, The rest of the brookbures describe electronic gear, such as various types of oscilloscopes, amplifiers, generators, and measuring devices. All the catalogues are in English, and a few of them are duplicated in Casch, German, and Russian. Comment: These cover the entire range of electronic gare manufactured im Czechoslowkia tolay. 50X1-HUM 50X1-HUM


> CONFIDENTIAL NO POFERNI DISSEM


SERVEY STATE X ARMY X NAME X ARM X A


3


2


INFORMATION REPORT NEORMATION REPOR

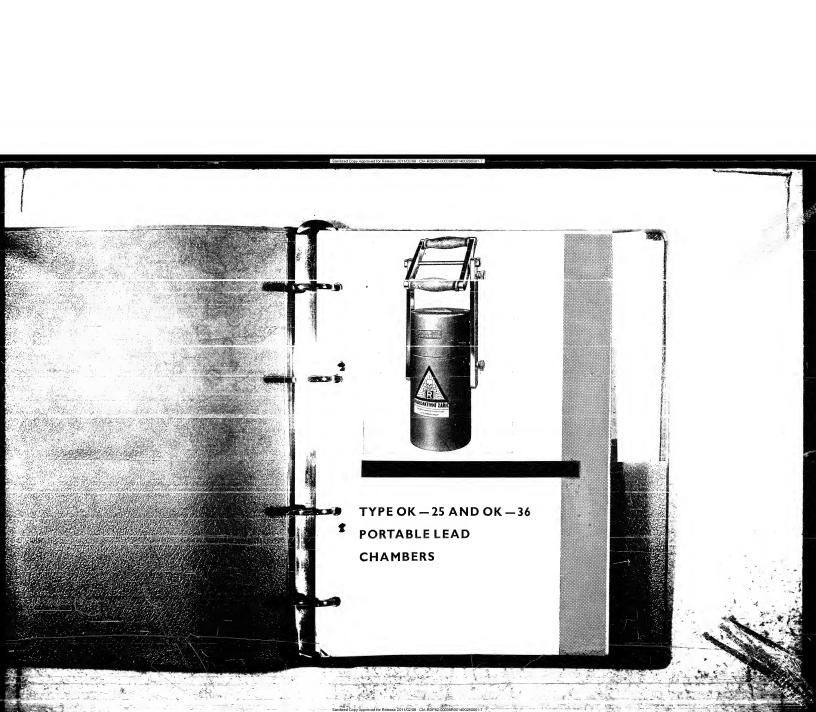


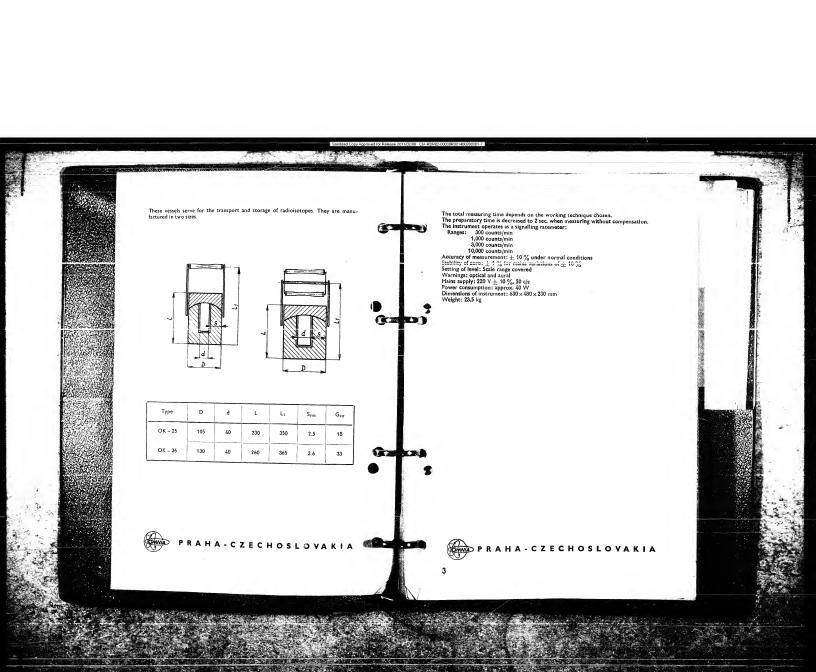


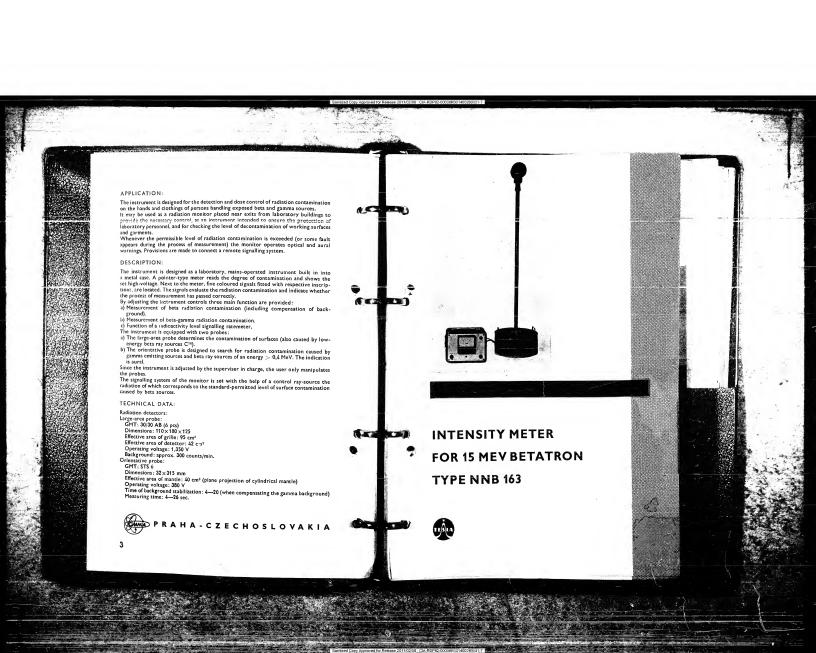


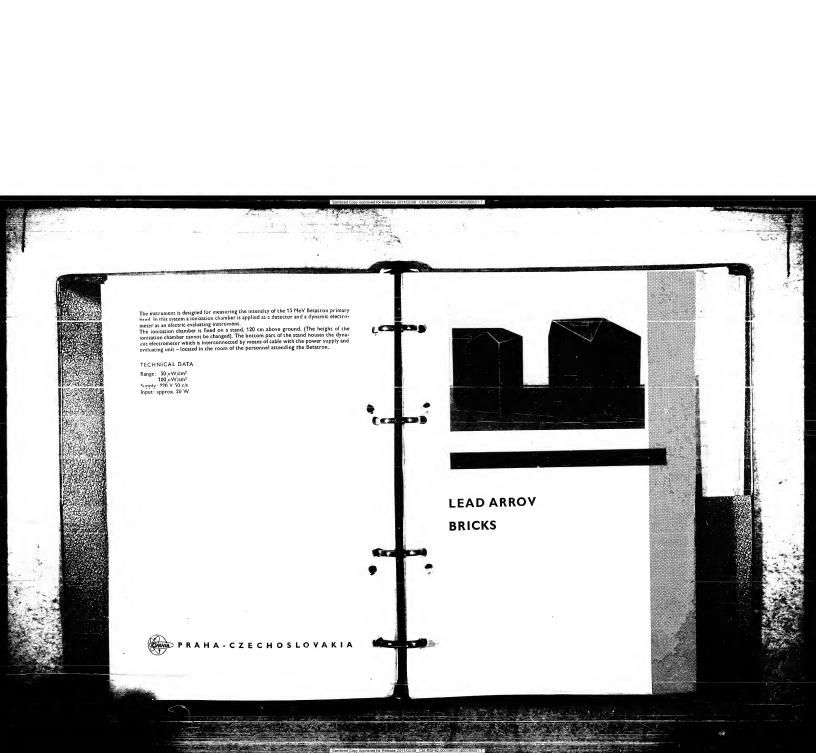


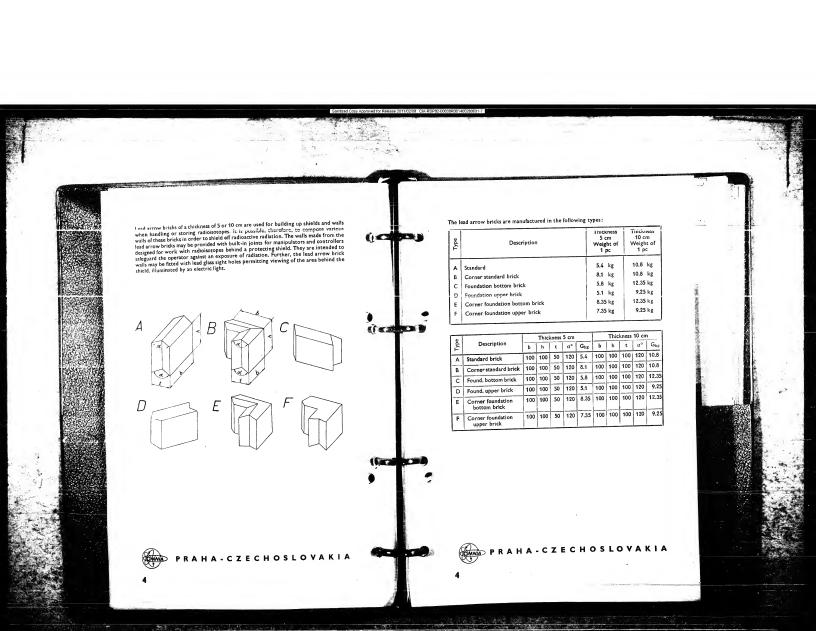


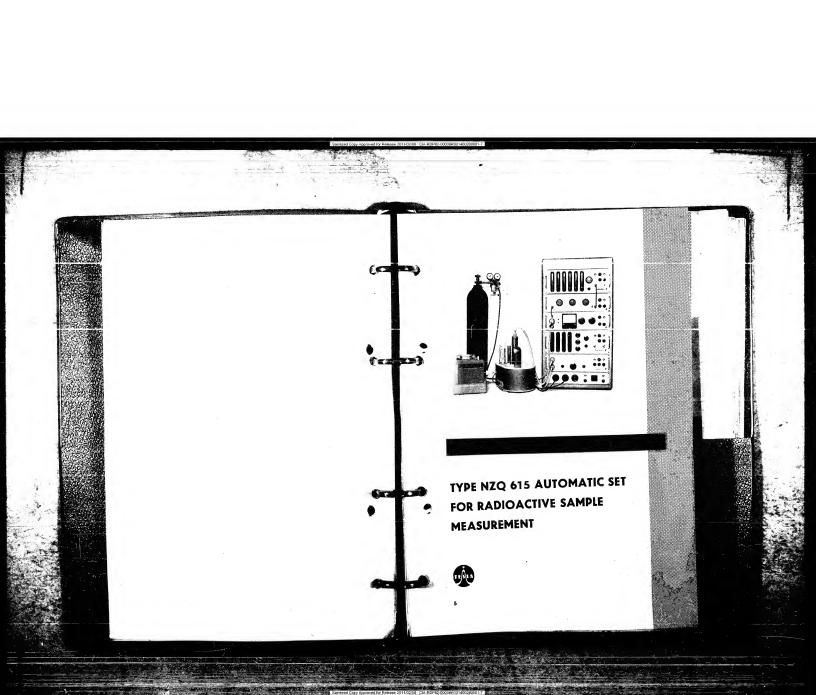


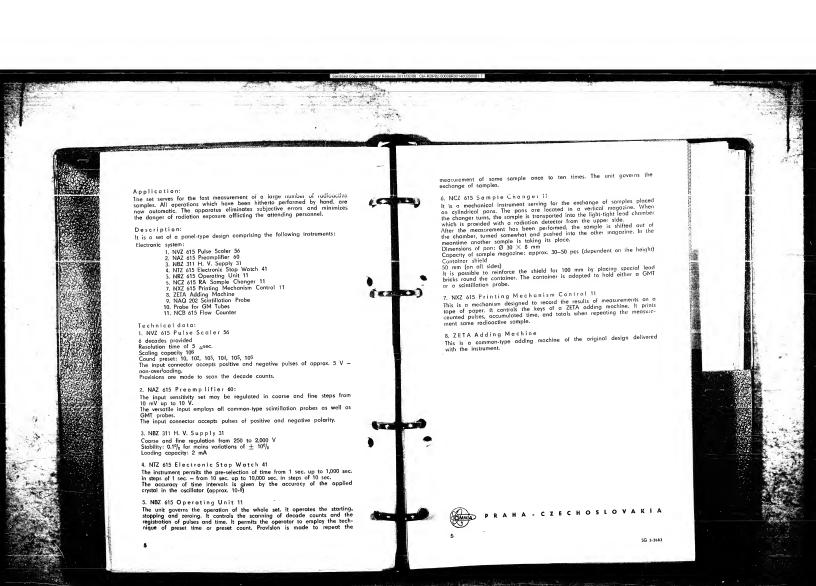


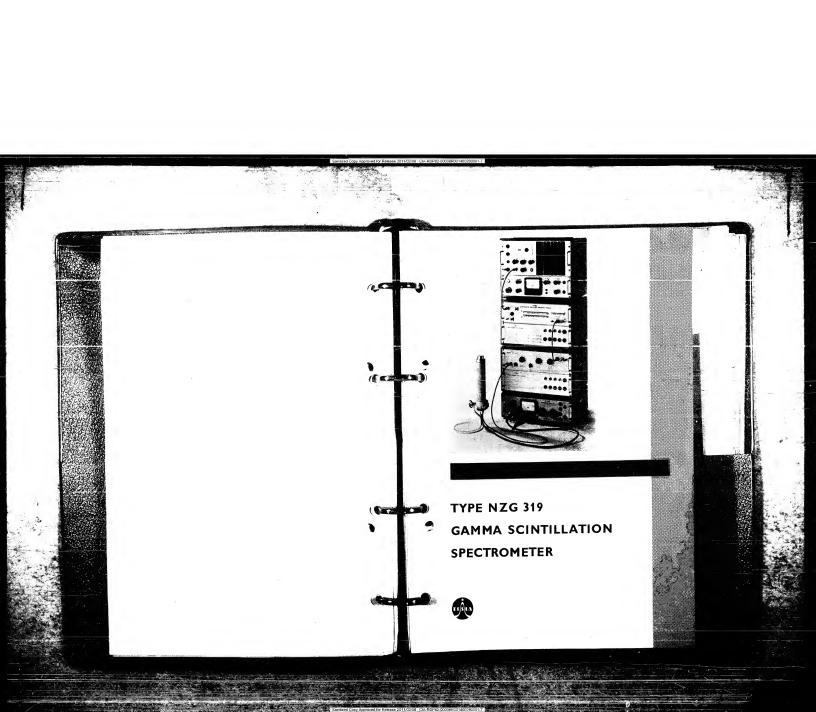


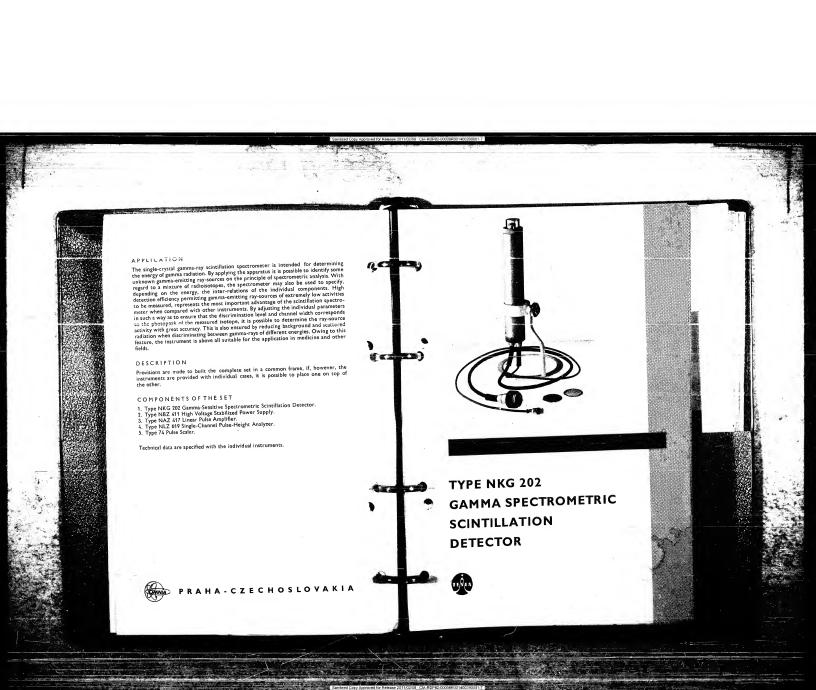


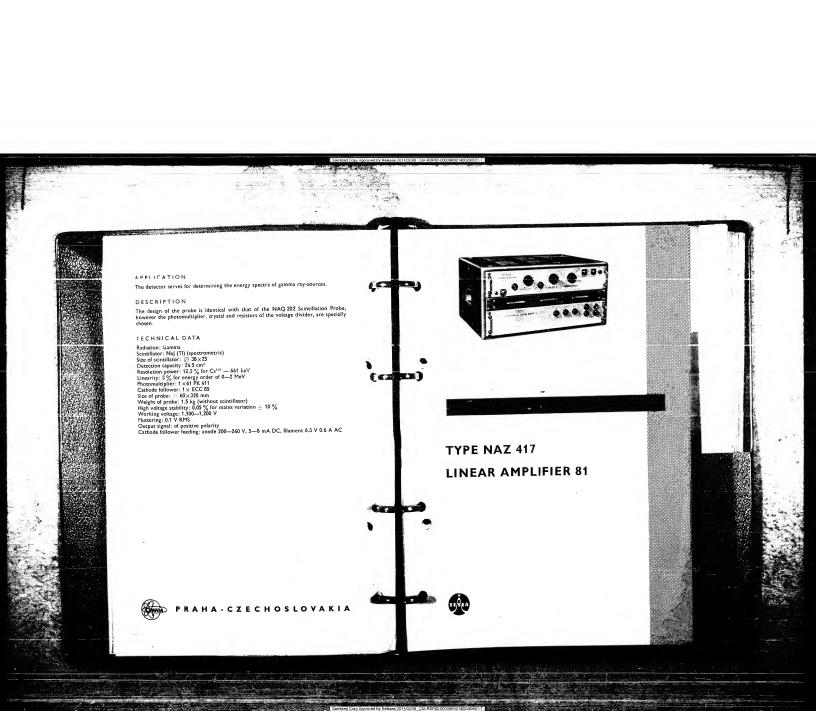


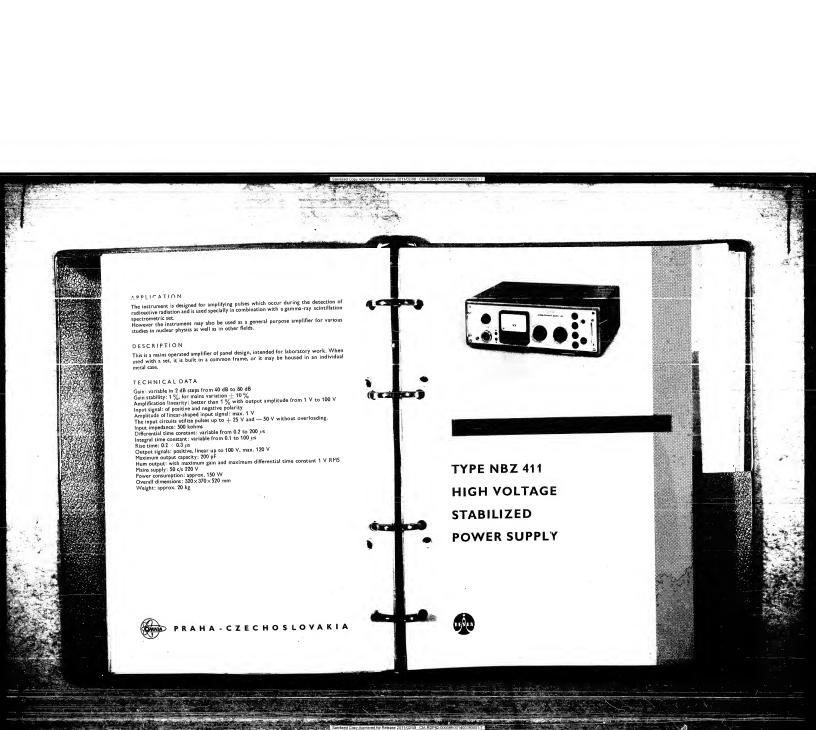


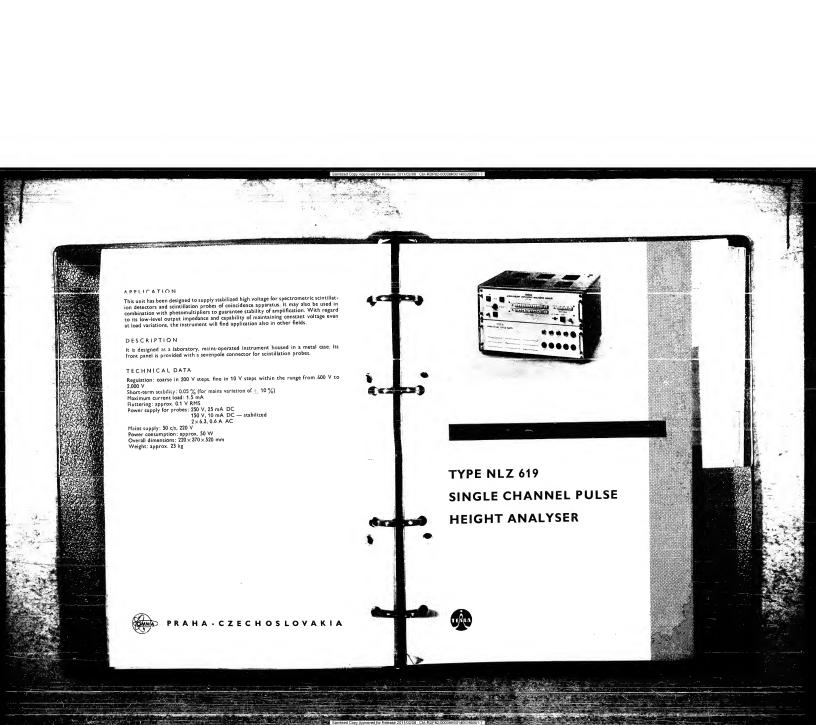


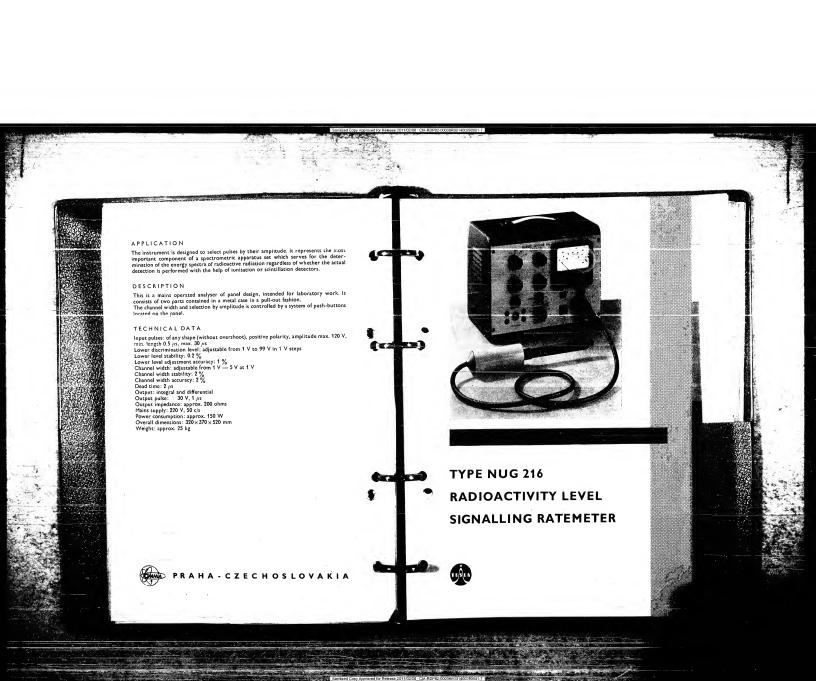


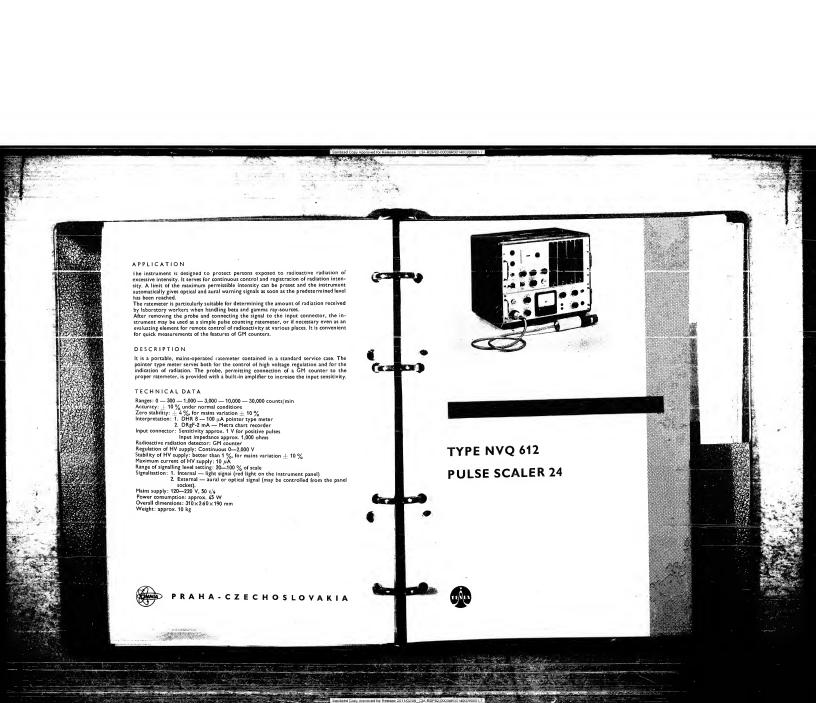


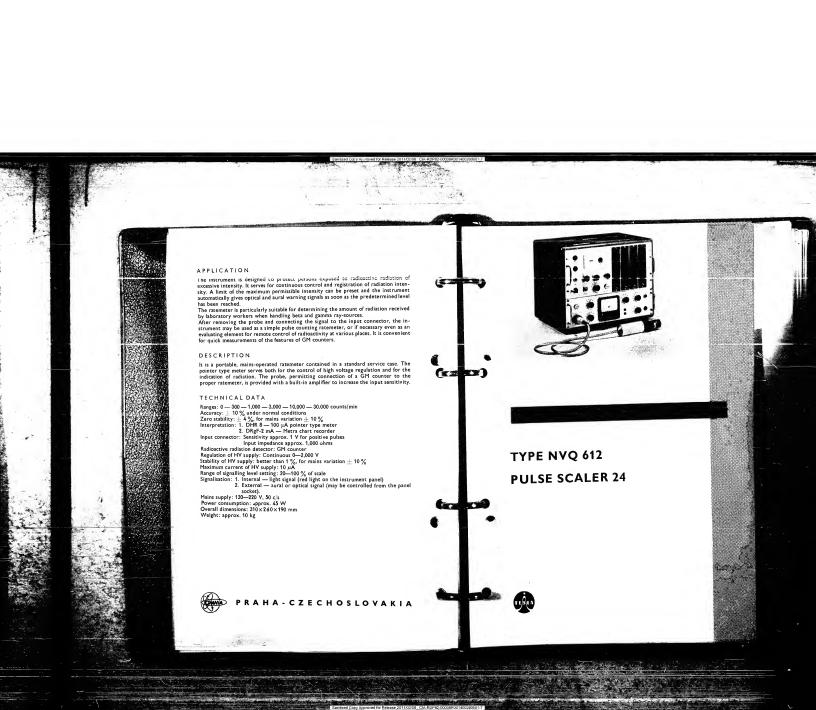


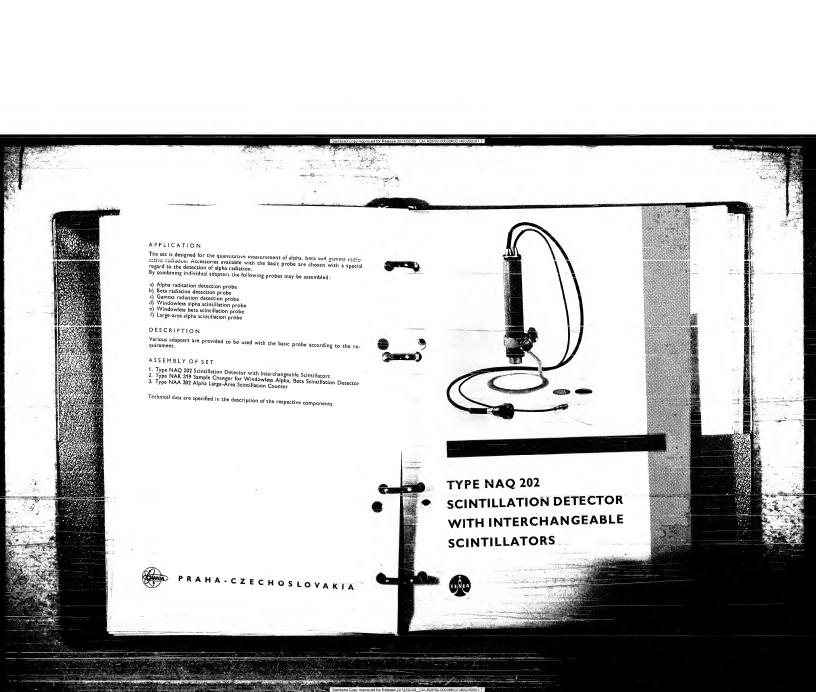


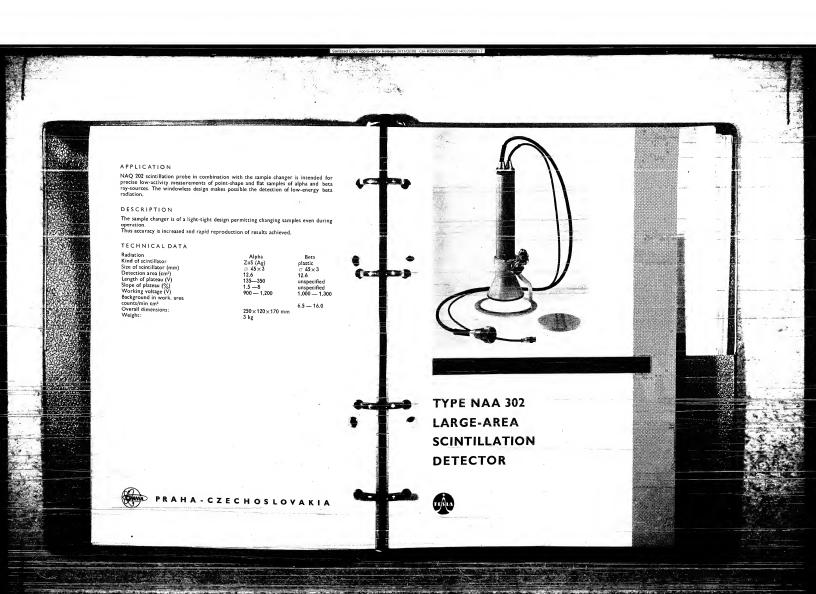


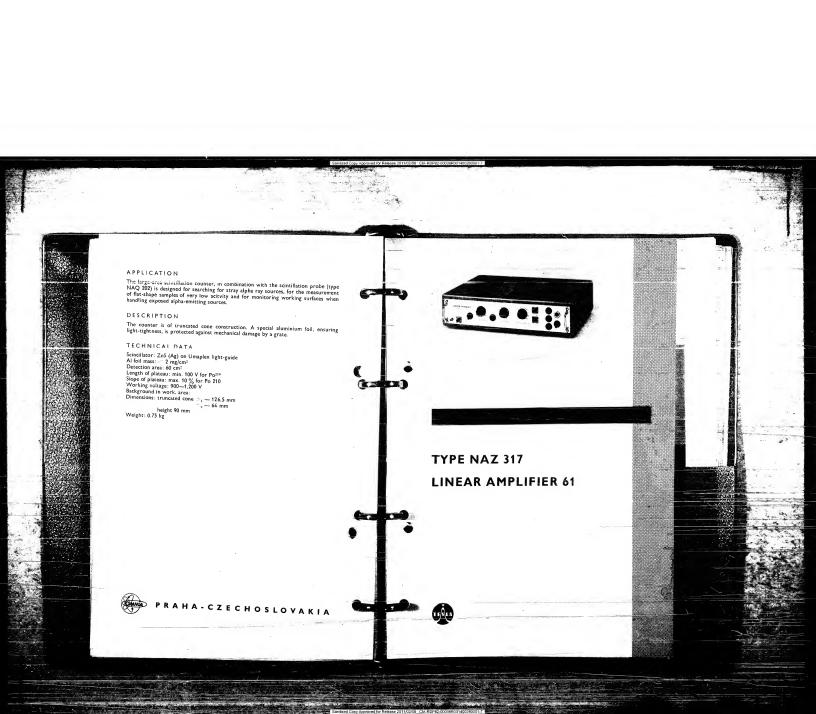


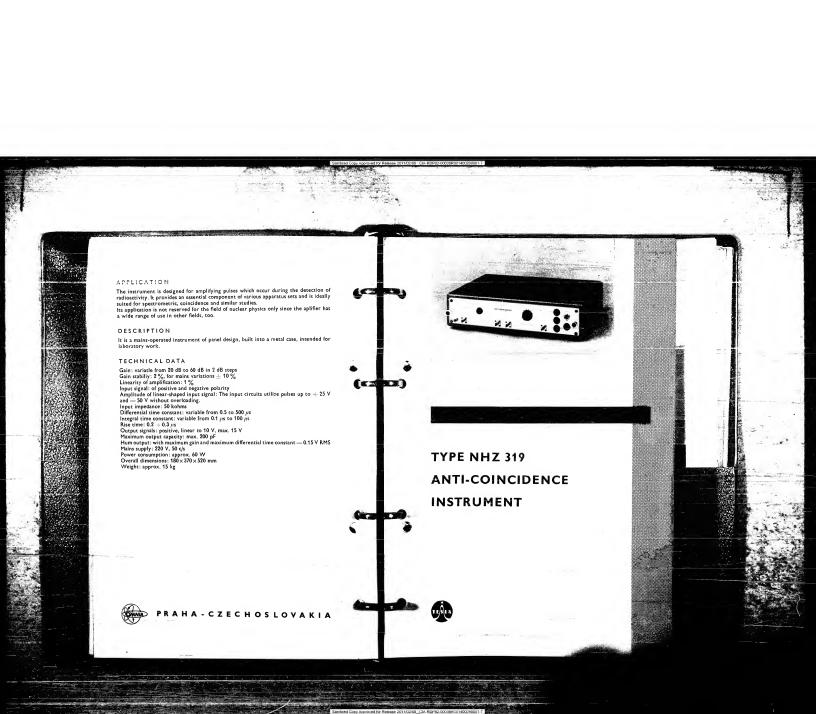


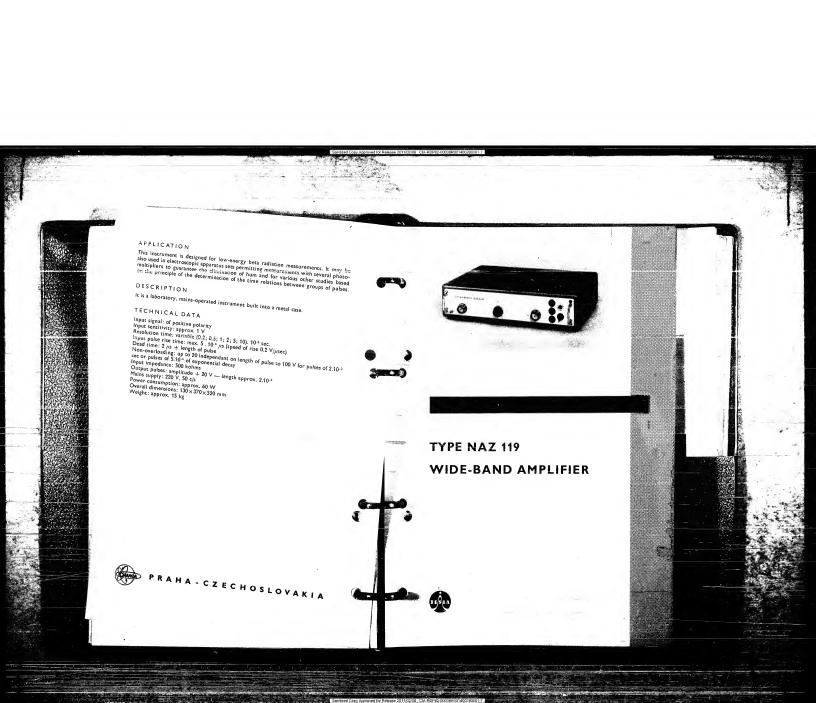


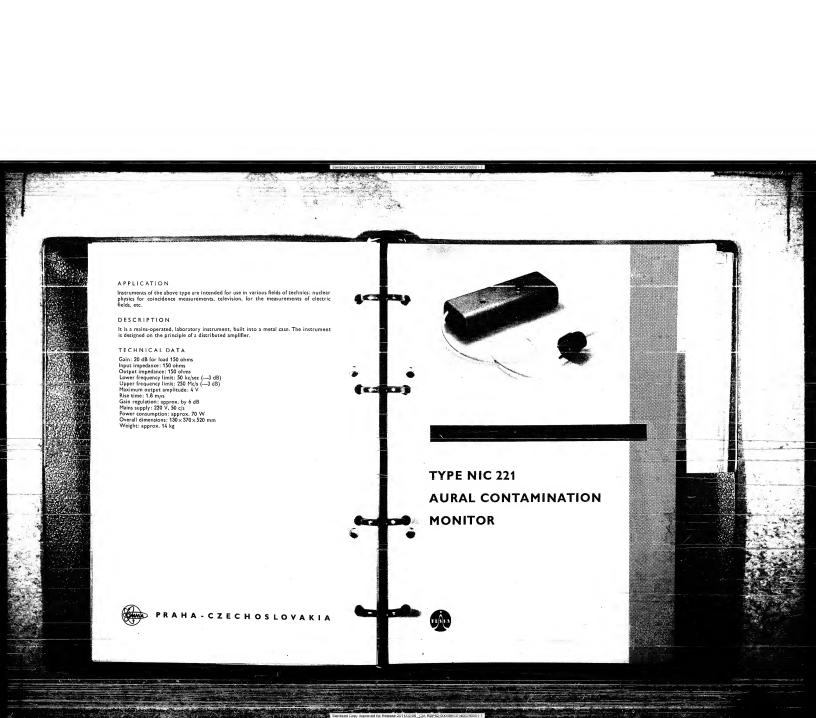


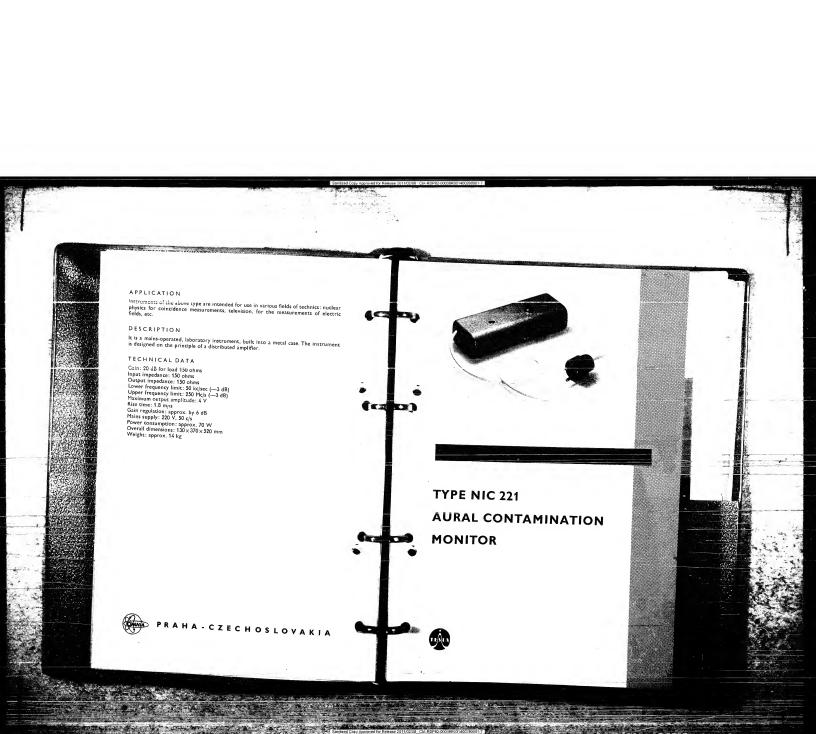


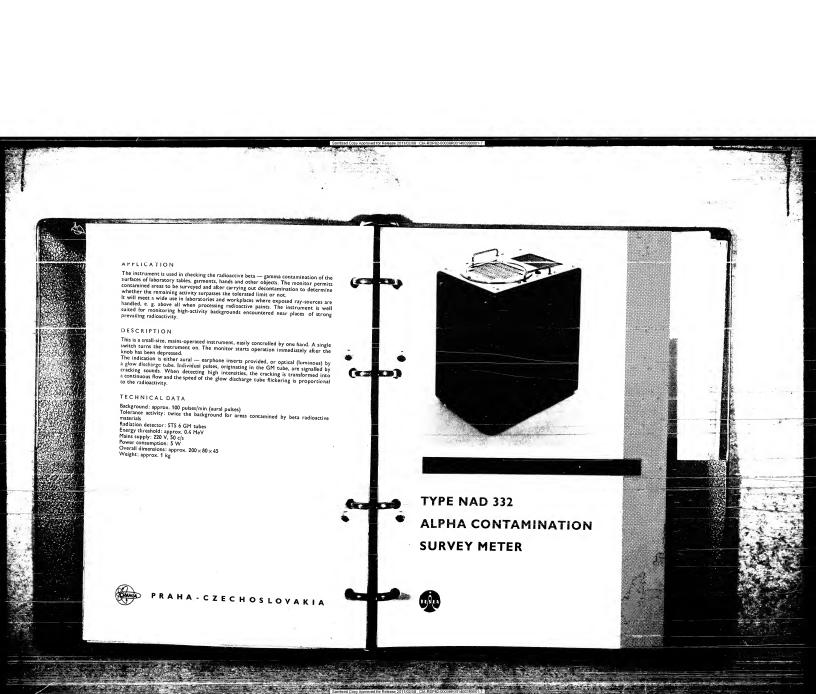


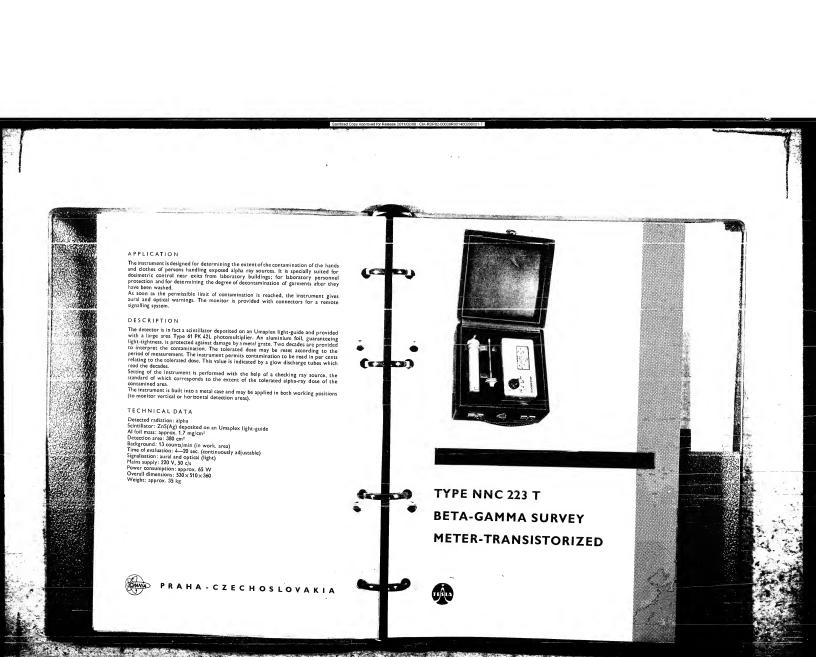


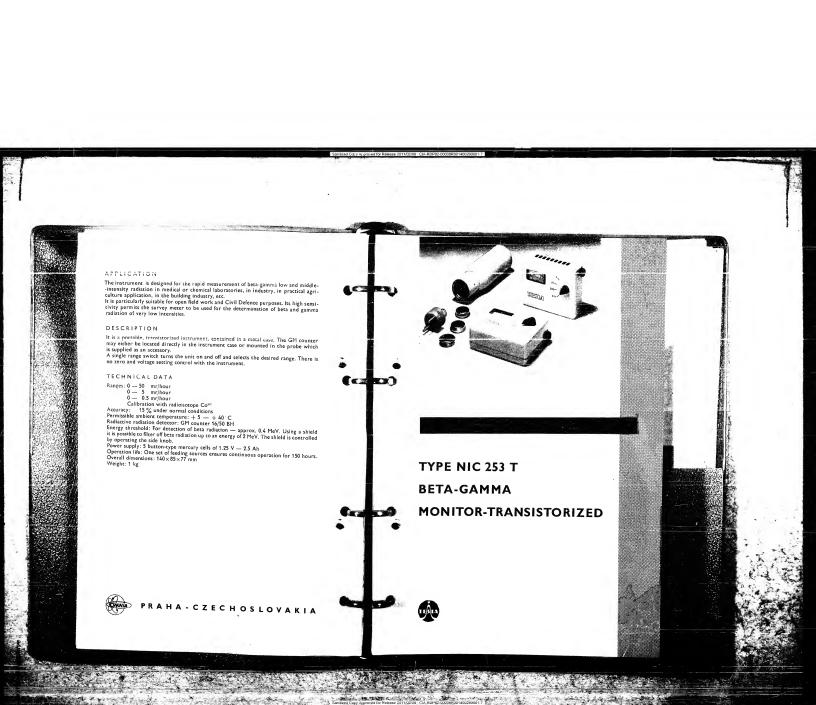


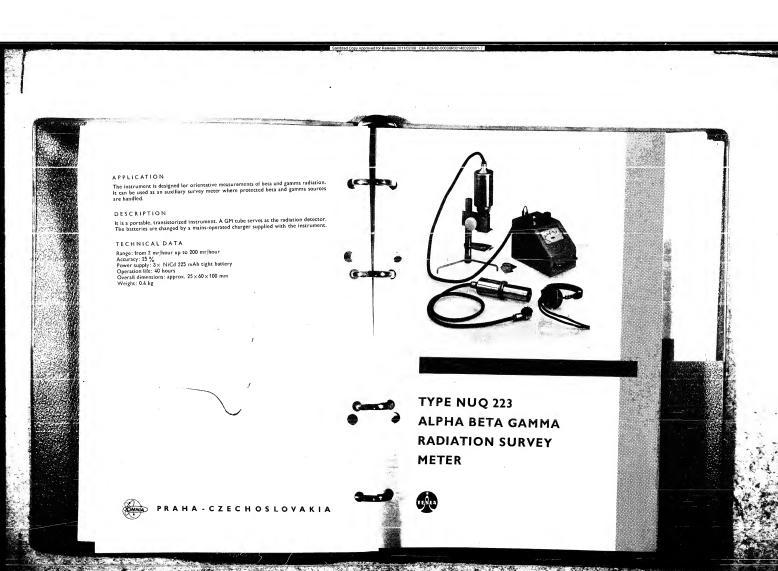


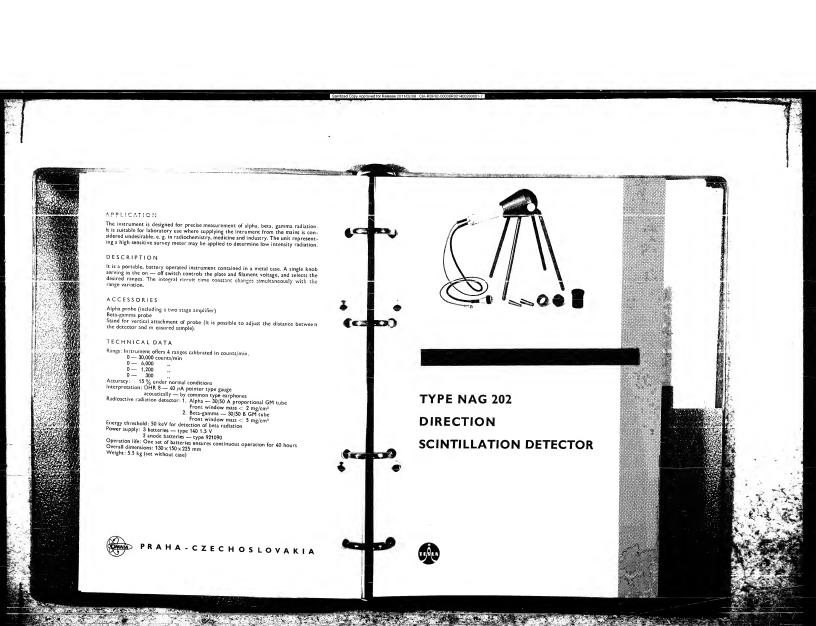

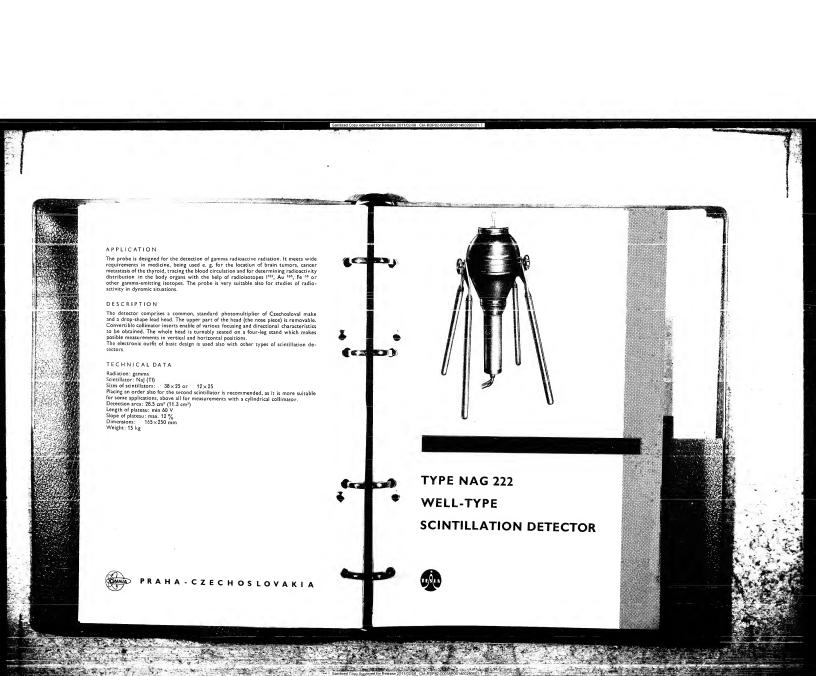

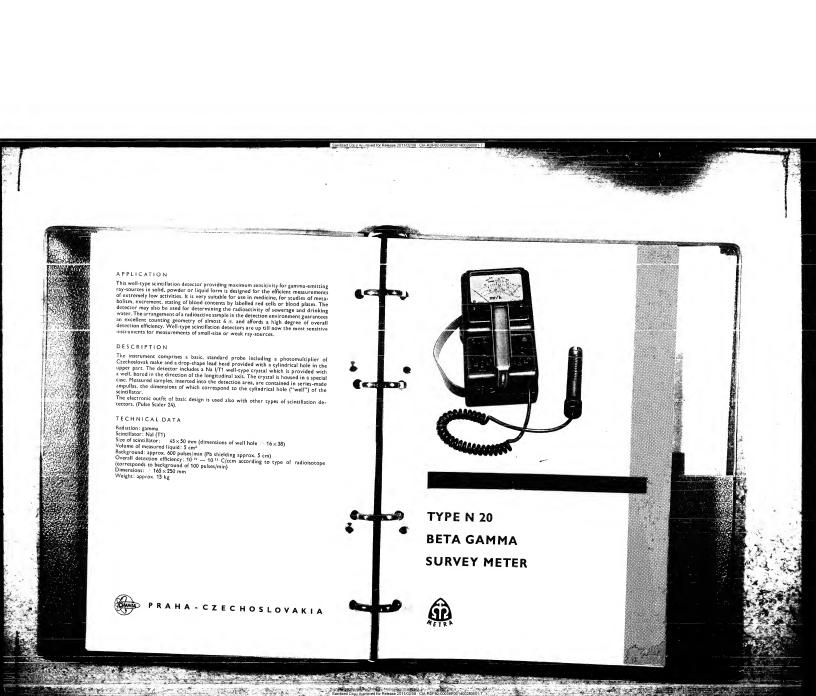

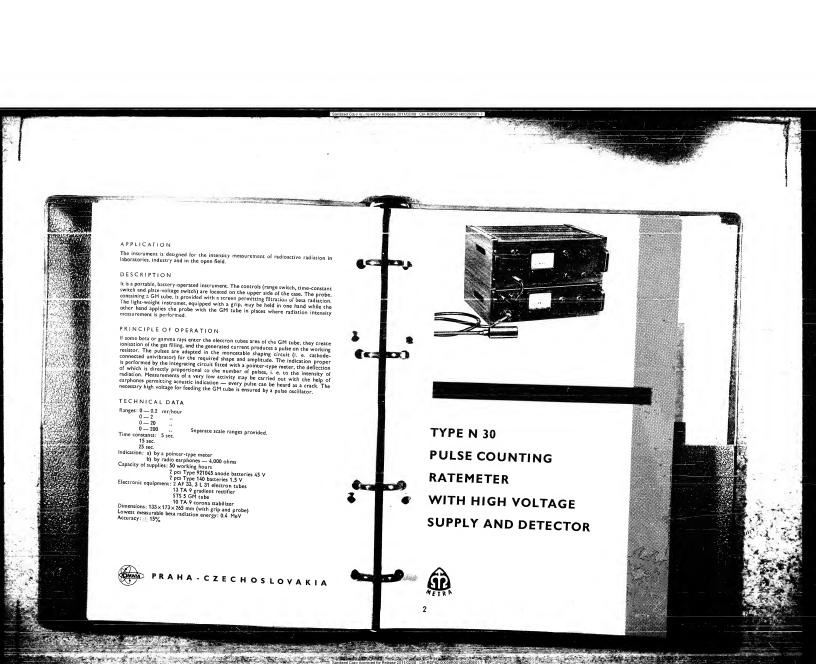

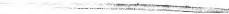

APPLICATION

APPLICATION

The set is intended for the quick approximate measurement of radioactive radiation, particularly of samples of very short half-times. The pulse counting ratemeter proper may be used for the frequency measurement of periodical courses of a range of 5 — — 16.700 (c). Compared to other instruments with a reducer, the counting ratemeter presents the advantage of registration of measured values.

DESCRIPTION

DESCRIPTION

The principle of the ratemeter consists in the measurement of the middle discharging current of the integrating condenser which has been charged by every preceding pulse with a constant charge. The instrument meter reads in fact an average number of pulses per minute. For every GPI tube the whole apparatus must be calibrated by another instrument, which has already been calibrated, or by a radioactive sample of a known activity.

TECHNICAL DATA

TECHNICAL DATA
Pulse Counting Ratemeter:
Range: 3x0'iv up to 10° pulse/min in eight ranges
Sensitivity: 2 V for — pulse polarity (0.2 V using a probe)
Max. Input pulse: 30 V for ± pulse polarity at a ratio of the pulse width to the distance
between pulses of max. 1: 3.
When changing for a sensitivity of 1: 5, the input amplitude may be five times larger.
The mix amplitude of sinus input pulses is 3 V.
Shape of input pulse: The instrument employs reliably rectangular pulses or signals,
hape of input pulse: The instrument maximum surpassing the input sensitivity. The
Accuracy of instrument pulses in 0.5 The maximum rise time is 5 ms.
Accuracy of instrument pulses in 0.5 The maximum rise time is 5 ms.
Accuracy of instrument pulses in 0.5 The maximum rise time is 5 ms.
Affor ranges 10°—3. 10° static error due to the instrument resolution time is
4%, for ranges 10°—3. 10° static error due to the instrument resolution time is
4%, for ranges 10°—3. 10° pulse
per minute, providing an ideal per minute, and 1% for ranges 10°—3. 10° pulse
per minute is max. 75 sec., for ranges 3x (10° up to 10° pulse per minute is max. 75 sec., for ranges 3x (10° up to 10° pulse per minute is max. 75 sec., for ranges 10°—10° pulse per minute is max. 15 sec.

New York of the providence of the providence of the pulse per minute is max. 15 sec.

New York of the providence of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

New York of the pulse per minute is max. 15 sec.

HIGH VOLTAGE SUPPLY

HIGH VOLTAGE SUPPLY
The high voltage may be regulated over a range from 300 V — 1,800 V in steps of 150 V.
Max. current load: 3 mA with the straight of ± 10%
Max. current load: 3 mA with the straight of ± 10%
Internal resistance: approx. 500 ohms
Hum: max. V RMS
Accuracy of voltameter: 29%
Supply: 20 V/120 V, 50 c/s
Supply: 20 V/120 V, 50 c/s
Democracy of voltage prox. 500 mm
Weight: approx. 51 kg



PRAHA-CZECHOSLOVAKIA

DETECTOR

(cz

201


Supply: 200 V D. C. and 6.3 V A. C.
Output pulses of positive polarity
Output impedance: 200 ohms
High voltage: max. 1,800 V (positive pole earthed).




PRAHA-CZECHOSLOVAKIA


and a state of

Million House world to be by

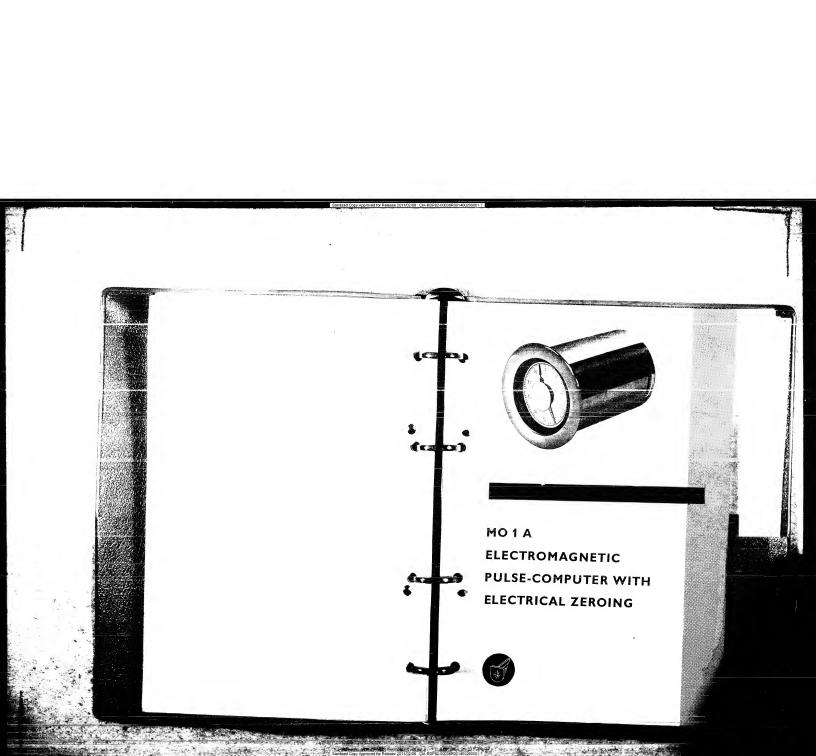

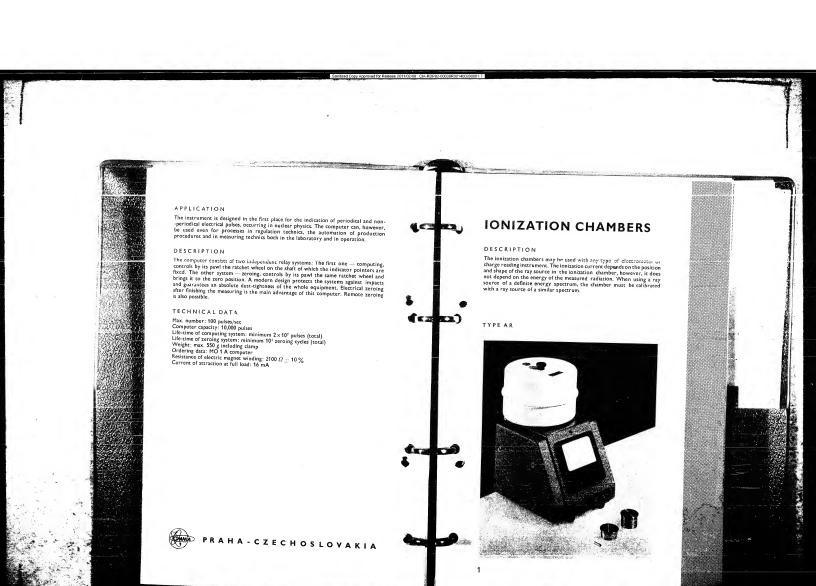

0140023001.7

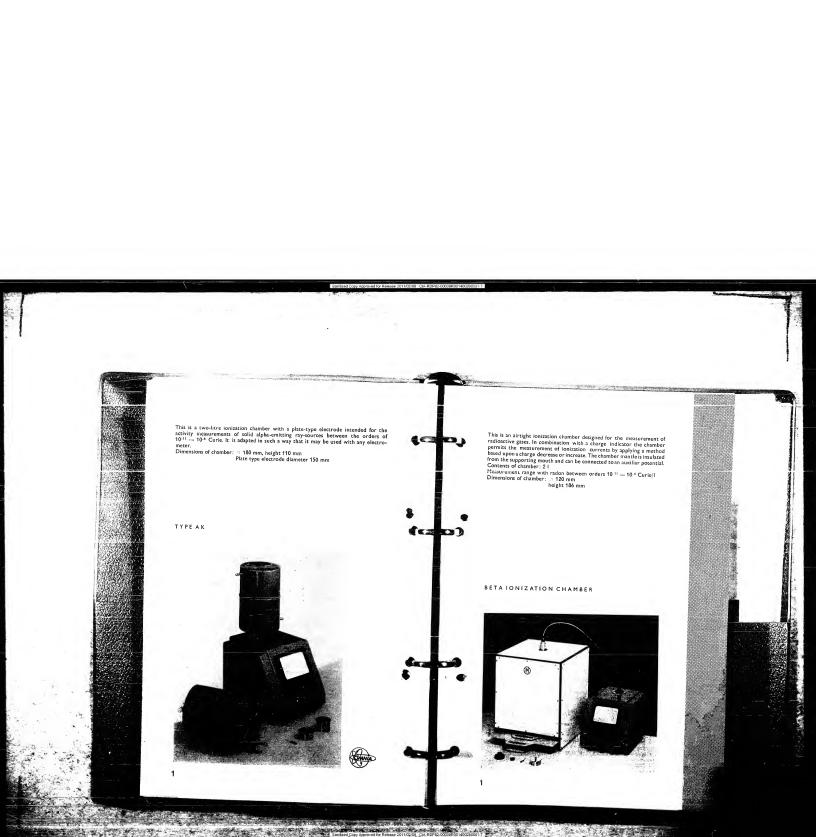

This is a 27-litre ionization chamber designed for measurements of beta rays, provided with a bar type electrode and two slide-feeders, one of which accepts the necessary filters and the other the measured sample. It is necessary to interconnect the chamber with a charge indicator by means of a reliable coaxial cable or by a connector filled with paraffin, coresin, etc. $Dimensions of chamber: 300 \times 300 \times 300$

GAMMA IONIZATION CHAMBER





This is a ionization chamber intended to measure and determine the intensity of gamma radiation. The chamber is perfectly suitable for measurements by applying a comparing method for controlling gamma-emitting ray sources (RA samples orders of 1 mC are made of a 3 mm material; traction of the radiation soft elements, the chamber walls Volume of chamber: 730 ml

Dimensions of chamber: 0 90 mm Height 135 mm

ELECTROMETER SINGLE FILAMENT WITH **AUXILIARY ELECTRODES**

APPLICATION

(6360)

Can

The electrometer is designed for the absolute and calibration measurement of electric charges and voltages.


The single-filament system consists in the combination of a Pt-filament, stretched by a quartz spring. The microscope is equipped with an objective magnifying 10× and two exchangeable oculars permitting magnifying 8x and 25x. The microscope is provided with a 100-line graduation scale (-50-0--+50 scale grades).


ACCESSORIES


Exchangeable objective Wooden case

TECHNICAL DATA


Voltage sensitivity: 10-∞ V/scale grade for auxiliary electrodes voltage 35 V Capacity: 3 pF Insulation resistance > 1018 ohms Weight: 2,70 kg Dimensions: 240×190×220 mm

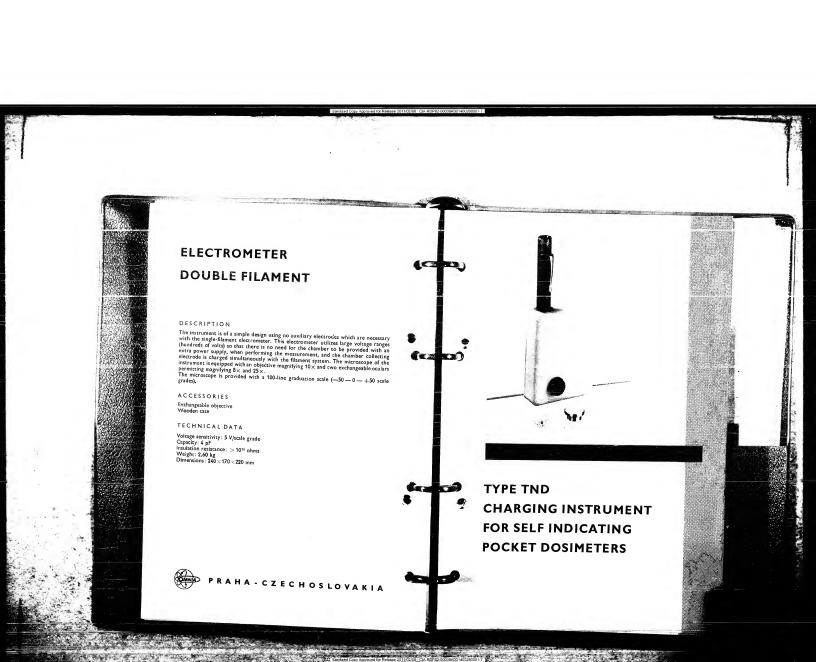


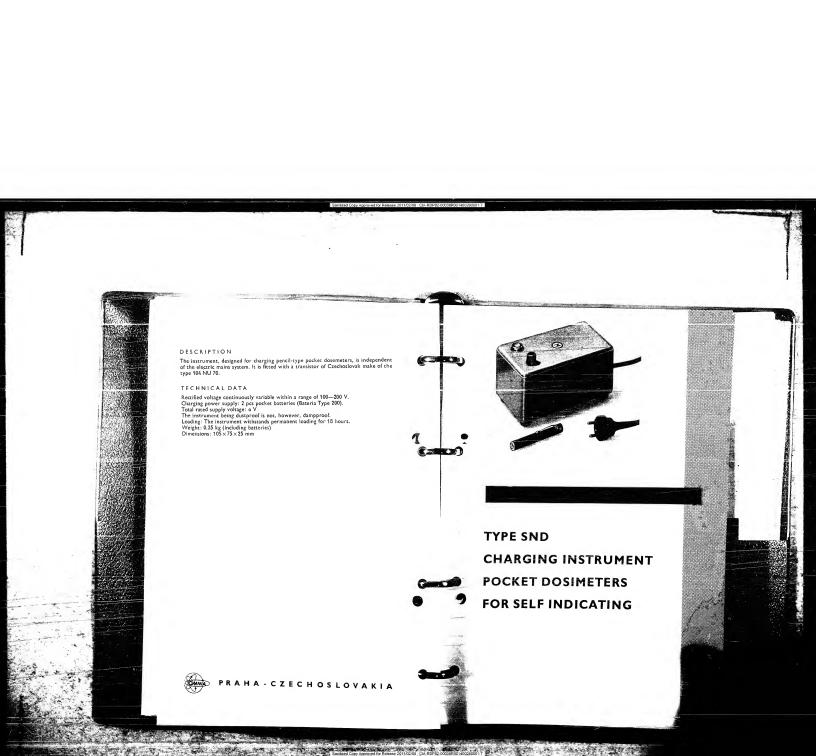


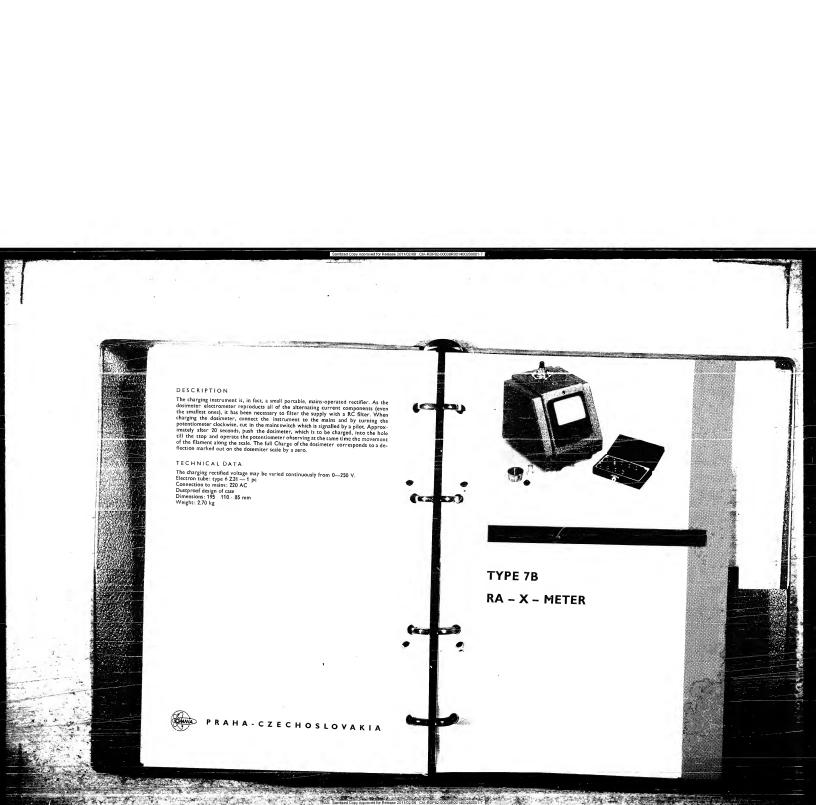



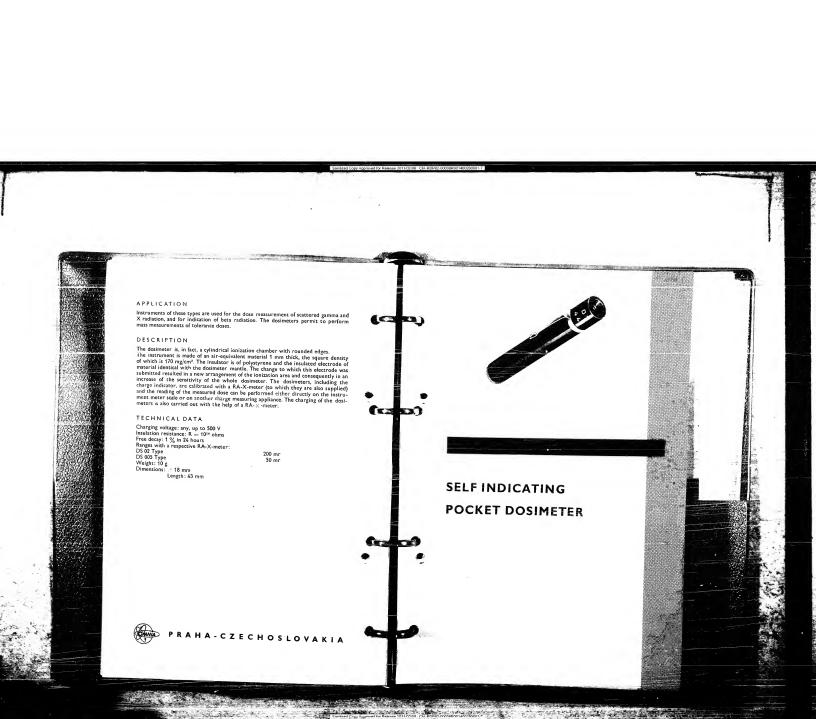

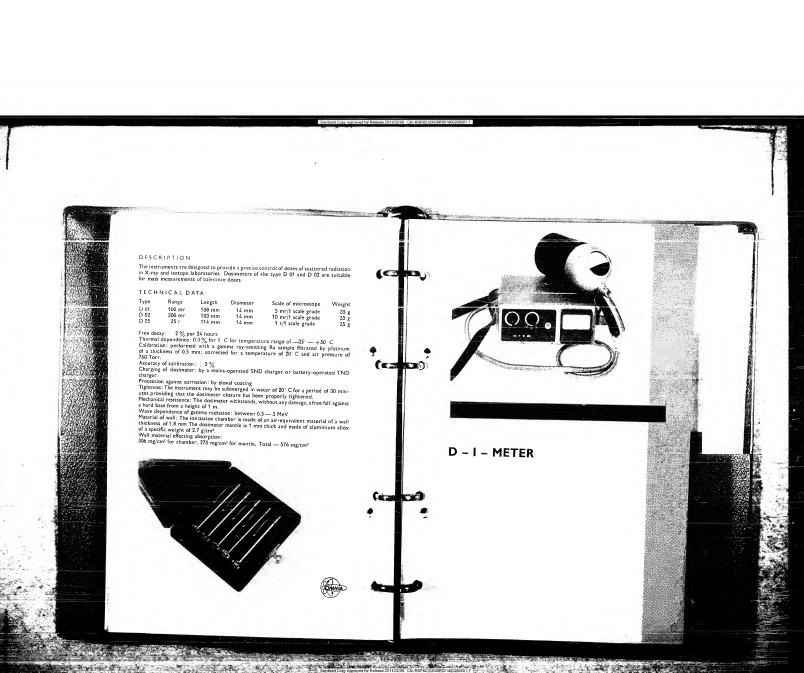

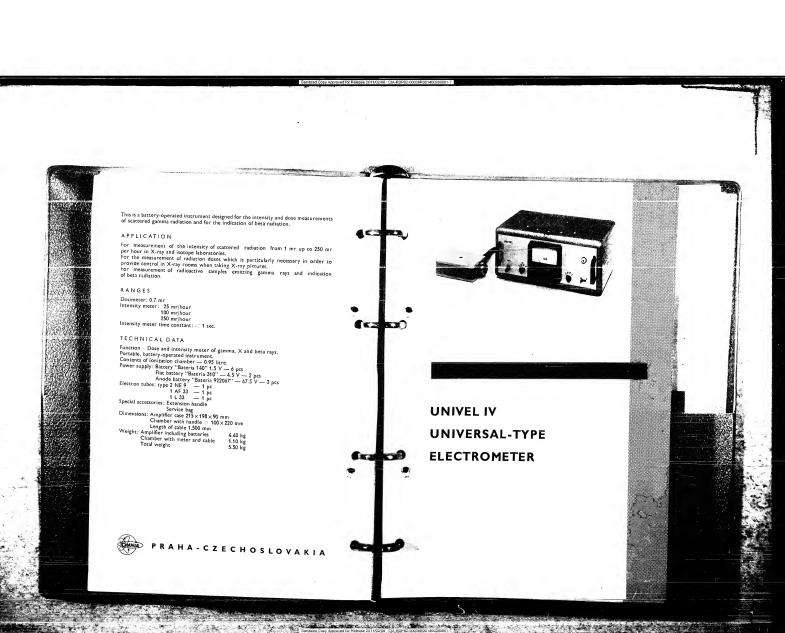



APPLICATION
The electrometer has been designed, in the first instance, for the industrial application of radioistopes, for measurements and automation. It is particularly suitable for the following purposes:

1. Measurement and checking of the thickness of materials and coatings, of the concentration of solutions and mixtures, and of the betwo of liquids.

2. Radiometric gauging of the pressure and flow speed of gases.

3. Measurement of electricity, and absorption analysis of gases.

4. However, the contemperature of the content of the con

The UNIVEL IV measuring instrument consists of a basic unit comprising an amplifier, meter and power supply. The second unit is formed by a probe with a pre-amplifier; a detector, suitable for the required kind of measurement, may be assembled with the probe. Thus, e.g. for the non-contacting thickness measurement by means of ionization chambers, for the measurement of electrostatic characteristics, exchangeable electrodes, are used.

TECHNICAL DATA

The "Univel IV" has been designed as a dynamic electrometer with a vibrating reed

The "Univel IV" has been designed as a dynamic electrometer with a vibrating reed capacitor.

Voltage sensitivity and other characteristics of the instrument: 25, 100, 150, 1,000 mV in steps and continuously variable between these steps. The highest sensitivity (without the feedback) is of 5 mV for full meter deflection. Find the restance is of the continuously variable by switching over from 10¹¹ to 10⁵ ohms. Current sensitivity: According to the power form the continuously variable steps and the continuously conti

MODEL N 4101 VESSEL **VESSEL FOR SOLID**

Radioactive waste in laboratories

Can

The vessel is designed to hold the solid radioactive waste of beta ray sources. When intended to hold gamma ray sources, it is provided with a lead insert. The container is provided with a notary removable cover to prevent whirling of the radioactive waste and is furnished with an internal bag of plastics. The radioactive waste is dispozed of including the bag.

TECHNICAL SPECIFICATION

Diameter of vessel 260 mm Height of vessel 300 mm Weight | Material | Leket of vessel - stainless steel 10 kg Other steel parts - provided with anticorrosion coat










PRAHA-CZECHOSLOVAKIA


A STATE OF THE SE

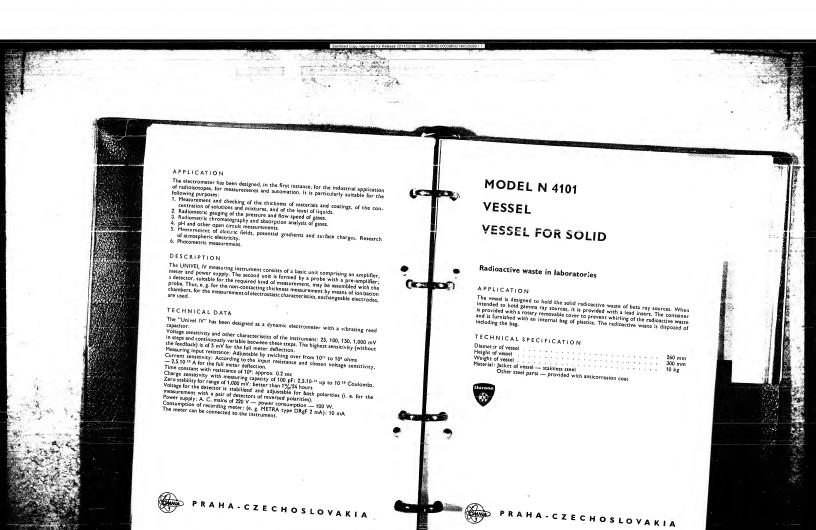

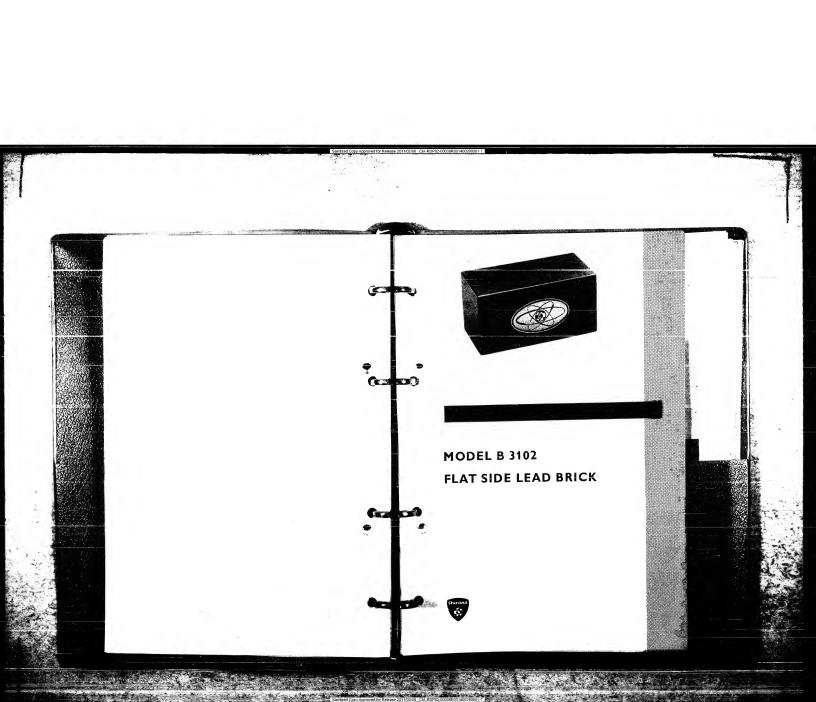



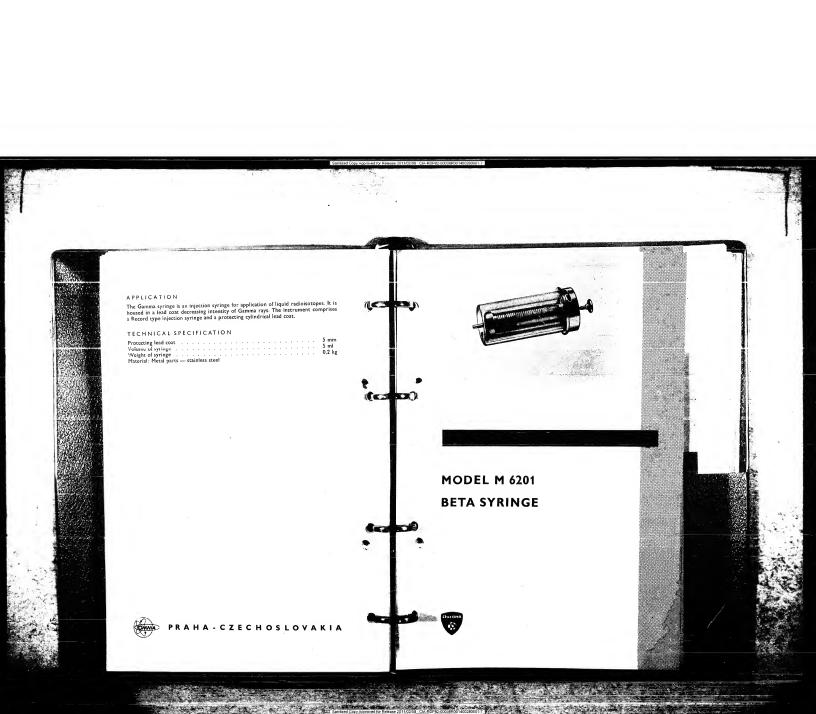

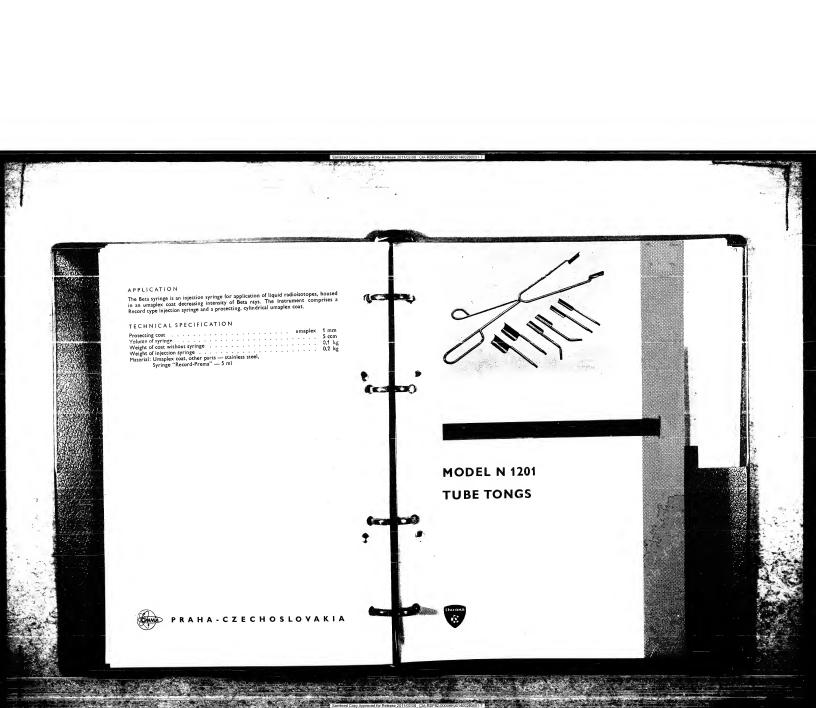



APPLICATION

The tube tongs are designed to grip and transport cylindrical objects containing radio-active material, or to take radioactive preparations off protecting and transport con-tainers. The tongs are supplied with a set of exchangeable adapters for various sizes of handled objects.

TECHNICAL SPECIFICATION

Length of tongs	500 mm
Weight of tongs	. 0,350 kg
Dimensions of gripping adapters	. Ø 40×50
Maximum height of handled objects	. 0,500 kg
Dimensions of handled objects	. ø 10-40
Material: Metal parts stainless steel	
Association: Set of exchangeable adapters	

MODEL N 1302 CRANKED EXTENSION TONGS

The extension tongs serve for gripping radioactive materials located behind a pro-tecting wall or shield. The end of the tongs is fitted with an exchangeable adapter with a bayonet joint and secured against releasing by a lock. The handle, lever and gripper are provided with rubber sleeves which can be replaced when contaminated.

TECHNICAL SPECIFICATION


1	of gripper																						700 mm
Length	of grippei of cranked		•				•	•	•		•												300 mm
Length	of cranked	part					•	•	•	•	•		٠			•		•	•				0.5 kg
Actual	of cranked weight .						٠			٠	٠	٠	٠		٠	٠	•		•	٠			E0 E0
Haxiiii	I Maral -		 	int	_	-0	nto	ct	w	irl	'n	ad	iο	acı	tiv	e i	ma	tte	ers	-	- 5	stai	inless steel
Materia																							








R A H A - C Z E C H O S L O V A K I A


PRAHA-CZECHOSLOVAKIA

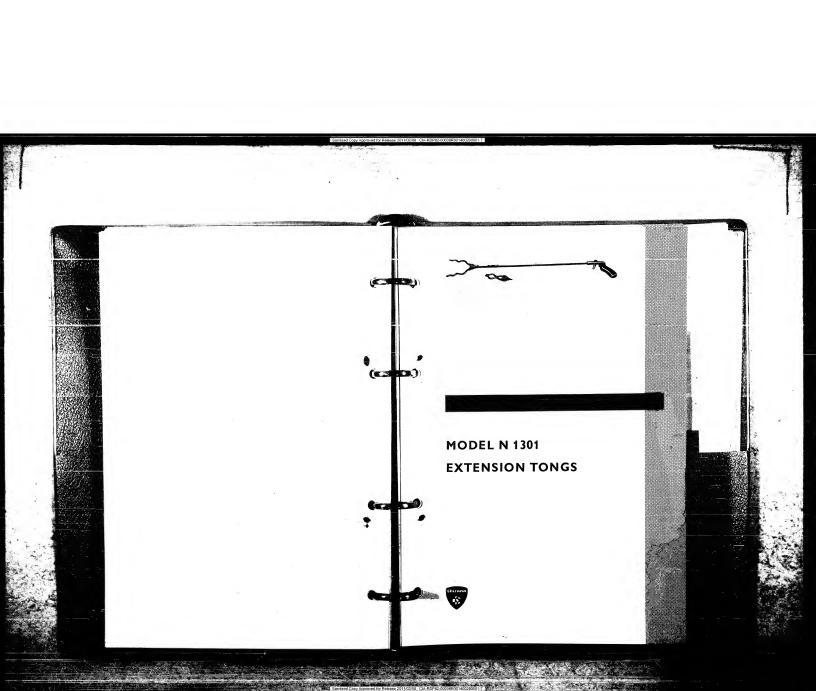


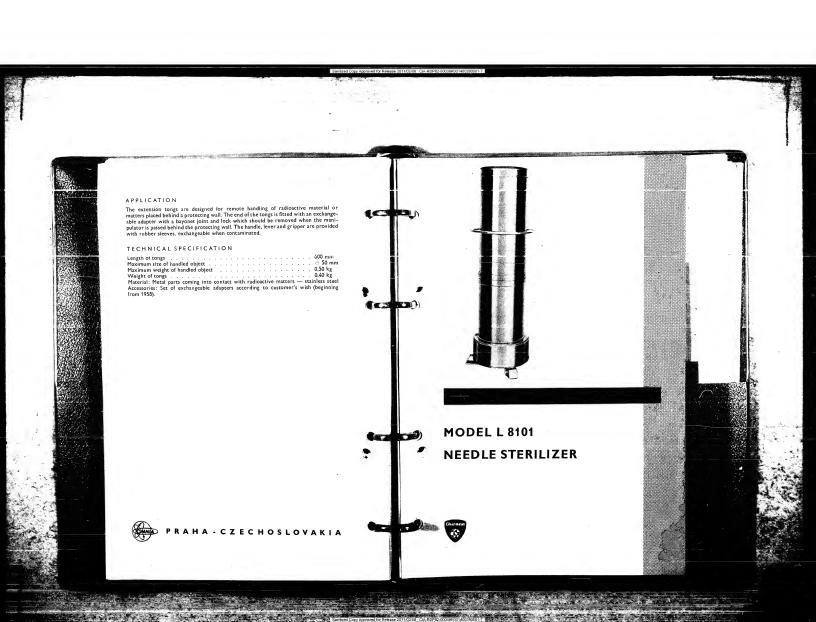


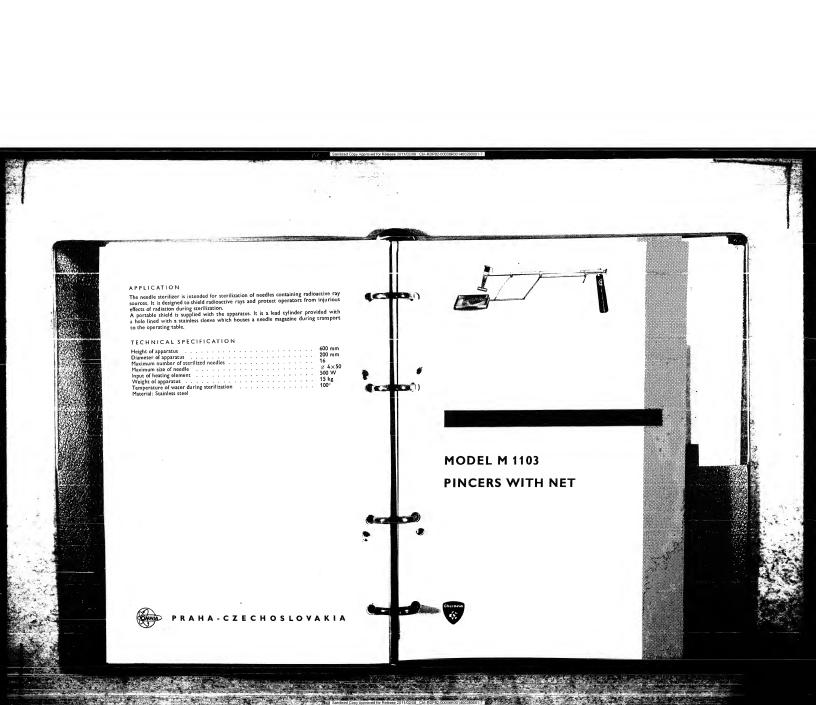


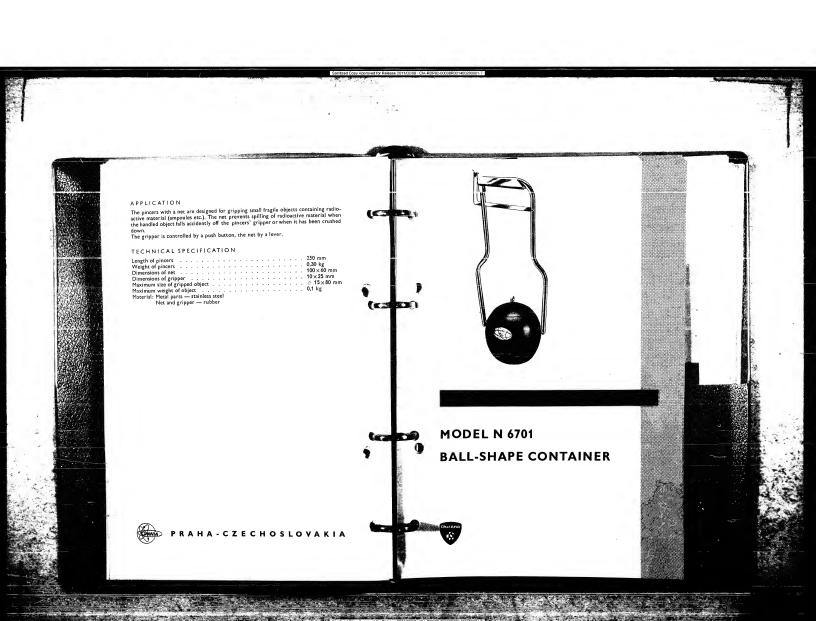


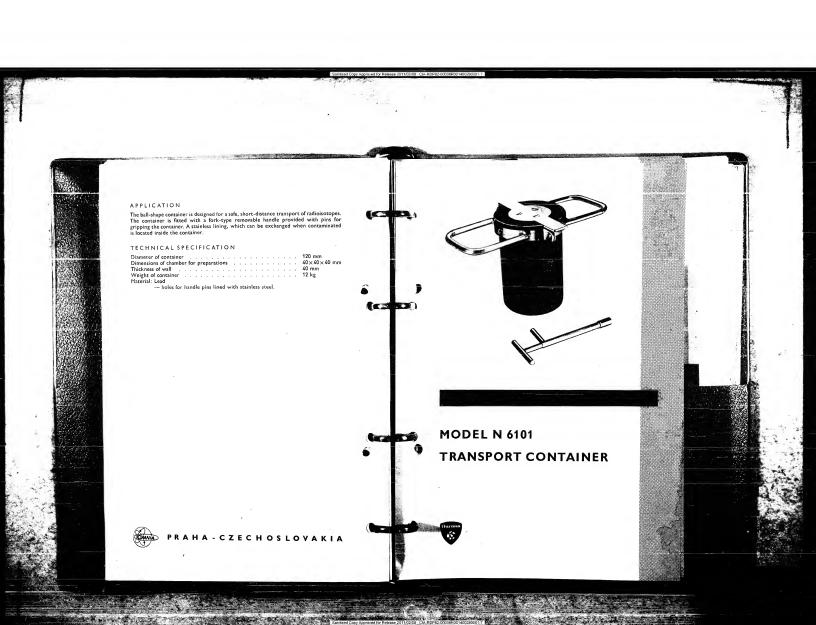


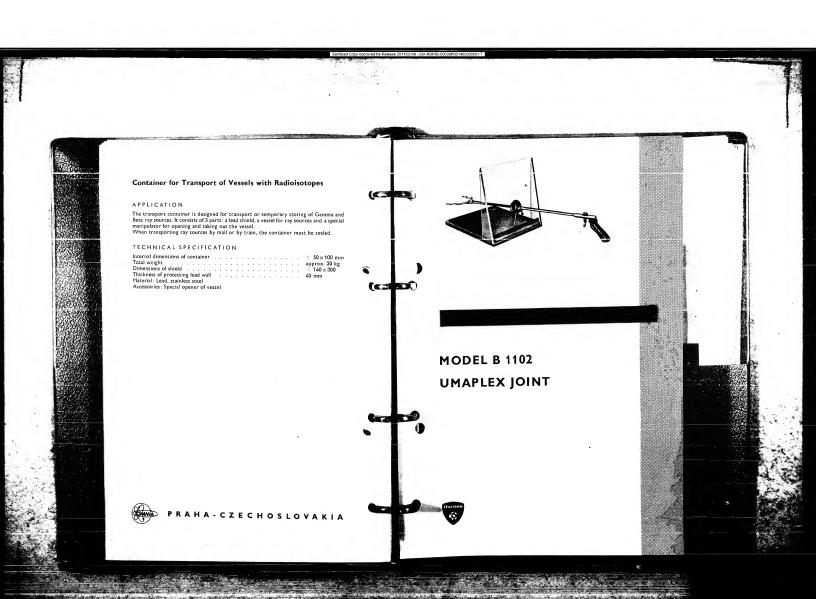


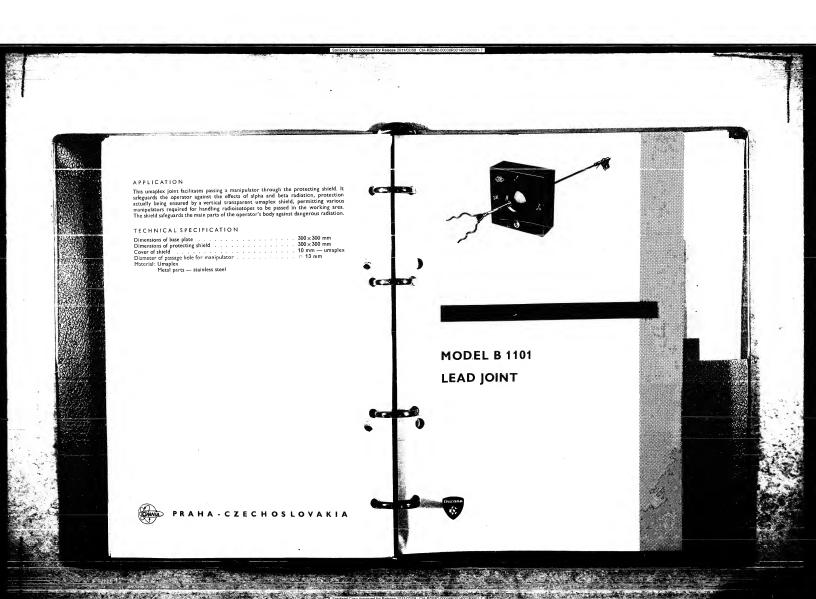


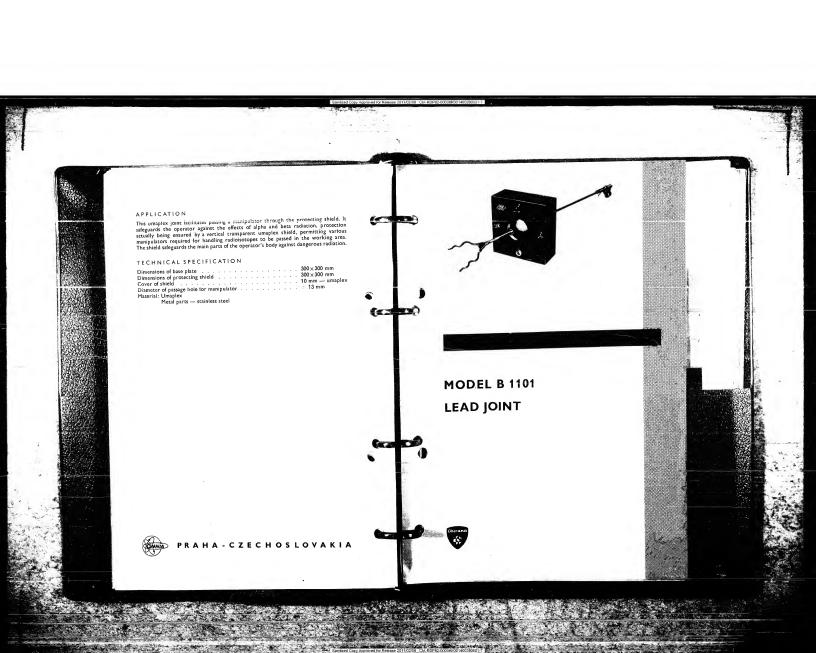


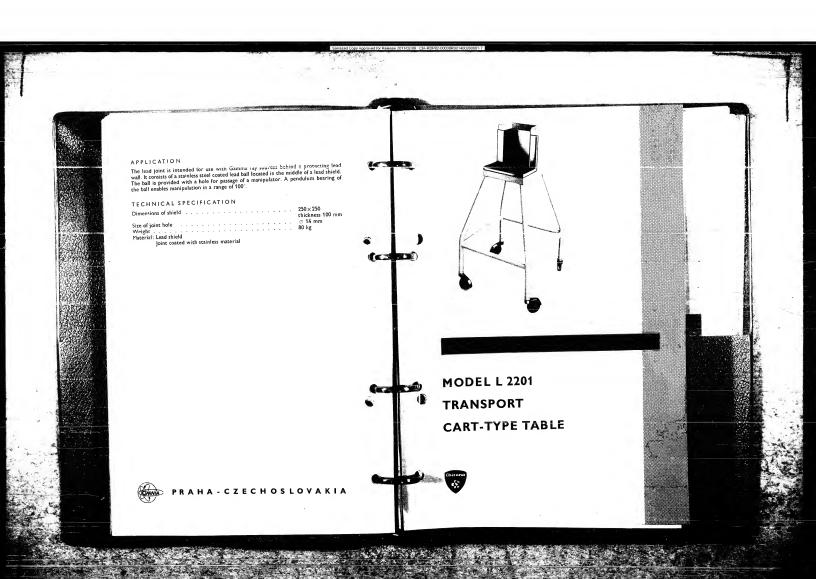


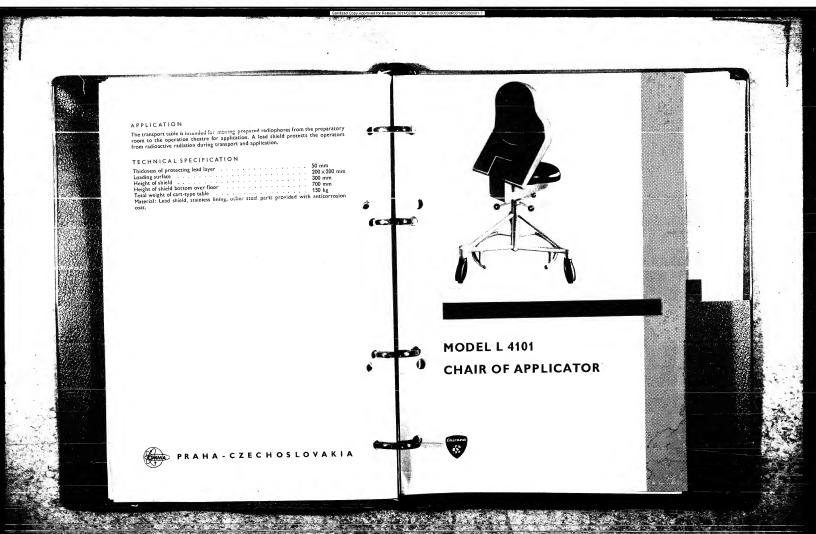


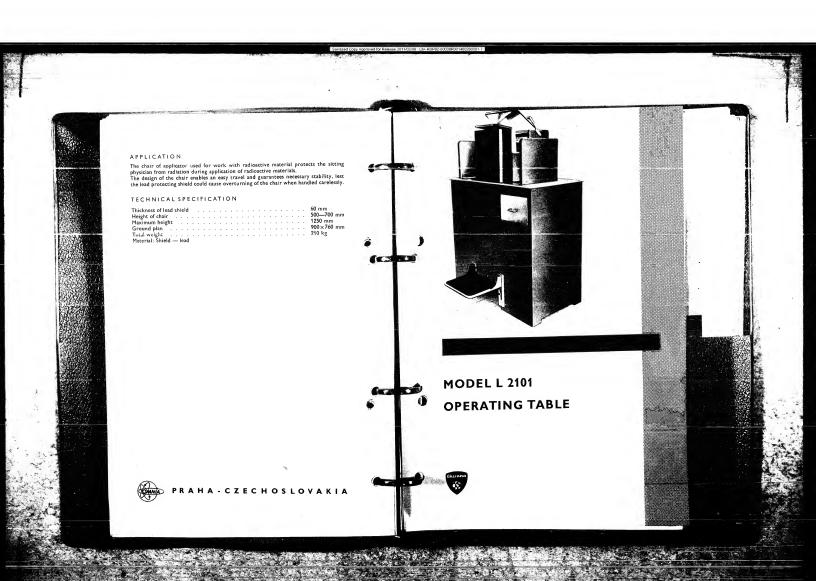

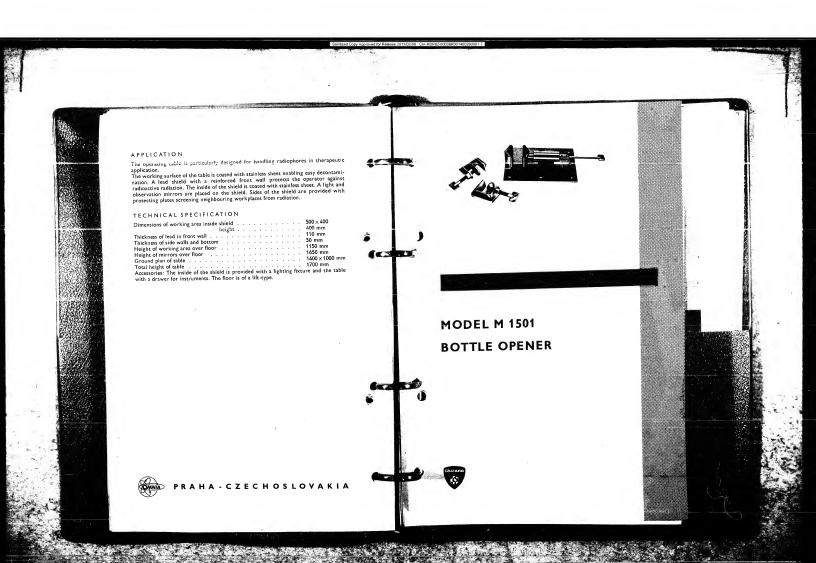

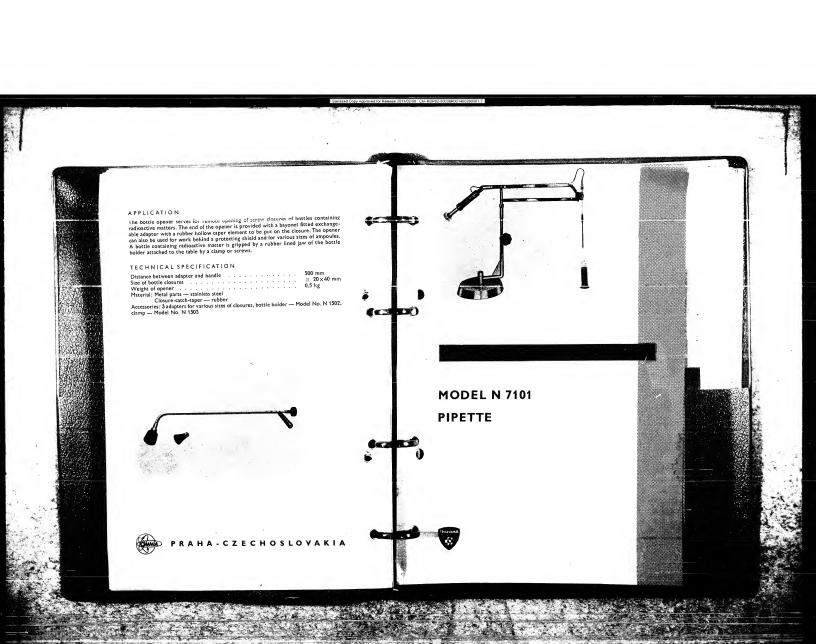

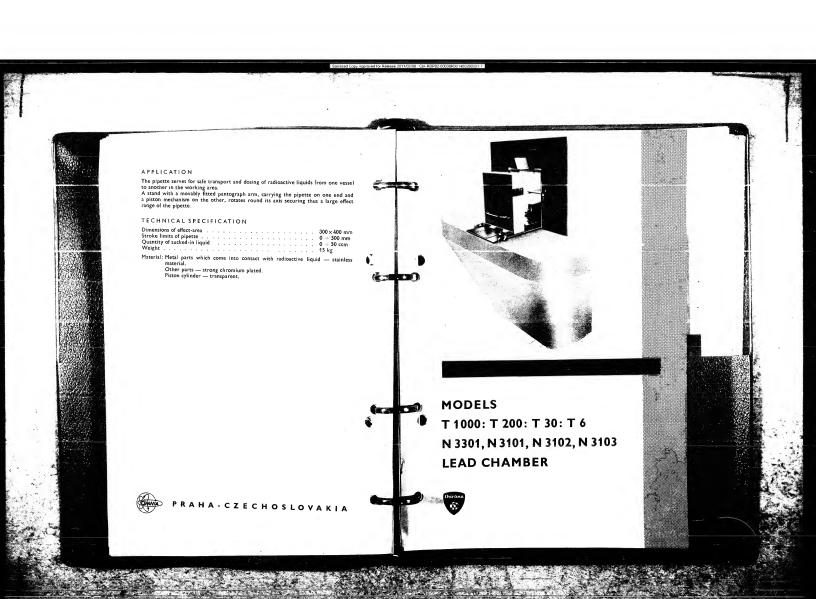

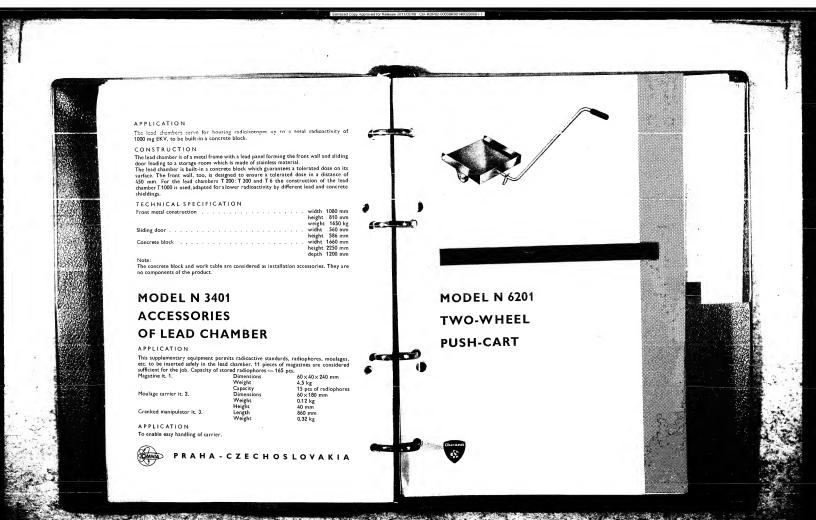

(

APPELCATION

Ihs push-cars is designed for providing transport of lead chambers and vessels containing radioisotopes in laboratories. It is fitted with a long handling bar enabling the operator to be at a sufficient distance from the radioactive source during transport; such an arrangement affords protection, however, against radiation of low intensity. When transporting high-intensity ray sources it is possible to insert a lead wall between the ray source and the handling bar.

TECHNICAL SPECIFICATION

Dimensions of surface																		400 × 400 mm
Loading capacity																		
Weight	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠		•	٠	٠	٠			10 kg

MODEL L 3101 SECTIONAL DIGESTER

APPLICATION

APPLICATION

The digenter is an essential facility in laboratories where radioactive materials are handled, it is provided with a transparent front wall of a slide-out type. Mirrors can be fitted inside the digester to enable manipulation with radioisotopes also behind a lead brick protective wall which can be set up on the working table of the digester acquired. A fluorescent lamp is provided in the ceiling. On the bottom of the digester there is a discharge with a filter. The front lower wall is equipped with a fitting for regulation of water, gas, vacuum or compressed air. Every digester must be connected to an independent exhaustion system to prevent contamination of the laboratory.

TECHNICAL SPECIFICATION








PRAHA - CZECHOSLOVAKIA





PRAHA-CZECHOSLOVAKIA

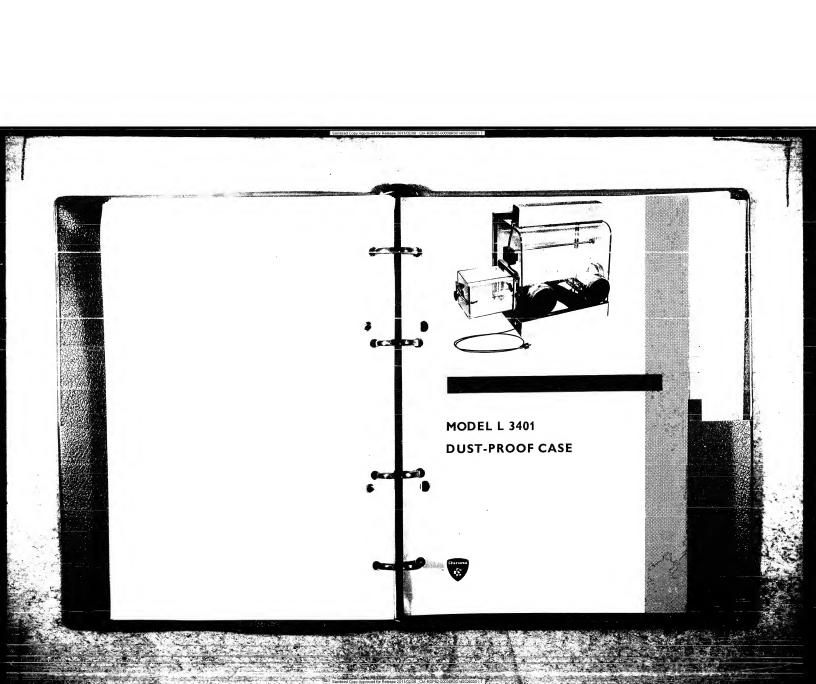


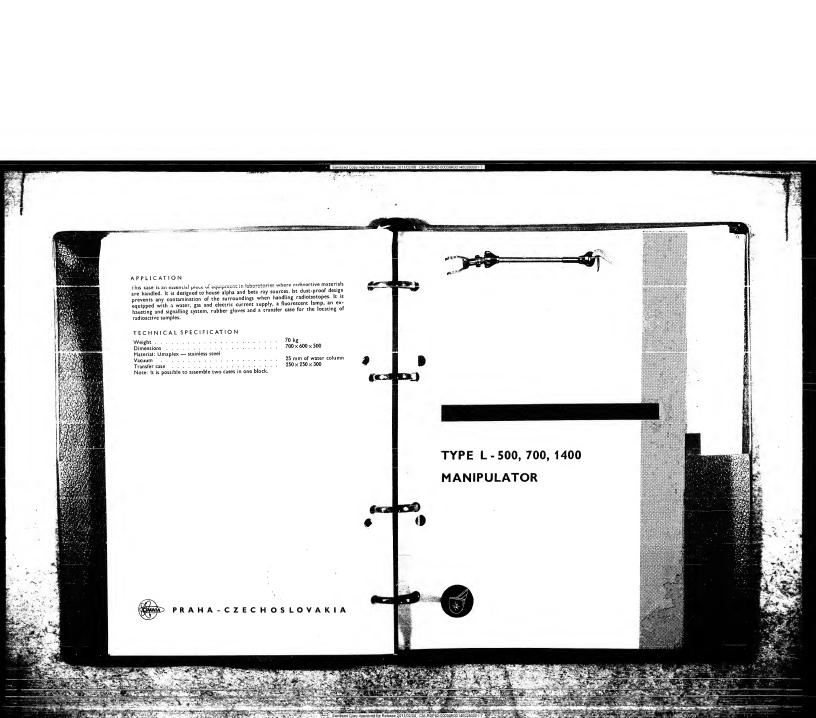

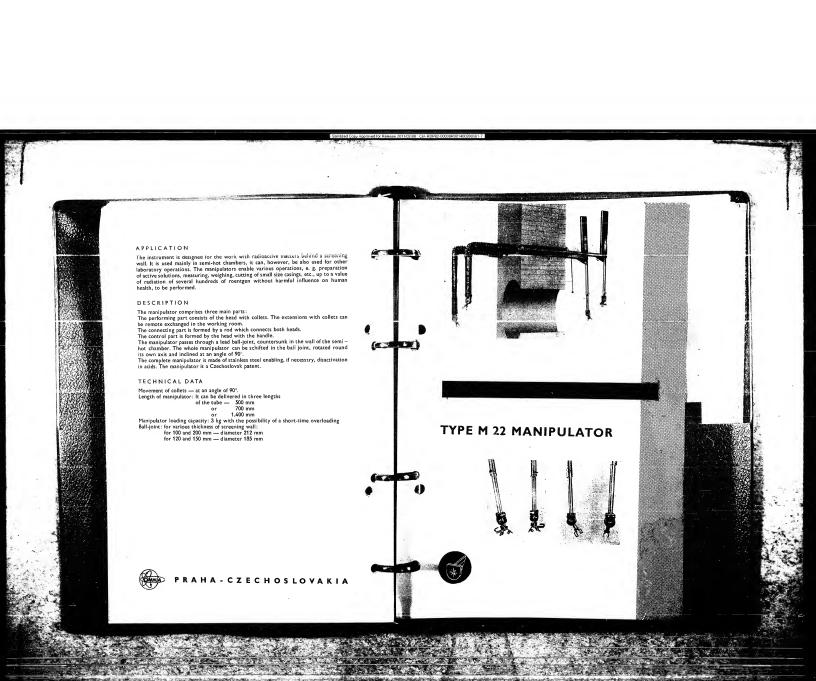

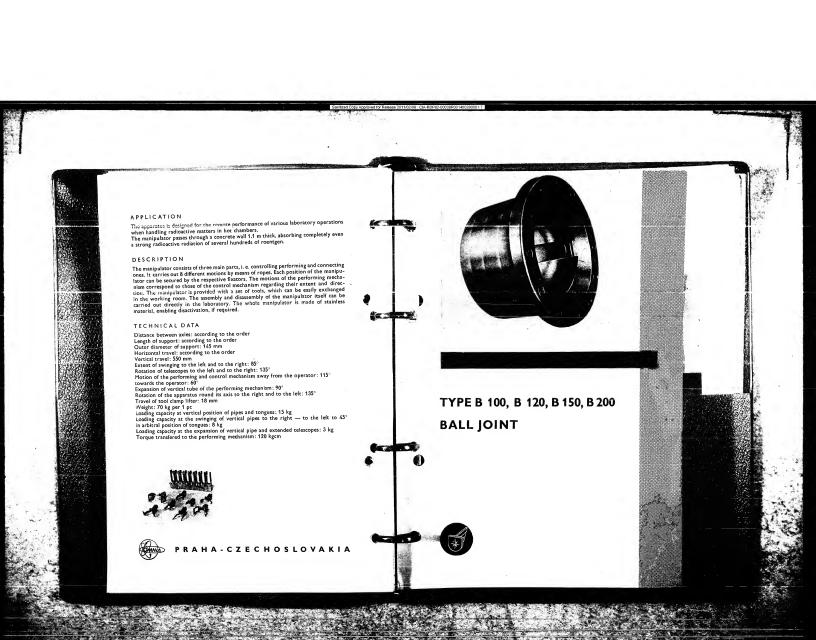

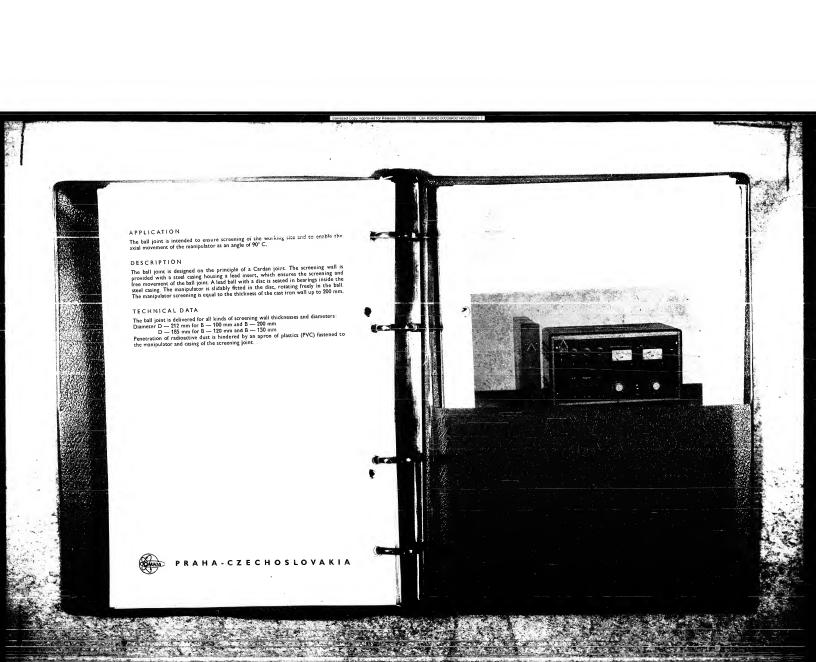

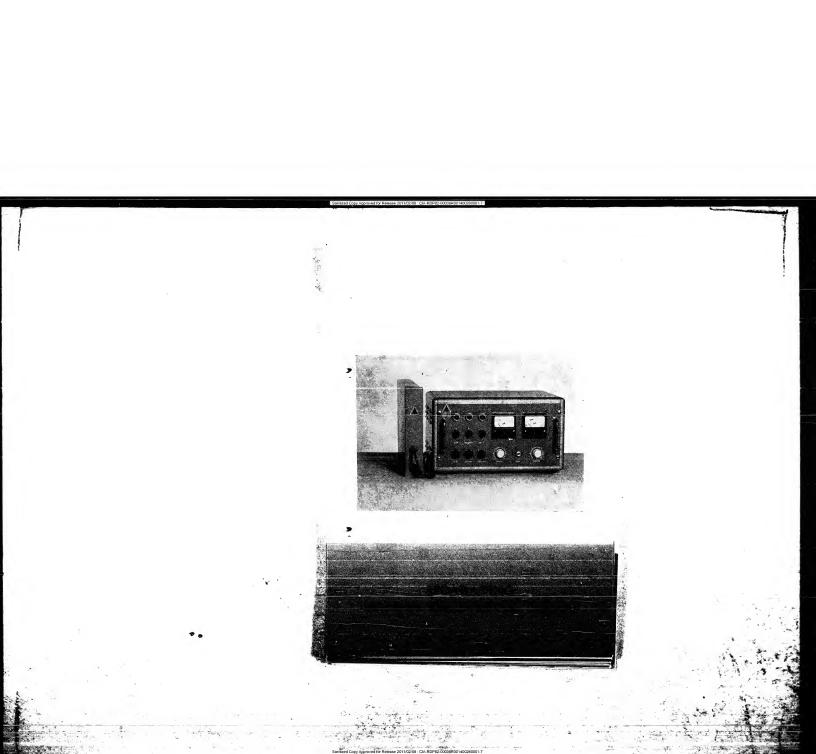

The apparatus is used for the radiometric seperation of active materials on a conveyor where the belt is batch-fed with ore. It may also be used for automation and defectoscopy purposes.

Description:

It is designed as a mains-fed apparatus. The device consists of a sound, \boldsymbol{a} $\,$ photo-relay and \boldsymbol{a} $\,$ box in which the electronical elements are situated. As sound the type $\ensuremath{\text{FPA}} = 02$ with a photomultiplier and a suitable scintillator, or type TPA $\,-\,$ 02 with Geiger-Müller counting tubes may be used. The sound is situated under the conveyor belt and connected to the box by

Technical data:

Sensitivity: 7 mikro-r/hour the belt speed being 0,5 m/sec.

Metering range: 7 mikro-r/hour till 130 mikro-r/hour 60 mikro-r/hour till 1300 mikro-r/hour

2 pcs Nal (TL) with photomultipliers ${\it FEU}-19$ Radiation detectors:

220 V at fluctuation 150 to 250 V Feeding:

Input: Weight: box: 10 kg sound: 28,5 kg


Dimensions:

box: - 400×260×210 mm sound - FPA - 02 - 300×190×190 mm

Pulse shape normalizator

PRAHA - CZECHOSLOVAKIA

Printed in Czechoslovakia (Stráž 306 Kovářská 1960)

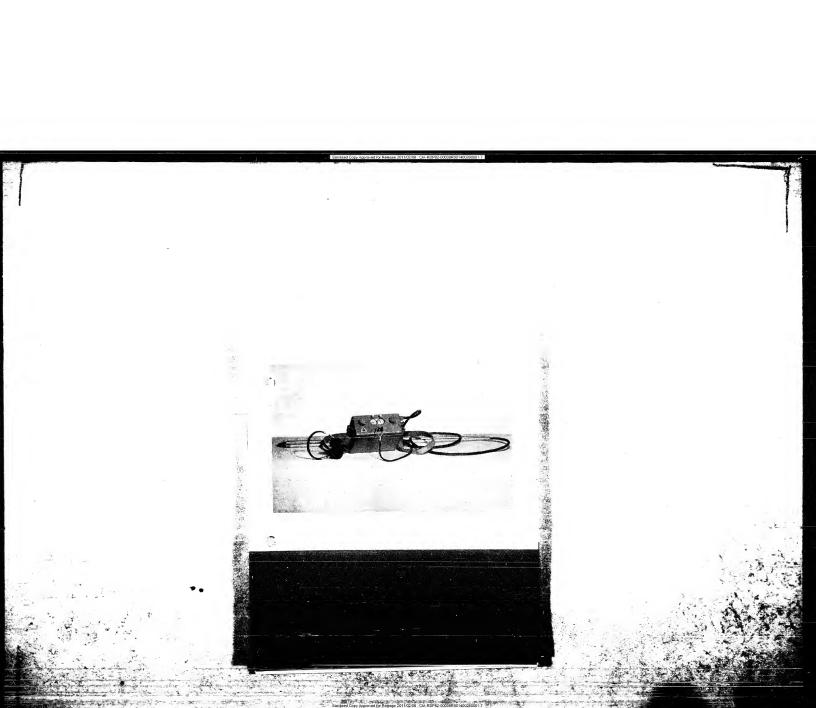

The apparatus is designed as a portable, battery-fed, fully transistorized \mbox{drill} holes with minimal diameter 20 mm and depth 2 meters. The cable length may be chosen arbitrarily in order to facilitate practical application of the apparatus in various branches e. g. in agronomy, building construction, etc.

Description:

The apparatus is designed as portable, battery-fed, fully transistorized device. It consists of the apparatus proper metal-box containing power $% \left(1\right) =\left(1\right) \left(1\right) \left($ sources, the electromechanical counter of impulses and other control clements. The sound in form of a duralumin pipe dia. 18 mm is fitted with a counting tube VS - 8. For horizontal measuring 2 sections of duralumin pipes are delivered, each 1 meter long. Both sections may be coupled together. In this manner reliable introduction of the sound is secured.

Technical data:

0-500 micro-r/hour (can be expanded by chan ging counting tube) Metering range:

Sensitivity: 6 micro-r/hour, the backgroung counts being 10 micro-r/hour

Exposure time: 60 sec. Evaluation:

electromechanical counter Radiation detector: GM - counting tube VS - 8 Working period: 150 hours without interruption

Feeding: 4 cells 2 SL - 9 per 1,5 V, 9 A/hour Weight: 4 kg, inclusive 20 m cable and the sound Dimensions: 220×175×100 mm

Gamma-radiation detector GM-counting tube

Electromechanical meter

Amplifier

Blocking

Switch circuit

Tranzistor

Description Type Dimensions (mm)

Breadth Height Depth and Core-drilling

PRAHA - CZECHOSLOVAKIA

Printed in Czechoslovakia (Stráž 306 Kovářská 1960)



Sarritzed Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-7

Application:

The apparatus serves for determining of the degree of hands and suits contamination which may be caused through manipulation with unprotected radiators of alpha-particles. It is being used for dosimetric inspection of personnel, leaving the working site. It may be used for personal inspection in laboratories and for checking of the degree of working suits contamination after they have been washed.

Description:

The apparatus is designed as a net-fed device, with detached sound. The apparatus is completed with following accessories: stand with the sound, switch box and hood which also serves simultaneously as an etalon holder.

The instrument is equipped with a operating device for starting and for the adjustment of the time relay, with a optical signallisation for measuring and for the end of measuring and with a checking position for duplicate measuring.

The sound consists of two photomultipliers FEU - 19M and two ZnS crystals with large surface, equipped with aluminium foils guarding them against illumination and with metal grid. The following up the contamination is performed by means of three luminous decades with adjustable measuring period.

Technicai data:

Distinctive power: 40 microsec.,
Recording capacity: 1000 impulses

Time preselection: 3, 5, 10, 15, 20, 30, 40, 45, 60, 120 sec.

Measuring efficiency: 8-25%

Luminophore: $2 \times 150 \text{ cm}^2 \text{ ZnS/Ag}$ Feeding. from net 220 V $\pm 5 \%$

Power consumption: 170 Wat 220 V

Admissible ambient temperature:

— 10 + 35 degrees Centigrade

Weights: apparatus SMZ-01 - 14,8 kg, sound FDO-01 - 10,2 kg

 $\begin{array}{ll} \text{Dimensions} & \text{apparatus: } 530 \times 270 \times 240 \text{ mm} \\ \text{of the instrument:} & \text{sound: } 310 \times 310 \times 210 \text{ mm} \end{array}$

Scintillation detector

3

relay

Power source


Description Type Dimensions (mm) Weight (kg)

Breadth Height Depth Apparatus Probe

Alphacontaminationmeter SMZ - 01 530 220 240 1.8.8. 10.3

PRAHA - CZECHOSLOVAKIA

Prindet in Czechoslovakia (Stráž 30.) Kovářská 1951)

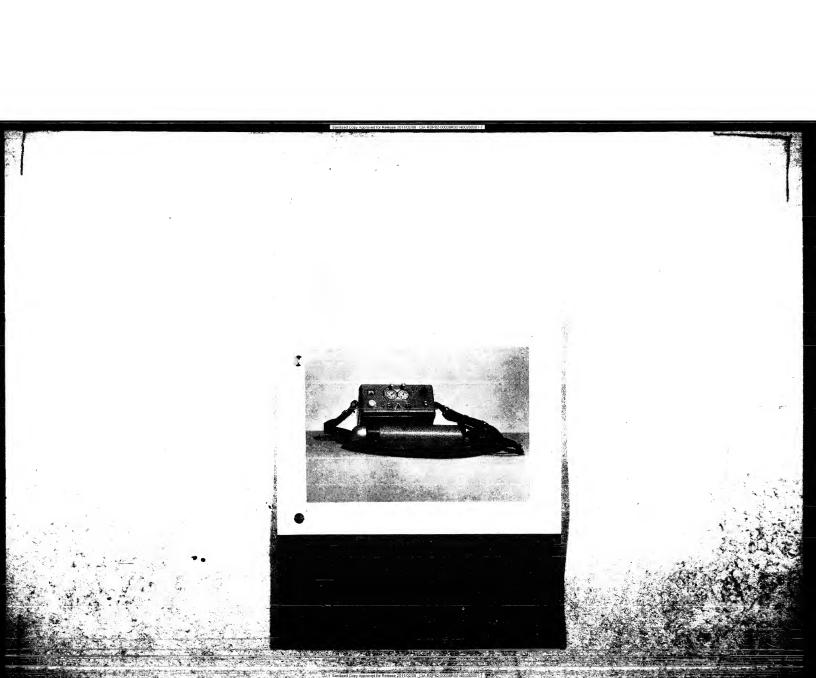

The apparatus is intended for the metering of Rn and of its danghter products directly on the working site. It may also be used for establishing the concentration of other radioactive gasses and of their \cdot danghter products. It is especially suitable for metering in cases where quick evaluation is needed.

Description:

The apparatus is designed as a portable, fully transistorised device, with detached sound and battery feeding. The power sources and the electronical equipment are situated in the apparatus-box. In the duralumin-sheet made sound is arranged the transformer and the photomultiplier. On the sound end is mouted the holder with the Al-chamber whose interior is powdered with luminophore ZnS. The chamber may be evacuated for interferometering purposes. The take-off may be effected by means of circulation, vacuum and other methods.

Technical data:

Metering range:

10-11 c/1-10-7 c/1

Metering period:

Evaluation:

by means of the electromechanical counter SBIM/50

Alpha-radiation detector: Zn S/Ag/ in the scintillation chamber, photomultiplier FEU $-\ 19$

Admissible ambient temperature:

- 10 to + 40 degrees Centigrade

Feeding: Working period:

4 cells 2 SL9, 1 battery GB-48 70 hours without interruption

Metering precision: <u>±</u> 10 % Effectivity:

27 - 60 %

Weight.

total 5,4 kg

Dimensions:

260×195×110 mm

Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001

BLOCK DIAGRAM

Scintillation detector Elektromechanical meter

Amplifier Blocking Switch circuit

Tranzisto

PAHA CZECHOSTOVANA

Prindet in Czechoslovakia (Stráž 30s Kovářská 1960)

Sanitized Copy Approved for Release 2011/02/08 : CIA-RDP82-00038R001400280001



The apparatus is inteded for quick metering of beta and gamma radiation in mines and terrain, It facilates the evaluation of radioactive materials during the measuring of test drill holes for blasting. It is suitable for determining of sections with raised activity and for checking of ore working places. Being a general purpose apparatus with high sensitivity, it is suitable for application wherever the necessity of metering low- and medium intensities of beta and gamma radiation arises.

Description:

The apparatus is designed as a portable, fully transistorized, batteryfed device. It is enclosed in a watertight sheet box. The sound, having the form of a tubular case is detached and made of duralumin. It is interconnected with the apparatus by means of a three-cored, rubber coated cable through a connector, Various sounds, according to the purpose and kind of metering, may be used with the apparatus.

Technical data:

Metering range:

1. 0-200 micro-r/hour 2. 0-2,000 micro-r/hour 3. 0-20,000 micro-r/hour

Precision of metering

± 5 to +50 degrees Centigrade less than 15 sec.

Exposure period: Admissible ambient temperature:

+ 10 % under normal conditions

for beta and gamma STS - 6 for gamma STS - 8

Radiation detector:

from 4 mercury cells MR - 19 per 1,25 V, 2 Ah

Working period:

Feeding:

120-150 hours with one set of cells

Weight (the sound included):

2,80 kg

Dimensions:

175×160×80 mm

Detector GM counting tube


Amplifier

Normalizator and integrator

Tranzistor

PRAHA - CZECHOSLOVAKIA

Prindet in Czechoslovakia (Stráž 305 Kovárská 196

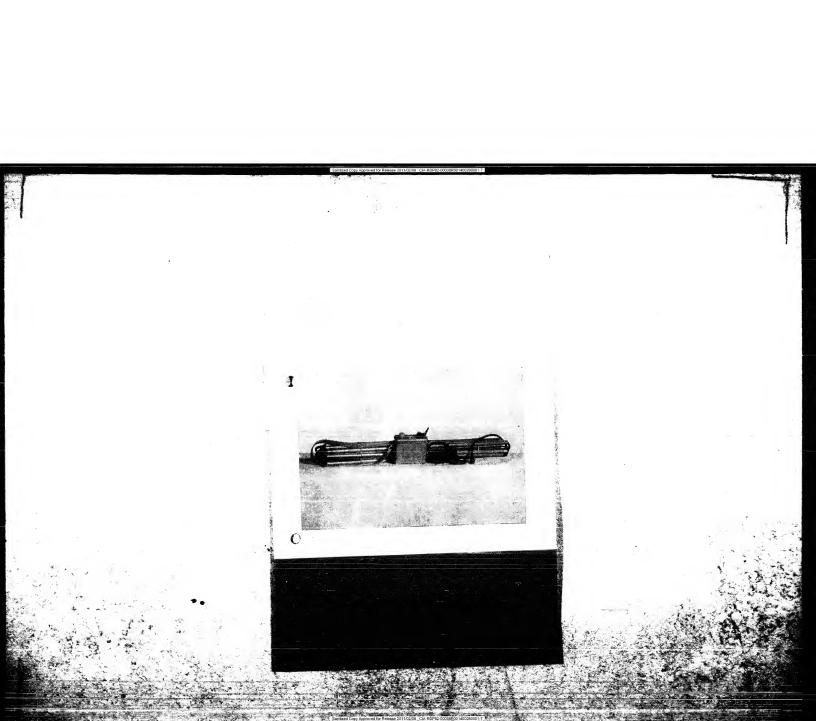

The instrument is designed for measuring bore holes at selective method of mining uranium ores. Further on it serves for measuring side bore holes to the depth of 10 m. The instrument can be also used for geological exploration.

Description:

It is designed as a battery type, portable and with transistors fully equipped instrument. The instrument is built in a steel sheet waterproof box. The sound has the shape of a cylindrical, duraluminium bush. It is interconnected with the instrument itself by means of $10\ m$ long logging cable. The cable can be provided with duraluminium tubes 1 m long which can be mutually coupled for the length needed; this enables an easy introduction of the sound in horizontal or vertical direction. The cable is equipped with a connector enabling or vertical direction. The cause is equipped in the cause also different types of sounds to this instrument with respect to the required kind of measurement.

Technical data:

Feeding:

Measuring accuracy $~\pm~$ 10 ~%~ under normal conditions

Exposure time less than 15 sec.

Admissible ambient temperature + 5 -+ 50° C

Detector of radiation: counting tube: for beta - gama STS-6 for gama STS-8

4 Mercury cells MR 19 2 Ah Working period: 120-150 hrs with 1 set of cells

Weight measuring instrument: 1,52 kg sound with 10 m cable: 5,30 kg

Dimensions of the instrument 175×160×80 mm

Gamma-radiation detector GM counting tube

Amplifier

Normalizator and

1

Tranzisto

 Description
 Type
 Dimensions (mm)
 Weight

 Breadth
 Height
 Depth
 Apparatus

 Logging
 KFR - 03
 1170
 160
 80
 1,5

PRAHA - CZECHOSLOVAKIA

Printed in Czechoslovakia (Stráž 306 Kovářská 1960)



This apparatus is intended for the metering of U-contents in fillings, for the evalution of the ore quality in complexes of blocks and ore lenticles on the walls of mine works and for primary ore separation in the wall face of mine works. It is possible to use it in all cases where the influence of the surrounding gamma-radiation must be eliminated and where the gamma radiation coming from a certain direction must be metered.

Description:

The apparatus is a portable, fully transistorized device with detached sound. In the control desk is situated the feeding source with ampliphiers, blocking oscillators and integrating differential circuit. Connection to the sound is effected by means of a fiwe-cored cable.

The sound consists of a lead screening hood made of three parts. It is equipped with 4+1 counting tubes STS - 5. The group of 4 tubes forms the metering channel, one tube, partially screened, forms the compensation channel.

Technical data:

Metering range: 1. 0 - 150 micro-r/hour 2. 0 - 800 micro-r/hour 3. 0 - 3000 micro-r/hour 3. 0 -

Compensation of the background counts up to: 3,000 micro-r/hour

Fluctuation: ± 10%

Admissible ambient - 30 to + 40 degrees Centigrade

Feeding: 4 dry cells 2 SL - 9

Radiation detector: STS — 5 - low voltage counting tube

Working period: 150 - 200 hours


Weight of the apparatus with sound: 8,4 kg

Dimensions: 260×195×110 mm

BLOCK DIAGRAM Blocking oscillator I. 1 A STATE OF THE STA

PRAHA - CZECHOSLOVAKIA

rinted in Czechoslovakia (Stráž 306 Kovářská 1960)

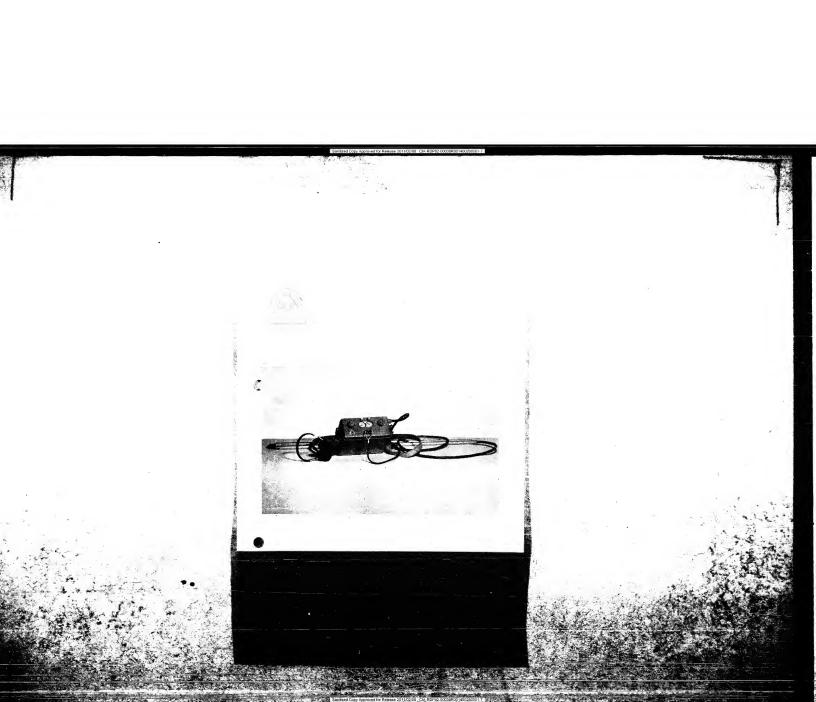

The apparatus is designed as a portable, battery-fed, fully transistorized $\mbox{drill holes}$ with minimal diameter 20 mm and depth 2 meters. The cable length may be chosen arbitrarily in order to facilitate practical application of the apparatus in various branches e. g. in agronomy, building construction, etc.

Description:

The apparatus is designed as portable, battery-fed, fully transistorized $% \left(1\right) =\left(1\right) \left(1\right) \left$ device. It consists of the apparatus proper metal-box containing power sources, the electromechanical counter of impulses and other control elements. The sound in form of a duralumin pipe dia. 18 mm is fitted with a counting tube VS - 8. For horizontal measuring 2 sections of duralumin pipes are delivered, each 1 meter long. Both sections may be coupled together. In this manner reliable introduction of the sound is secured.

Technical data:

 $0\!-\!500$ micro-r/hour (can be expanded by chan ging counting tube) Metering range:

Sensitivity: $6\ \text{micro-r/hour},\ \text{the backgroung counts being}$ $10\ \text{micro-r/hour}$

Exposure time:

Evaluation: electromechanical counter

Radiation detector: GM - counting tube VS - 8 Working period: 150 hours without interruption

Feeding: 4 cells 2 SL - 9 per 1,5 V, 9 A/hour

Weight: 4 kg, inclusive 20 m cable and the sound

Dimensions. 220×175×100 mm

Gamma-radiation detector
GM-counting tube
Electron

Blocking


Tranzistor

Description Type Dimensions (nm) Weight (kg)

Breadth Height Depth Apparatus Probe

PRAHA - CZECHOSLOVAKIA

Printed in Czechoslovakia (Stráž 306 Kovářská 1960)

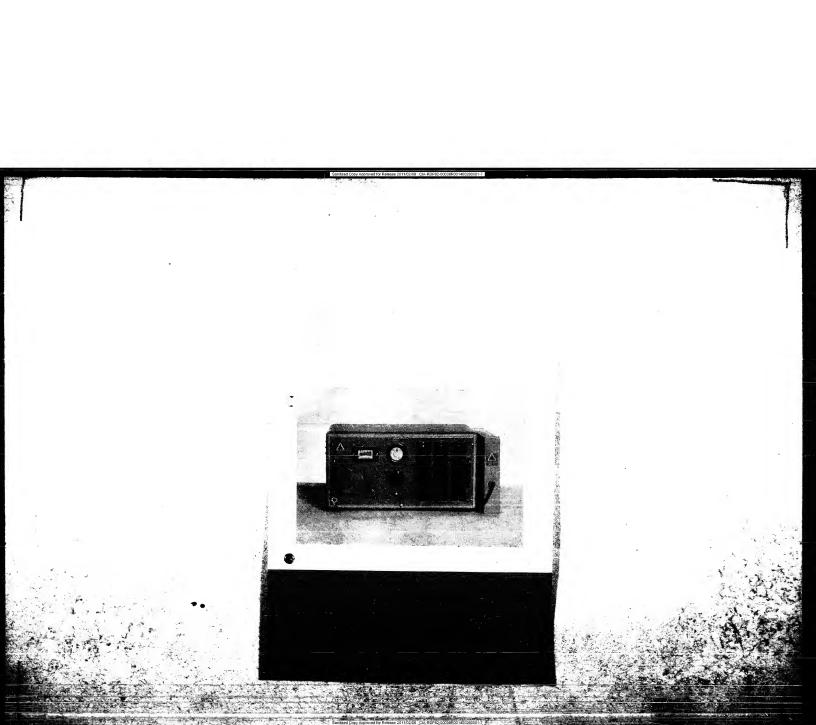

The apparatus is intended for continuous quantity metering of radioactive materials transported by means of belt conveyors. It facilitates the establishing of material conditions in the ore preparation plants. The device may also be applied in the sphere of automation and in various branches in which radioisotopes are used.

Description:

The apparatus is designed as a mains-fed device with panel lay-out and ${\bf r}$ dctached sound for gamma-radiation. The sound is fitted with Geiger-Müller counting tubes. Both parts are interconnected by means of a cable whose maximal length is 50 meters.

The metering panel proper is equipped with an iron-sheet box, spray painted with baked enamel. The sound is also enclosed in an iron sheet

Technical data:

Resolving power: 100 micro-r/hour

Recording of impulses: 3 decadie stages and an electromechanical counting device with electric neutralization

Recording capacity: 1.107 impulses

Feeding: from mains 220 V + 5 % - 30 % Input:

130 W at 220 V ferroresonance- and glow discharge tube Stabilization:

Weight: apparatus - 15,5 kg

Dimensions: apparatus RAR - 04 - 520 $\!\times\!$ 270 $\!\times\!$ 330 mm sound TPA - 04 - 350 $\!\times\!$ 250 $\!\times\!$ 55 mm

Gamma-radiation detector GM-counting tube 8 ×

Summing clock Electromechanics meter

Cathode follower


Power source Motor

Description Type Dimensions (mm) Weight (kg)
Breadth Height Depth Apparatus Probe
Continuous gammaradiometer RAR - 04 520 270 330 15,5 4.2

PRAHA - CZECHOSLOVAKIA

Printed in Czechoslovakia (Stráž 306 Kovářská 1960)

Sarritzed Copy Approved for Release 2011/02/08: CIA-RDP82-00038R00140028000

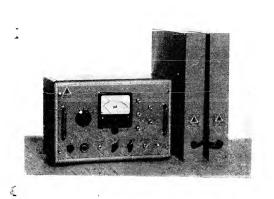

PADIOMETER PER of

This radiometer is a general purpose apparatus designed for the metering of extracted ore bearing materials directly in trucks (with cassetes TVO-1M), for metering of ore in cases, (cassetes $\ensuremath{\text{TBE}}\ -\ \ \ \mbox{01}$ and for metering directly in the mine-pit (cassetes RKS - 1D) It may also be used for metering of weak active materials in samples (with cylindrical sound TKB - 02), or as seintillation radiometer with a FEU - 19M $photomultiplier. \ \, In \ \, this \ \, set \cdot up \ \, its \ \, resolving \ \, power \ \, may \ \, be \ \, augmented$ up to 2 micro-r/hour at background counts 8 - 10 micro-r/hour. This apparatus with a scintillation sound will be developed as the RKS - 06 type. The apparatus may be applied, with a suitable sound, also to meet the requirements of other branches.

Description:

The radiometer is designed as a net-fed apparatus with panel lay-out. The individual sound types are interconnected with the apparatus by means of a multicored cable. The apparatus proper is enclosed in an iron-sheet box, spray painted with baked enamel.

The cassetes are made of bent sheet, with one retractable wall. Equipped with counting tubes MS-9.

Technical data:

220 V - 20% + 10%, Feeding:

max. 22 micro-r/h per 100 divisions of the scale, min. 100 micro-r/h per 100 divisions of the scale. Sensitivity:

up to 2,800 micro-r/h Range: Resolving power: Max. 3 micro-r/h Exposure period: not longer than 30 sec.

Admissible ambient temperature: - 20 to + 40 degrees Centigrade

Input: 135 W

 \pm 2 divisions of the first scale. Fluctuation:

Weight: 10 kg

Dimensions: 400×210×260 mm Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-

BLOCK DIAGRAM

11. Gamma-radiation detector GM-counting tube 2×3 11

Monostable Integrator Electronical wollmeter


Power source

Description Type Dimensions (min) Weight (kg) Breadth Height Depth Apparatus Probe Radiometer RKS : 05 400 210 260 10.- 51.-

PRAHA - CZECHOSŁOVAKIA

Printed in Czechoslovakia (Stráž 306 Kovářská 1960)

1

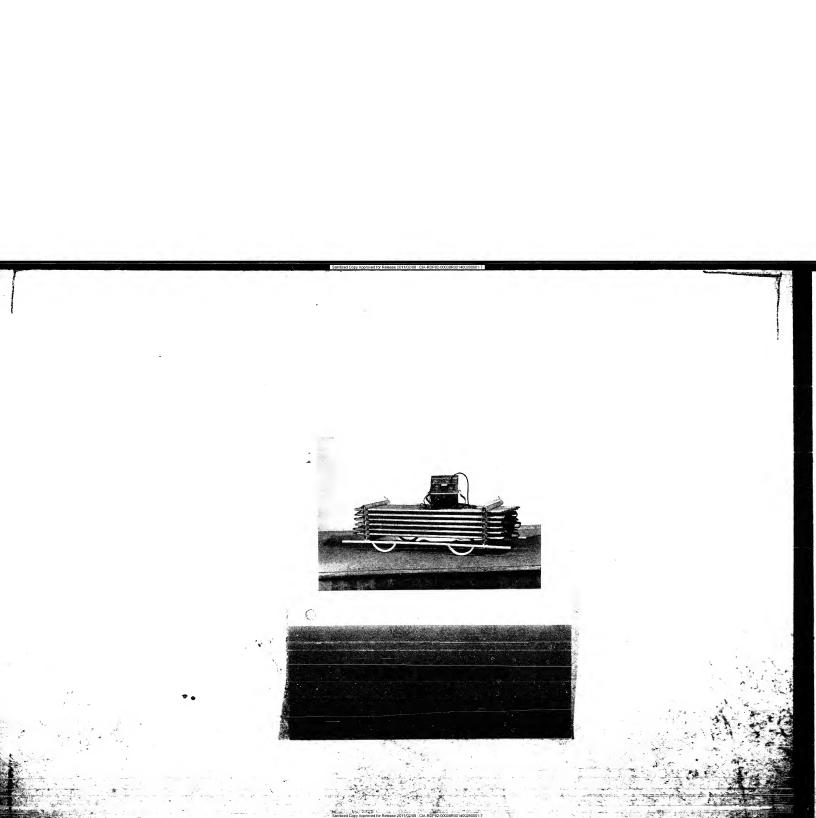

The instrument is designed for measuring horizontal or eventually vertical exploration bore holes at mining uranium ores. It can be used for various measurements and detection of gama-radioactive centres to the distance of 100 m.

Description:

The instrument is of battery type, fully equipped with transistors. It is built in a steel sheet box provided with a protective cover. The sound is made of steel tube, waterproof, provided with an outlet of rubber cable. The rubber cable passes through 70 sections of duraluminium tubes 1,5 m long. They can be gradually coupled, regarding the depth to be measured, up to the length of 105 m. The $\,$ sound as cable as the coupling tubes are fastened by means of a suitable fixing attachment on a stretcher, enabling transport of the whole set by two operators.

Technical data:

Range of measuring 1. 0— 100 micro-r/hr 2. 0— 1000 micro-r/hr 3. 0—10000 micro-r/hr

Measuring accuracy \pm 10 %

Detector of radiation GM counting tube STS-6

Evaluation

integrator meter DHR-5

Admissible ambient temperature:

-20 - +300 C

Feeding:

5 cells, 1,5 V each — 2SL-9

Working period:

 $200\ hrs$ with $1\ set$ of cells

Weight

1

0

instrument — 5 kg sound with 100 m cable — 65 kg

Dimensions of the instrument:

270×200×165 mm

Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001

BLOCK DIAGRAM

Gamma-radiation detector

Acoustic indication amplifier

Amplifier L Amplifier

1

Normalizator and integrator

Fransistor Converter

Description Type Dimensions (mm) Weight (I

Logging radiometer KPR - 02 270 200

PRAHA - CZECHOSLOVAKIA

Printed in Czechoslovakia (stráž 325 Kovářská 1960)

The aparatus is intended for lump-sorting of gamma radioactive ore transported by means of conveyors. It offers especially good services when used for sorting of weak-active ore in the last stage of the screening plant. The apparatus may also be applied, however, in prece- $\mbox{ding stages, as it allows adjustment to the minimal sensitivity of}$ 1300 micro r/hour. It may also be applied for tasks connected with the automation of the production process where radioisotopes are used, e. g. for toleration and sorting of products or materials.

Description:

The aparatus is designed as a mains-fed, panel lay-out device. It consists of two parts, these being the apparatus proper and the gammascintillation sound, equipped with two photomultipliers FEU-19, installed in a lead hood. The sound is interconnected with the apparatus by means of two cables, each 1,5 m long. The working magnet is controlled by means of the relay MKU. All control elements are situated

Technical data:

7 micro-r/hour by the belt speed being 0.5 m/sec. Resolving power:

Background counts com- up to micro-r/hour effectivity 100 %. Above 30 pensation: micro-r/hour effectivity better than 80 %.

Stabilization: ferroresonance and glow discharge tube.

Weight:

apparatus - 11 kg sound - 24 kg

Dimensions: apparatus RSR - 06 - 400 \times 220 \times 300 mm, sound FPA - 03 - 190 \times 300 \times 190 mm Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001

BLOCK DIAGRAM

Scintillation detector

Amplifier Normalizator Integrator


Correction Switch circuit

Power source

PRAHA - CZECHOSLOVAKIA

Printed in Czechoslovakia (Stráž 306 Kovářská 1950)

Sanitized Copy Approved for Release 2011/02/08 : CIA-RDP82-00038R00140028000

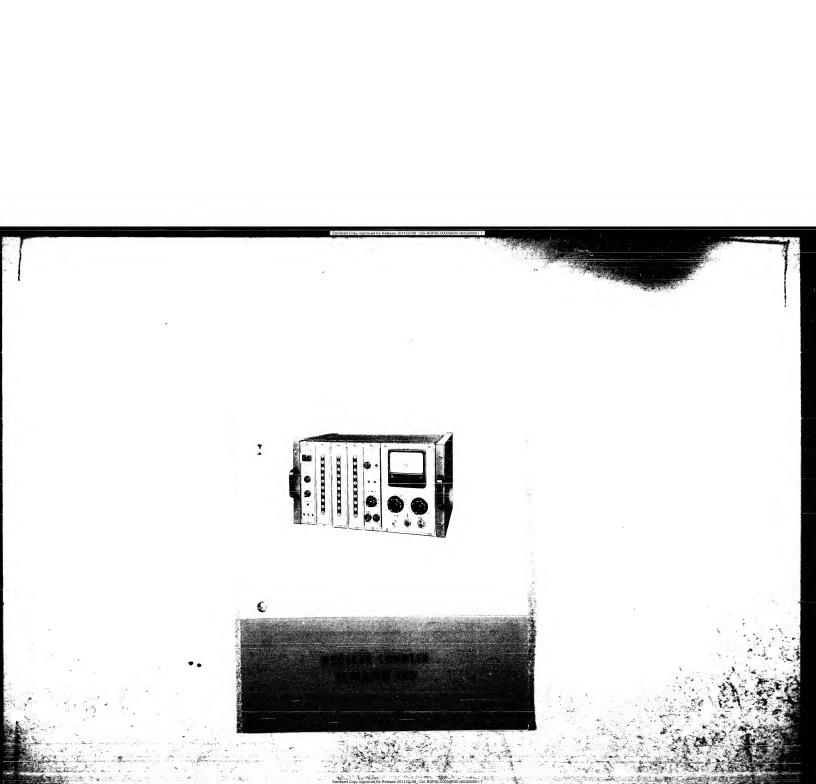

APPLICATION

The nucleor counter TESLA BM 353 measures, in connection with a Geiger-Müller tube, the intensity of cosmic rays ar radioactive radiation. It is designed for laboratory use in nuclear physics, but finds a wide field of opplication also in medical science and in industry in wark connected with the utilization of radio-isotopes.

DESCRIPTION

The apparatus contains: a contrallable H.T. source for supplying the G.M. tube; a gate unit fitted with an amplifier, an impulse amplitude discriminator, an impulse shaping network and with a start/stop device; further it contains the tube operated counter decades and a 4 digit electromagnetic counter.

The H. T. source operates with coarse and fine control from 0 to 2,000 V, so that it may be set within this range to deliver operating voltage to any type of G. M. tube. The start/stop device may be operated either manually with a push-button or remotely with pulses. The result of counting is indicated in the decimal system by neon lamps and by the figures of the electromagnetic counter. A relay connected in parallel to the counter closes at every thousandth pulse; its contacts are connected to sockets on the panel of the apparatus and may be utilized for actuating external circuits (e. g. an electronic stopwatch which indicates the time during which 1,000 discharges occurred in the G. M. tube, or of an instrument which signalizes every thousandth discharge, etc.).

ADVANTAGES

- 1. High counting speed of the electronic decodes.
- 2. Decadic indication.
- 3. Comfortable reading of the illuminated figures of the electromagnetic counter magnefied by a lens.
- 4. Manual gate operation (start/stop) with push-button.
- 5. Remote control of the gate.
- 6. Cantinuously controllable stabilized H. T.
- 7. Actuating of external circuits by every thousandth pulse.

TECHNICAL DATA

Resolution of the electronic decodes (i. e, time interval between two adjacent pulses, registered by the apparatus):

Input sensitivity: 0.5 V.

Total count capacity: 3 electronic and 4 mechanical decades (9,999,999

pulses).

Registration:

Gote control: manual with push-button, remote with negative pulses

(min. 60 V, starting time max. 3 $\mu \, \text{sec.}$).

High voltage: 0–2,000 V continuously cantrollable.

H. T. stability: \pm 1.5% at mains voltage fluctuations of $^{\circ}$ 10% A. C. mains 120 or 220 V, = 10%, 50 c/s. Power supply:

BLOCK SCHEMATIC DIAGRAM

Input unit	3 decodes	Gote unit	H. T. source
VJ 353		HJ 353	VN 353
Reloy	Hundreds Tens Units	Shoper Gate Amplifier	+ vn

Stort

eternal contral

G. M. tube

Description	Туре	Dimensions in mm			
	1	Width	Height	Depth	Weight kg
Nuclear counter	BM 353	490	275	340	29,5

KOVO

:1584 a - 5701

Printed in Czechoslovakia (ZMT 03 Vyškov 107 57)

Sanitized Copy Approved for Release 2011/02/08 : CIA-RDP82-00038R001400280001-

LABELED COMPOUNDS

OMNIA

FOREIGN TRADE CORPORATION

PRAHA CZECHOSLOVAKIA

INTRODUCTION

The method of the radioactive indicators, utilizing high sensitivity and accuracy of ionization radiation detection radiated by radioactive substances, enables to follow up the motion, decomposition and conversions of the labeled compounds in the system under study and to solve so the problems which cannot be mastered by means of other methods. For hundreds of chemical, biological, medical and technical working places the labeled compounds have become an indispensable helper at solving serious problems e. g. the mechanism of effect of medicaments, metabolism of substances in live organisms, the study of anticancerous substances, stimulators of grow of plants, study of structure of live matter etc.

The difficulty and special conditions of preparation of the labeled compounds force to establish specialized plants meeting allstate requirements and producing for export. The Czechoslovak plant of the labeled compounds in the Institute for Research, Production and Application of Radioisotopes, Prague brings to the market 50 kinds of organic compounds labelea by C14, S35 and H3, mostly for biochemical application which are exported by OMNIA, Foreign Trade Corporation.

The compounds are produced in the synthetic, biosynthetic ways and by means of exchangeable reactions. The chromatographically pure substances of a high specific activity are melted in vacuum into glass vials.

CARBON - 14 - COMPOUNDS

304 630 882 882 1500 800 1750 500 --252 US dol. 61 176 176 360 360 185 185 --60 60 US dol. 88 33 63 88 88 88 1190 1200 250 250 70 1500 1500 3350 5-10 5-10 5-10 5-10 5-10 1- 5 1- 5 1- 5 1- 5 1- 5 1- 5 1- 5 5- 10 5- 10 5- 10 Algal protein hydrolysate (Chlorella Vulgaris) - C 14 (U) L-Aspartic acid-C14 (U) Compound L-Cycloserine-C14 (U) 6 - Azathymine - 4 - C 14 D-Galactose - C14 (U) 6 - Azauracil - 4,5 - C 14 D. Glucose . C 14 (U) CB 1 CB 5

3

2

and the second second second second

Sanitized Copy Approved for Release 2011/02/08 : CIA-RDP82-00038R001400280001-7

CARBON - 14 - COMPOUNDS (cont'd)

		Specific		Price, package size (mc)			
Code	Compound	mc/mM	0.1	0.2	0.5	1.0	
			US dol.	US dol.	US dol.	US dol	
CB 10	L-Glutamic acid-C14 (U)	5—10	88	176	441	882	
CB 11	Glycine - C14 (U)	5—10	27,50	55	95	190	
CB 12	L-Histidine-C14 (U)	5—10	63	126	315	630	
CB 26	L-Isoleucine - C14 (U)	5—10	88	176	441	882	
CB 13	D-Lactose - C 14 (U)	5—10	A.,	on re	quest		
CB 13	L-Leucine-C14 (U)	5—10	88	176	441	882	
CB 15	L-Lysine - C14 (U)	5—10	88	176	441	882	
CB 16	Maltose - C14 (U)	5—10	33	66	152	304	
CB 17	D-Mannose-C14 (U)	5—10	50	100	253	504	
CB 22	Mixture of fats from Chlorella Vulgaris - C 14 (U)	5—10	70	130	300	500	
CB 18	Oleic acid-C14 (U)	510	88	176	441	882	
CB 6	L-Phenylalanine - C14 (U)	5—10	88	176	441	882	
CB 19	L-Proline-C14 (U)	5-10	88	176	441	882	
CB 21	L-Serine - C14 (U)	5—10	88	176	441	882	

CARBON - 14 - COMPOUNDS (cont'd)

	1	Specific		Price / packa	ge size (mc)	
Code	Compound	activity mc/mM	0.1	0.2	0.5	1.0
			US dol.	US dol.	US dol.	US dol.
CB 20	L-Sucrose-C14 (U)	5—10	33	66	152	304
CB 23	L-Threonine-C14 (U)	5—10	88	176	441	882
CB 27	L-Thyrosine-C14 (U)	5—10	88	176	44 1	882
CB 24	L-Valine-C14 (U)	5—10	88	176	441	882
CB 25	Xylose - C14 (U)	5—10	70	140	317	635
	Besides the items listed following	compounds	are availab	ole on specia	al request:	
	Benzylaminopurine - 9 - C14			i		
	6-Chloropurine-9-C14					
	Diaminopimelic acid - C14 (U)				1	1
	Ethyonine (ethyl) - C14 (U)				1	
	Glucose - 1 - C 14					4
	Glucose - 6 - C 14					!
	Hypoxanthine - 9 - C14	1	1			
	Phenylserine - 3 - C 14				İ	1
	6 - Furfurylaminopurine - 9 - C 14 (Kinetine)		i	1	1	


nitized Copy Approved for Release 2011/02/08 : CIA-RDP82-00038R001400280001-7

SULPHUR - 35 - COMPOUNDS

		Specific		Price / package	size (mc)
Code	Compound	activity mc/mM	Initial charge	Charge per (add) mc	Remark
			US dol.	US dol.	
SV 1	Dithiooxamide - S 35 (and its substitutes)	10	115	2,60	
SV 2	6 - Mercaptopurine - S 35	10	115	2,60	
SV 3	6 - Mercaptopurineriboside - S 35	10	250	12,—	
SV 4	Thioguanine - S 35	10	115	2,60	
SV 5	Thioguanosine - S 35	10	250	12,	
SV 6	2 - Thiouracil - S 35 (and its substitutes)	10	on re	quest	
		į			
	*				


TRITIUM - H3 - COMPOUNDS

	Compound	activity mc/mM	1.0	5.0	Remark
			US dol.	US dol.	
7017.0	Adenosine - H 3	100	********	70	
TV 8	Alanine - H 3	100	115		
TS 1 5	5 - Bromuracil - 6 - H 3	100	115		
TV 2	Cytidine - H 3	100	******	70	
TV 3	Guanosine - H 3	100	_	70	
TV 4	Chloramphenicol - H 3	10	40	_	
TV 5	Raney - Nickel - H 3	on appli- cation		11	available also in 10,25 mc packag size
TV 6 U	Uridine + H 3	100		70	
TV 7	Thymidine - H 3	100		180	
	The prices given in this list are ex Discounts are available on large or		ague and si	bject to ch	lange without notic

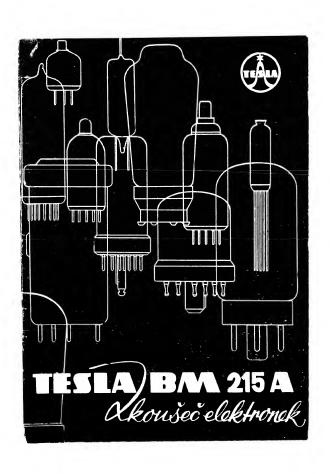

ZKOUŠEČ ELEKTRONEK TESLA BM 215A

NÁVOD K OBSLUZE

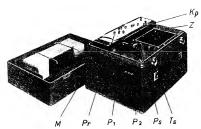

Obr. 1

Zkoušeť elektronek, typ BM 215A, slouží ke zkoušení všech známých druhů běžné používaných elektronek, je zvláště vhodný pro rychlé zjišťování kvality elektronek, na příklaď v prodejnách, opravářských dlínách, ve výrobních závodech apod. Kvalitu elektronek určujeme zjišťováním emisní schopnosti katody elektronky, celistvosti žhavicího vlákna, průměrné strmosti, vakua a zkratů mezi elektrodami. Zkoušťe je konstruován v běžném service provedení, je přenosný a Ize jel použít i pro zkoušení elektronek zvláštních typů (neobvyklého zapojení patíce). Účelná konstrukca chotoc přístroje umožňuje jeho dálší použít v různých samostatných funkcích, na příklad jako zkoušeč zkratů, celistvostí obvodů a pod.

FUNKCE

Přístroj tvoří eliminátor se dvěma transformátory pro všechna potřebná napěti, propojovací přepínač Pr, dva přepínače funkcí Pl. Pž. přepínač Ps a miliampérnetr M se šesti rozsaky. 1,5,5; 15,5 0,5 150,5 00 m d. lobor. 1). Neroda kzoulamí je přímá a poloautomatická pro všechny běžné druhy elektronek. Zkoučení provádine pomed, karet, které nám udávají elektrické hodnovy při zkoušení elektronek s oučesně jsou

PŘIPOJENÍ ZKOUŠEČE NA SÍŤ

PRIFOGENI ZROOSCE. No. 20 před přípojen přístvoje na síť nutno nejdříve zkontrolovat správné nastavení volite najstí (ob. 2). Volic musí být nastavení tak, aby díslo odpovidající najští síče býlo postaveno se zody na velopojování na síť 120 v uvoliníme zajítvoscí pásek, vythneme přepínací kotou-ček a opět jej zasuneme v trkové polosc, aby dojí 120 v dyl nastaven na uvedenou značku. Znjitovací pásek opět

výchýlí ručka měřídla na rysku oznacenou "~ idičem Ps. Rozsah regulace je: — 8%. — 4%, 0%, +4%, +8%, +12%.

VYHLEDÁNÍ ZKOUŠECÍ KARTY

Použití přístroje velmi usnadňují tzv. zkoušecí karty, které jednoznačně určují pro příslušnou elektronku:

- 1. druh a propojení patice, zkoušený systém,
 2. napěti elektrod.
 3. jmenovitou bodnotu anodového proudu,
 4. prům žrnou strmost v nastaveném pracovním bodě,
 5. roziah ručkového přístroje.

Zkoušecí karty jsou očíslovány a srovnány v kartotéku, umístěnou ve víku přístr Příslušnou kartu hledáme podle rejstříku v sadě karet.

POSTUP PŘI ZKOUŠENÍ

FUNKČNÍ PŘEPÍNAČE

Další postup běžných zkoušek je dán polohami obou funkčnich přepinačů P1 a P2. Přepínače pracují na sobě nezávisle a mají tyto polohy:

PŘEPÍNAČ P1

YPP. — přístroj vypnut
ZKRATY — poloha při zkoušení zkratů
NAŽHAV. — elektronka zhaven
VAKUUM — poloha při zkoušení vzkua
a — poloha zkoušeného anodového proudu
S — poloha při zkoušení strmosti

PŘEPÍNAČ P2

VLÁKNO – poloha při určení celistvosti vlákna FK – zkrat vlákno – katoda FG – skrat vlákno – první mřížka FG2 – zkrát vlákno – druhá mřížka FG3 – zkrat vlákno – druhá mřížka KG3 – zkrat katoda – první mřížka KG4 – zkrat katoda – první mřížka KG2 – zkrat katoda – aroda Mřížka KG4 – zkrat katoda – anoda mřížka KG4 – zkrat katoda – anoda mřížka KG4 – zkrat první a dřížka mřížka – zkrat první a dřížka – zkrat první a dřížka mřížka – zkrat první a dřížka –

ZKOUŠENÍ ZKRATŮ A CELISTVOSTI VLÁKNA

je-li přepinač P1 v poloze zkraty a přistroj nažhaven, zkoušíme vlákno a zkraty. Pře-pináme zvolna přepinačem P2 a pozorujeme měřič, zda se ručka nevychýlí v některé poloze do červeného kruhového pole. Ručka měřidla má ve všech polohách zůstat

ek. d. do červeného pole urči v poloze přepínače P2 "VLÁKNO" přerušené v. V ostaních polohách určuje ručka zkraty mezi elektrodami podle příslušného ní poloh přejmače P2. ratu a přerušení vlákna se nesmí a nemá významí ve zkoušení. Elektronka je Kdy může elektronka ukšat zkrat, stanoví karta.

Po zkoušení zkratů vrátíme P2 apět do polohy "VLÁKNO". P1 přepneme do polohy "la" a pozorujeme uzíku měřídla. Ati za jednu minutu se vychýlí ručka měřídla a určí kodnotu anodového proudu.
Jennovitá hodnota je na kartě označena černým obdělníkovým polem. Vychýlícli se ručka měřídla až na konac stupnice, musíme přepnout přepněla líhed zpět oplohy "NAZHAV". Elektronka má deformované elektrody nebo odpojenou řídírí mříšu.

ZJIŠTĚNÍ PRŮMĚRNÉ STRMOSTI Přepinač Při přepneme do polohy "S". Od výchylky měřídla v poloz výchylku v poloze "S". Odečítáme na té stupnicí měřídla, kterí je i u šlipky v pravém dolním robu karty. Rozdíl obou hodno je př

ZKOUŠKA VAKUA

THE STATE OF THE S

Správná vakuum je určeno neměnící se výchylkou při prepnutí z polohy "la" do polohy "VAKUUM" "leit vada" akuum, je výchylka v poloze "VAKUUM" větší asi o 10%, než v poloze "Ia".

ZKOUŠENÍ INDIKÁTORŮ LADĚNÍ

Zkoušení indikátorů se provádí pomocí dvou karet. Nejdříve zkoušíme řídicí triodu normálním výše popasným způsobem. Pak zkoušíme systém stinicka: měříme anodový proud, přítom ověřujeme jas stinicka a rovnomenárné osvětelní. U udří řím na se sníží značně jas asi do tří minut a projeví se nerovnoměrné osvětelní.

ZKOUŠENÍ KOMBINOVANÝCH SYSTÉMŮ

Provádi se obvykle pomoci dvou karet nebo přesouváním kolíku v kartě. V pravém rohu dole na přední straně karty je určen zkoušený systém. Bližší údaje jsou popsány na jednotlivých kartách.

VADY ELEKTRONEK

VADY ELEKTRONEK

Zkraty a přerušené vlákno jovi jasné a zřejmé vady elektronky. Pokles anodového proudu může znamena nejčastěli vyčerpanou kozdu, nebo odpojenou stinící mřížku, nulový anodový proud prozrazuje případné od proudu může vodení proudu měže soda nebo kanode. Překročení jmenovicí výchlyky prozrazuje mějinam nejčastěli vyčerpanou mřížku G1 (poloha udky nevykazuje změnu z polohy la do 5) nebo deformovanou mřížku G1 (poloha udky nevykazuje změnu z polohy la do 5) nebo deformovaní kydra výchyka ručky neklesne pod 50% jmenovicé hodnoty anodového proudu. Zcela vyhovující je jesté ulektene pod 50% jmenovicé hodnoty anodového proudu. Zcela vyhovující je jesté ulektene pod 50% ju Přesné rozmezí správnosti nelez stanovit, záleží na tom, v jaké ulektene pod 50% ju Přesné rozmezí správnosti nelez stanovit, záleží na činn. v jaké ulekte dunkci elektronách přesné pracuje, proto je na karté vyznačena pouze jmenovitá výchyka. Nemá v

DALŠÍ POUŽITÍ ZKOUŠEČE

Plynulá regulace mřížkového předpětí při měření charakteristiky elektronky se může provést potenciometrem o hodnotě 10 k Ω -1 M Ω připojeným na zdířky "3", "4" a "G1" (obr. 3).



Oblast regulace podle užstého potenciometru je do 30 až 48 V. Nastaveni lze kontro-lovat trvale vntijim měhdlem (připojeným m zdříky "Gt^{**} » "d^{**} jost Tim Ize na j priklad určit přibline průběh charakteristiky, bod zániku anodového proudu aj. Zjištění průběhu charakteristiky lze prověst stupňovitě pomoci hodnot na kliči a využítím poloh 3 la.

Tim získáváme řadu napětí:

ZKOUŠKA ZKRATŮ A CELISTVOSTI OBVODŮ

Připojením šňůr do zdířek "1" a "2", přepínač P1 v poloze zkraty, přepínač P2 buď

pro určování celistvosti obvodu v poloze "vlákno", pro zkrat v poloze zkraty (např. "KF"; "KA" . . .).

URČENÍ ZKRATU ELEKTRONKY O VÍCE ELEKTRODÁCH

Jak je zfejmě z křížováho přepínače Př. i z přepínače Pž. jou elektronky zkoušeny na zkraty mezi těmito elektrodami; "K", "F", G1", "G2", "A". U elektronek z vice elektrodami jou zbývající elektrody připojeny na něktrež z uvědených, jakákoliv elektronka o libovolném počtu elektrod (max. 9), která při zkoušení ukáže zkrat, kombinaci no normání použicí nevhodná (mino výjmky uvedené na kartách). Kombinační možnosti křížového přepínače dávají vásk možnost zkoušet vajjenné propojení věche dvití elektrod. Počet možných kombinaci je 3. Zkoušíka se provede pomocí tří kartet: 21, 22, 23, v poloze "zkraty" přepínače Př. Katela vláše měřidlo pěpo ovýchýkou. Údaj řepřenácě Pž při romot zkoušení neplatí. Zkratované elektrody je možno identifikovat tímto způsobem:

- Elektronku zkoušíme postupně pomocí karet 21, 22, 23
- Elektronku zkoušíme postupně pomoci karet 21, 22, 23.
 Ukáže-li Pístroj v některé poloze přepínače P? Z krat, poznamenáme si označení polohy přepínače ("FK". "FG1". "FG2". atd.).
 Na křížovém přepínačí Pr. jistime, které svislé sloupce odpovídají dané poloze přepínače P2. (Svislé rady jsou označeny na horním okraji křížového přepínače Pr. symboly: "K". "ft". "G2". "g1". "g2". "s2". "szunuty koliky odpovídající zkratovaný svislým sloupcům. (Vodorovné řady jsou označeny čisly 1—9.)
 Podle karty 33 a katalogu elektronek zjistíme, které elektrody jsou zratovány.

Elektronka EF93 při použití karty 23 ukazuje zkrat v poloze přepínače P2 označené "KA". Ve svislých sloupcích je "k" prvý a "a" předposlední sloupec zleva. Koliky v těchto sloupcích jsou zaunuty ve vodorovných řádách 6 a 9. Podle karty 33 a katalogu elektronek zjišťujeme, že zkrat je mezí G2 a G3.



Napřtí imřené anodovém proteku je meži zálíkami "+" a "A1" ("A2") na odporu sal 100.0 (z toho potřebná čitlivost oscilografo). Napřtí anodové je meži zdířkami "4" ("A2") "A "K". Taton apěti se přípojí na vstupr stejeného oscilografu buď přimo, nebo anodové napěti přes dálží čalží na vstupri stejeného oscilografu buď přimo, nebo anodové napěti přes dálží čalží na vstupnim stal všík. V přehlemu provnávání elektronek, protože je závislá na tvaru anodové charakteristikou.

ZKOUŠENÍ CITLIVOSTI INDIKÁTORU LADĚNÍ

Zkoušku indikátoru, kterou provádíme pomocí karty, můžeme dopinit ověřením rozmezí a schopnosti regulace výsed.
Propojení provědeme podle karty "INDIKÁTOR". Nezauname sák kolik v řade "Ež". Zdříty "Ad" a "GŽ" spojíme přes odpor 1 Mď 2 ždříž Nynř, měra napětí na mřížes řídicí triody působř na změnu výselí střítíka. Napětí měníme ož v přepínáním přepínáde z polohy "la" do "S" nebo přemístěním koliku v řade "Věj".

NÁVOD KE ZHOTOVENÍ KARTY

Ke zhotovení karty použijeme předtisku, který je v sadě karet; k děrování děrováku z víka.

z vika.

Postup
Podle udaného propojení v ceníku a čísel kontaktů objímky na kartě 33 provedeme
nakličování patice. Funkce jsou ve sloupcích a kontakty řadách podle popísu na přepinatí Pr. Na Příklad zasunutim koliku v řadě 3 a sloupcí "a" jsme stanovili kontaktu
č. 3 příslušné objímky, funkci anody.
V dalších šestí řadách zvolíme pracovní napětí co nejblíže ceníkových hodnot.
Napětí anodové určíme v řadě "Ea".
napětí druhé mřížky v řadě "Eg".
žhavicí anpětí v řadách "Ví" součtem zakolikovaných hodnot — v každé řadě
jeden kolik.

Borach mříždu v řadéch "Ví"

POPIS A ČTENÍ KARET

PREMI SA CIENT KARET

Prední strana – krvám rohu nahoře je uvedeno číslo objímky elektronky. V pravém rohu nahoře – žislo karty a druhy elektronek, pro které karta vyhovuje. Na kartě jou dále poznámky, které vrčují výlimky a zvláštní postup při zkoušení.
"Zkrat FK nani závade dášlimu měření". Tato poznámka je obvyklá při zkoušení přinothvatych elektronek a vřídlod. Přistroj ukazuje v poloze "FK" zkrat, který není sa žadde dášlimu měření.
"Kolile zasovat postupně". Tato poznámka je obvyklá při zkoušení dvojitých systémů na jedná kartí. Nejprva se určuje anodovy proud prvního a potom druhého systému přesunutím koliku. Výchylky jmenovité jsou shodné.

ČTENÍ SYMBOLŮ



Zdířky "+" a "K" propojit káblikem. Tento symbol je obvyklý při zkoušení vf diod.



Kablíkem zapojit elektrodu na baňce elektronky do zdířky "G1",



Kablíkem zapojit elektrodu na baňce do zdířky "A2".

Symbol 2 a 3 je obvyklý u elektronek s elektrodami vyvedenými na baňce.

Na kartě jsou udány hodnoty nastavených napětí, a to:

Vg1 — stejnosměrné napětí první mřížky
Ea — střídavé napětí anody, a to jeho maximální hodnota

střídavé napětí druhé mřížky, a to jeho maximální hodnota
 jmenovité žhavicí napětí

Na kartě je vyznačena jmenovitá výchylka pro zkouženou elektronku, určena velikost strmostí, zkoužený systém elektronky a rozsah měřidla. Některé elektronky mají karty sdružené, a proto jmenovitá výchylka je na jedné kartě pro oba druhy a roz-litena popliem.

lišena popisem.

Druhá strana karty — vlevo nahoře je systém celé elektronky, respektive její užití;
průměrné ceníkové hodnoty jsou v tabulce.



Jmenovitá výchylka



SYMBOLY A JEDNOTKY

iymenovita v...,

iyMBOLY A JEDNOTKY

c — katoda
11 — první, nejčastěji řídící mřížka
22 — druhá, nejčastěji stínící mřížka
23 — třetí mřížka, na příladb przdící nebo hradicí mřížka (supressor) u pentod,
smělovací mřížka u hoxod a heptod
25 — elektroda si ndeswe ndpovídající jejímu pořadí ve směru od katody k anodě
16 — stinitko elektronkového ukazatele vyladění
26 — anoda
27 — anoda
28 — anoda
29 — anoda
20 — anoda
20 — anoda
20 — anoda
21 — stinení vnitřní
21 — stinení vnitřní
21 — stinení vnajší, metalisace
21 — Lavicí napetí střídavě, jednotka V
22 — žinení vnitřní
21 — zhavicí napetí střídavě, jednotka V
22 — zhavicí napetí střínosměrně, jednotka V
23 — napětí stejnosměrné anody vůčí katodě, jednotka V
24 — zhavicí napetí střínosměrné anody vůčí katodě, jednotka V
26 — proud anodový, jednotka mA
26 — proud stříně mřížky, dňotka mA
27 — průník v procentech
28 — první v procentech
29 — průník v procentech
20 — průník v procentech
20 — průník v procentech
21 — nadový odpor, jednotka ků
22 — anodový odpor, jednotka ků
23 — anodový odpor, jednotka ků
24 — napětové zesílení
25 — napětové zesílení
26 — napětové zesílení
27 — napětové zesílení
28 — maximální budolí napětí na ži, jednotka V
28 — napětové zesílení
29 — maximální anodové napětí, jednotka V
29 — maximální anodové napětí, jednotka V
29 — maximální anodová ztráta, jednotka W
29 — maximální anodová ztráta, jednotka W
29 — maximální anodová ztráta, jednotka M
20 — kapačíty mezi elektrodami v Indexu xy, jednotka pF
28 maximální anodová ztráta, jednotka M
20 — kapačíty mezi elektrodami v Indexu xy, jednotka pF
20 — maximální anodová ztráta, jednotka M
20 — kapačíty mezi elektrodami v Indexu xy, jednotka pF
20 — maximální anodová ztráta, jednotka M
20 — kapačíty mezi elektrodami v Indexu xy, jednotka pF
20 — maximální zdověně pře v zdověně zvod.

TECHNICKÉ ÚDAJE

Objímka	Příklad typu elektronky	Oblímka číslo
Americká čtyřnožičková	5X3	1
Pětilamelová evropská	AB2	2
Miniaturní	6F31 (EF93)	3
Noval	6CC41 (ECC83)	4
Rimlock	EF41	5
Oktal evropský	EF22	6
Oktal americký	UY1N	7
Desítková řada	AZ11	8
Pětinožičková	REN924	9
Speciální EF50	EF50	10
Speciální 6L50	6Y50	11
Jedničková řada	AL4	12
Sedminožičková evropská	ACH1	13
Americká sedminožičková	6F7	14
Miniaturní pro bat. eí.	1F33 (DF96)	15

Anodové napětí: 0 až 300 V v šestí stupních Stupňování anodového napětí Es nazv. a napětí stinící mřížky Eg 2 max.: 0: 20; 50; 100; 150; 250; 300 V \pm 5% při síťovém napětí 220 V (120 V) a zatižení do 0,1 A

0; 1,5; 3; 6; 12; 24; 48 V ± 3 % při síťovém napětí 220 V (120 V) bez odběru

Stupňování předpětí první mřížky Vg1: přes nost napětí: Stupňování rozsahů měřicího přístroje í max.: Žhavicí napětí:

2. 7,9 ht stotem note 2.0 (120 Y) dec sector

2. napati na zdiřtáck. "ví" propoj. přepinače 0; 0.5;
1.9 20. 40.0 V
0.7; 1.45; 3: 5.2; 7; 15: 50 V ize sestavit žhavicí napati
ro vežtinu světových elektronek s přesnosti ± 5 %
Maximáni dovolené zatlžení pro napětí do 25 V je
2. n. nad 25 V — 0.3 A
220 nebo 120 V, 50 c/s ± 15 %
asi 15 W + spořeba zkoušené elektronky
tavnými pojistkami: pro 220 V.0,6 A
pro 120 V.1 A
anodová 0,1 A

Napájení: Spotřeba: Jištění:

6Z31 230×240×340 mm asi 16 kg



Příslušenství přistroje je uloženo ve víku skříně:

- Přislušenství přistroje je uloženo ve viku skříně:

 1 přívodní síčová šířůra

 3 kabely pro připojení elektrod na baňce elektronky

 3 šířůry pro propojování zdířek

 1 sada karet


 5 reservních koliků

 1 děrovák v pouzdře pro zhotovení karet

 1 sáček s tavnými pojistkami


 1 návod

FUNKČNÍ ZAPOJENÍ

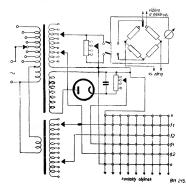

ELECTRONIC TUBE TESTER TESLA BM 215 A

INSTRUCTIONS FOR USE

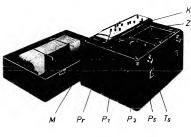

The electronic tube tester TESLA BM 215 A is designed for the routine testing of all commonly used tubes. It is especially suitable for speedy quality tests e.g., in shops, servicing workshops, factories etc.

The quality of each tube is tested by ascertaining the emission of the cathode, the continuity of the fillament, the average mutual conductance, the quality of vacuum, and by searching for inter-electrode short circuit.

The tube tester is designed as a servicing appliance, is portable, and can be used also for the testing of special tubes (of uncommon base connections). The tester is applicable also for several further tests and measurements, e.g. as a continuity tester, circuit conductivity tester, etc.

DESCRIPTION

A basic part of the tube tester is a power unit with two mains transformers, which delivers all voltages required for tests and measurements. Further parts of the tester

are: the connecting board Pr. two switches Pl and P2 for performance selection, switch P3 and a milliammeter PI which has 6 ranges: 1,5; 5; 15; 05; 150 and 500 mA (see Fig. 1,7) the testing method is direct and semiautomatic for all commonly used electronic tubes. It is carried out with the aid of measuring cards which list the test means of the connecting board Pr. The socket Z (Fig. 9) the straight several socket between the connecting board Pr. The socket Z (Fig. 9) and the straight several socket between the connecting board Pr. The socket Z (Fig. 9) and the straight several socket between the socket D (Fig. 9) and the socket D (F

MAINS CONNECTION

Before the tube tester is connected to the mains it is essential to ascertain that its power unit is switched to the available mains voltage. The voltage selector (Fig. 2) must be set so that the triangular mark above it points to the correct maint voltage. Each newly delivered tube tester is set by the makers to 220 V. If it is necessary to change over the tester to 120 V. If it is necessary to change over the tester to 120 V. If the securing strip must be removed temporaryle then the total voltage selector are the mains receptacle and two fuses that the triangle state to the voltage selector are the mains receptacle and two fuses (mains and HT). When the tester is switched over from one mains voltage to another, the mains fuse above in "TECHNICAL DATA". It is essential to make sure that all the plugs Kp are inserted into the row of sockets on the right-hand side of the connecting board Fr, and that both performance selector and "HEATER" respectively. Connect the tester to the mains with the supplied cable which is stored under the hinged cover of the tester. This cover can be opened after the spring has been depressed.

The switch Ps is designed for setting off the tolerance of the power voltage. The power voltage is tested by pressing the pressition "15" - the instrument must show adjusted by means of the switch Ps. The steeps of the regulation are: —12%, —8%, —4%, 0%, 0%, +4%, +4%, +12%.



SELECTION OF THE MEASURING CARD

Tube testing is greatly facilitated by the application of measuring cards which determine for each tested tube:

- the tube base, its connection and the main character of the tube,
 voltages of all electrodes,
 the rated intensity of the anode current,
 the average mutual conductance under the selected working conditions,
 the range of the measuring instrument.

All measuring cards are numbered and are stacked in a container attached to the cover of the tube tester. The appropriate card can be found by using the lists of valves which are in the card's set.

TESTING PROCEDURE

TESTING PROCEDURE

The selected card is placed on the connecting board Pr (Fig. 1) and plugs are inserted into all holes of the card, according to the instructions printed on the card. If nothing else is indicated on the formal card in the card into all holes of the card, according to stafficient to ascertain that in each horizontal row of the portunated into the properties of the properties of the card into the properties of the properties of the card into the properties ocket of the tube tester. When the preformance selector PI is switched to the "SHORT CIRCUITS" position, and the power is switched on. Glowing of the pilot lamp (underneath the label) indicates that the tube tester is nearly and the power is switched on. Glowing of the pilot lamp (underneath the label) indicates that the tube tester is nearly as the properties of the pilot lamp (underneath the label) indicates that the tube tester is energized.

PERFORMANCE SELECTOR SWITCHES

The test procedure is given by changing the positions of both switches Pl and P2. These switches operate indepedently of each other and their positions are:

OFF. — the tester is switched off.
SHORT CIRCUITS — short circuits are tested,
PRE-HEAT. CONTROL. — the tested tube is heated.
VACUUM — the quality of vacuum is tested,
In — the anode current is measured.
S — the mutual conductance is measured.

SELECTOR P2

HEATER — fillment continuity is tested.

FK — short circuit: filament - cathode.

FG1 — short circuit: filament - screen grid.

FG2 — short circuit: filament - screen grid.

KG4 — short circuit: filament - screen grid.

KG5 — short circuit: cathode - control grid.

KA6 — short circuit: cathode - screen grid.

KA — short circuit: cathode - screen grid.

GA — short circuit: screen grid - anode.

GA — short circuit: screen grid - anode.

FILAMENT CONTINUITY AND SHORT CIRCUIT TESTS

With the selector P1 in the second position "SHORT CIRCUIT" and with the tube tester energized, the filament can be checked for continuity, and all electrodes for inter-electrode short circuits. The switch P2 is changed successively and the instruction sobserved. The pointer should not move over to the red circular field but should always remain at zero.

Should the pointer swing to the red field when P2 is set to "HEATER", this indicates a broken filament. In all other positions of this selector, inter-electrode short circuits can be detected.

When a broken filament or an inter-electrode short circuit is shown by the tested tube, the procedure should be terminated as the tube is faulty. Certain tubes have interconnected electrodes which are indicated by the instrument as short circuits. The respective cards give the necessary information.

ANODE CURRENT MEASUREMENT

When the circuit test has been completed successfully, the switch P2 is returned to the position "HEATER" and the switch P1 is set to "la". After approximately one minute has elapsed, the measuring instrument will indicate the anode current of the tested tube.

The rated anode current is marked on the card with a black rectangle. Should the pointer swing to the end of the scale, it will be necessary to switch back at once to "PRE-HEAT. CONTROL" because the tested tube has either deformed electrodes or the control grid is disconnected.

AVERAGE MUTUAL CONDUCTANCE MEASUREMENTS

Subtract from the instrument's indication when the selector Pl is in the "la" position the reading indicated when this selector is in the "s" position. The appropriate scale of the instrument is indicated with an arrow in the right-hand bottom correct of the card. The difference between the two indications is the average mutual conductance in mAVY. This value has to be compared with the rated value printed on the card in the letchand bottom corner (\$ - ...).

VACUUM TEST

The vacuum is good if the deflection of the instrument remains constant when the position of the selector PI is changed from "la" to "VACUUM". If the vacuum of the tested tube is imperfect, the deflection in the "VACUUM" position grows by approximately $100_{\rm p}$.

TUNING INDICATOR

Two cards have to be utilized for the testing of a tuning indicator. First of all the control triode is tested by applying the above described routine method. Then the optical part is tested by measuring the amode current and simultaneously checking the phosphor. The indicating screen should be homogenously origin. If the running indicator is fully the Propheness will fade within approximately 3 minutes and the screen will become aportice.

TESTING OF MULTIPLE TUBES

As a rule two cards have to be utilized or the positions of the plugs have to be changed. In the right-hand bottom corner of the appropriate card is printed which of the tube's sections is being tested. All details are given on the cards.

FAULTS IN ELECTRONIC TUBES

Inter-electrode short circuits are easily discovered and are quite obvious faults in tubes. The drop in anode current indicates either an exhausted cathode or a broken connection to the screen grid. If no anode current flows, the cathods or anode con-

nection may be interrupted. If the anode current exceeds the rated value, then other the control grid G1 is disconnected (the pointer does not change its position when the switch PI disconnected for millian ("5"), or the electrodes are deformed, to disconnected the disconnected for below 50% of the rated value. A tube with 60% Is may be classified as satisfactory.

A precise games count he store heaves

goes not grup office any 27% of the rated value. A time which only is any the chassified as satisfactory. A precise range cannot be given because much depends on the stage in which the tube operates. Therefore, the cards bear only data of the rated values, it would be useless to set up some rule and to print it on the cards. Some H. F. diodes show great differences, the anode current of some is as low as only 30% of the rated value, but they operate quite satisfactorily. A great change in the mutual conductance is a rule the result of mechanical damage (distorted structure), this fault also being indicated by a change in la. A very bad vacuum is not indicated by the tube tester. If the bulb of the tube is full of air the filament burns usually as soon as it is heated, sometimes discharges inside the tube can be observed. Air inside the tube can be deeceded from the greyish colour of the getter mirror or from a white deposit on the glass. Interrupter electrode connections of tubes with transparent bulbs can be usually detected also merely by careful observation.

FURTHER APPLICATIONS OF THE TUBE TESTER

The grid bias of the tested tube can be altered continuously and the characteristic can be measured when a potentiometer of 10 k Ω to 1 M Ω is connected to the sockets "3", "4" and "G1" (see Fig. 3).



The max, voltage is depending on the applied potentiometer and has a value from 30—48 volts. The actual voltage is measured by an external voltmeter connected between the sockets "G1" and "C".

In this manner the characteristic of the tested tube can be plotted, its cut-off point can be ascertained, set, for gaining an almost continuous set of voltage values, the positions "S" and "la" of the selector PI can be utilized:

in the position "la" 0; -1.5; -3; -6; etc. in the position "S" -1; -2.5; -4; -7; etc.

SHORT CIRCUIT AND CONTINUITY TESTS

The test cables must be connected to the sockets "1" and "2". The selector P1 must be in the position "SHORT CIRCUITS". The selector P2 is either in the position

"HEATER" — if continuity has to be tested, or in any short circuit position (e. g. "KF", "KA" etc.) — if short circuit tests have to be carried out. The fault is indicated by a backwards swing of the indicator's pointer. By utilizing the combination possibilities offered by the selector P2, the continuity between up to 5 points of a tested circuit can be ascertained. These points must be connected to the sockets "K", "F!", "G2", "and "A". The instrument indicates by deflections of 1.5 mm to the left connections which have resistances of the rate of 1 ML2. A resistance of 10 ML2 is indicated by a deflection to the center of the reef field. This property of the tube tester can be utilized for speedy checking of resistors and other components and circuits. The test voltage is 20V. The maximum current at full scale deflection is 100 µA D. C.

SHORT CIRCUIT TEST ON A MULTI-ELECTRODE TUBE

As is obvious from the connecting board Pr and the performance switch P2, interded short of the board Pr and the performance switch P2, interded short of the bubble under test has more electrodes: "K", "F", "G1", "G1", "G1", "G2", "G2

- 1. The tube is tested by the successive utilization of the cards 21, 22 and 23.
- 2. Should the instrument register a short circuit in one of the positions of the selector P2, then this position must be noted ("KF", "FG1", "FG2", etc.).

 3. Vertical columne of the connecting board Pr which corresponds to the noted position of the selector P2 are found, (The vertical columne are marked at the upper edge of the connecting board Pr with the symbols: "k", "f1", "f2", "g1", "g2", "g2"
- "gz" and "a".

 4. It is necessary to ascertain in which horizontal lines are inserted the plugs which correspond with the short-circuited vertical columns. (The horizontal lines are marked with the figures 1 to 9.)

 5. According to the card 33 and the data supplied by the tube makers, it can be accertained which electrodes are interconnected.

A tube of the type EF93 shows a short circuit when the card 23 is utilized and when the selector P2 Is in the position marked "KA". The first of the vertical columns is marked "KA" and the penultiance one is marked "a" — counting from the left he plugs in these columns are inserted in the 6th and 9th horizontal lines. According to the card 33 and the data given by the tube makers, it can be found that a short circuit is present between the grids G2 and G3.

TUBE COMPARISONS WITH THE AID OF A C. R. OSCILLOSCOPE

A voltage proportional to the anode current is between the sockets "+" and "A1" ("A2") across a resistor of approximatelly 10012 (this determines the sensitivity of the oscilloscope). The anode voltage is between the sockets "A1" ("A2)" and "K1". These voltages are connected also, if necessary, via a divider (according to the input impedance of the C. R. O.). The image on the screen is not the susual anode characteristic of the tube, neverthelles it is useful as a means of speedy comparative measure, because it is dependent on the shape of the actual characteristic.

SENSITIVITY TESTS OF TUNING INDICATORS

The routine test of a tuning indicator can be complemented with a sensitivity test which ascertains the range within which the tuning indicator operates. The connecting board is "plugged" according to the card "INDICATOR" of the tested tube. The plug "Eg2" is withdrawn and the sockets "At" and "G2" are inter-connected via a resistor of 1 to 2 MD. Each voltage change on the grid of the tube will cause a change in indication. The voltage is changed by switching P1 from "la" to "S" or by changing the plug of the "Vg1" row.

INSTRUCTIONS FOR MAKING A CARD

When it is necessary to make a card, the supplied sample contained in the stack and the punch stored in the lid of the tube tester can be used.

Procedure

The connections of the tube are found according to the tube data supplied by its makers, and by following the base drawings on the card No. 33. The functions of the electrodes are in the columns and the contacts are in the lines corresponding to the connecting board Pr. Example: by placing the plug in the third line into the column "a" the third contact of the appropriate tube base has been given the function of an anode. All voltages for the tube must be set as closely as possible to the rated values listed by the makers.

The anode voltage is set in the line "Ea".

lues listed by the makers.

The anode voltage is set in the line "Ea",
the screen grid voltage is set in the line "Eg",
the filament voltage is set in the line "Eg",
and is given by the sum of the "plugged"
values — In each line is one plug only!

values — In each line is one plug only!

Messuring range is set in the line i.

After the short circuit test has been completed, the tube tests proper can be carried out. The correct deflection is set according to a good tube. For rectifier tubes the anode voltage should be set to a much lower value than the one given by the makers, as the tubes in the tester are loaded with a small resistor. H. F. diodes are an exception to this, because their cathodes must be connected in the column "gi" and the sockest """ and "K" must be interconnected. The tubes are an exception to this, because their cathodes must be connected in the column "gi" and the sockest """ has a will be small resistor. The sockest "" has a socked to the so

INSCRIPTIONS ON THE CARDS

Front side on the card. In the upper left-hand corner is printed the number of the socket. In the upper right-hand corner are the number of the card and the designations (type numbers) of the tubes for which the card is applicable. Futher, exceptions and special procedures (if any) are listed.

"Short FK not considered as default". This remark is common with directly heated tubes and H. F. dlodes. The tube tester indicates in the "FK" position of the selector P2 an inter-electrode short circuit which is actually no fault at all.

r an inter-electrous short circuit which is account no account of the second with one single card only. First of all the anode current of one tube unit is found, then by changing the plug the anode current of the second unit is found. The rated deflections are equal.

Explanation of symbols.





The electrode cap on the bulb of the tube must be connected to the socket marked "G1".



The electrode cap on the bulb must be connected to the socket marked "A2".

The symbols 2 and 3 are common when tubes with connections on the bulb have to be tested.

The following data are printed on each card:

VgI — D. C. voltage (bias) of the first (control) grid

Ea — A. C. max. anode voltage.


Eg2 — A. C. max. voltage of the second (screen) grid.

Vf — rated filament voltage.

I — range of the measuring instrument for max. anode current measurements

On each card are further listed: the deflection which corresponds to the rated anode current, the mutual conductance, and the tested unit of the tube. Also the range of the instrument is listed.

Some tubes have common cards. Such cards bear informations about the deflection tor two types of tubes clearly distinguished as follows:

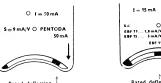

5 ○ PENTODA EBF 11 ... 1,8 mA/V EBF 15 ... 5 mA/V 15 mA EBF 11 EBF 15 Rated deflections

Rated deflection †

Reverse side of the card.

In the upper left-hand corner is printed the type of the tube or its application. Further, the average values supplied by the makers are listed.

SYMBOLS AND UNITS

— cathode
— first grid, usually control grid
— second grid, usually screen grid
— third grid, usually suppressor grid of pentodes,
also mixer grid of hexodes or heptodes
— further electrode, the index giving its order as counted from the cathode
— screen of the tuning indicator

screen of the tuning indicator
anode
anode of a diode (in multiple tubes)
filament (heater)
internal screening
external screening
A. C. filament voltage in V
D. C. filament voltage in V

18

II — filament current in A

Va — voltage of the anode against the cathode, in V

Vgx — voltage of the xelectrode in V

Ia — anode current in mA

Ig2 — screen grid current in mA

S — mutual conductance in mA/V

SC — conversion transconductance in mA/V

D — penetration coefficient in %

RI — internal resistance in kL1

Ra — anode resistor in kL1

Ra — anode resistor in kL1

Eg1 — max. exciting voltage on g1 in V

Ze — voltage amplification

Pa — A. C. output in V

Vam — max. anode voltage in V

Vg2m — max. screen grid dissipation in W

Pg2m — max. screen grid dissipation in W

Pg2m — max. screen grid dissipation in W

Cxy — inter-electrode capacitance between x and y in pF

Rg1m — max. permissible leakage in MΩ

TECHNOCOL DATA. Vgx la lg2 S Sc D RI Rk Ra Rg2 Eg1 Ze Pa Vam

TECHNICAL DATA

Tube sockets

Socket	Example of tube	Socket No
American 4-pin	5X3	1
European side contact, small	AB2	2
Miniature	6F31 (EF93)	3
Noval	%CC41(ECC83)	4
Rimlock	EF41	5
European octal	EF22	6
American octal	UY1N	7
European 8-pin	AZ11	8
European 5-pin	REN924	9
Special for EF50	EF50	10
Special for 6L50	6Y50	11
European side contact	AL4	12
European 7-pin	ACH1	13
American 7-pin	6F7	14
Miniature for batery tubes	1F33 (DF96)	15

Steps of the anode voltage Ea max, and screen grid voltage Eg2 max.: Accuracy of the voltages: 0; 20; 50; 100; 150; 250; 300 V \pm 5% at 220 V (120 V) mains voltage, and up to 0.1 A load. 0; 1.5; 3; 6; 12; 24; 48 V \pm 3% at 220 V (120 V) mains voltage, and without load Steps of the grid bias Vg1: Accuracy of the voltages: Ranges of the measuring instrument for I max.: Filament voltages: 15; 5: 15: 50: 150: 500 mA

On the sockets marked Vfaccording to the established connections:
9.3: 20: 40: 60 V
0.7: 1.45: 3: 52: 7: 15: 50 V

for all voltage combinations necessary for tube testings

0 to 300 V in six steps.

Tube`complement: Dimensions: Weight: 16 kg approx

ACCESSORIES

Anode voltage:

All accessories supplied with the tube tester are stored inside the cover of the apparatus. They are:

apparatus. They are:

1 mains connecting cable
3 cables for the electrodes connected to caps on the tube's bulb
3 cables for sockets connections
1 set of cards
5 spare plugs
1 punch (in the card container)
1 bag with spare fuses
1 instructions booklet

RÖHREN-PRUFGERÄT TESLA BM 215A

BEDIENUNGSANWEISUNG

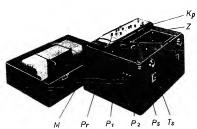


Bild 1

Das Rohrenprufgerät der Type BM 215A dient zur Prüfung aller bekannten und laufend verwendeten Röhrentypen. Es ist besonders für schnelle Qualitätsprüfungen der Röhren, z. B. vor Vermeinellen, Reparaturmerkstätten und für Röhrenerzeignet Die Röhrenerwerkstätten und für Röhrenerzeignet Die Röhrenerwerkstäten und Gest Abertaffens, der funtsionsfähigkeit der Röhrenkathode, der Unversehrheite des Heitfadens, der durchschnitzlichen Steilheit, des Vakuums und des Kurz-Schlusses zwischen den Elektroden fest. Das Prüfgerät ist in der üblichen Service-Ausführung gebaut, ist übertragbar und lässt sich auch zur Prüfung von Röhren in Sonderausführung (mit abnormalen Sockelanschluss) verwenden. Die praktische konstruktive Ausführung des Gerätes ermöglicht seine Verwendung ütw weitere vielseitige Zwecke, z. B. als Kurzschlussprüfer, Stromkreisprüfer u. a.

Das Gerät besitzt einen Netzteil, 2 Transformatoren für alle erforderlichen Spannungen, einen Verbindungs-Schalter Pr. 2 Funktions-Schalter P1, P2, Schalter Ps und ein

Milliampère-Meter mit 6 Messbereichen: 1,5; 5; 15; 50; 150; 500 mA (Bild 1). Das Neaswerfahren ist für alle laufend verwenderen Rohren direkt und halbautomatisch. Die Prüfung wird mit Hilfe von Karten durchgeführt, welche die elektrischen Werte für die Prüfung der Rohren enthalten und sind gleichzeitig ein Hilfsmittel zur Ein-stellung dieser Werte mit Hilfe des Umschalters Pr. Die Kontaktbüchsen Z (Bild 1) werden zum Anschluss jener Rohren, deren Sockel im Gerta nicht eingebaut sind, oder bei geläufigen Rohrentypen zum Anschluss jener Elektroden, die ausserhalb des Sockels (am Kolben) herausgeführt sind, oder für andere spezielle Verbindungen, verwendet.

ANSCHLUSS DES GERÄTES AN DAS NETZ



DAS WÄHLEN DER PRÜFKARTEN

Die Verwendung des Gerätes wird wesentlich durch die sogenannten Prüfkarten vereinfacht, die für die entsprechende Röhre folgende Daten eindeutig bestimmen:

- Art der Sockelschaltung, Prüfsystem
 Elektroden-Spannung
 Nennwert des Anodenstromes
 Auchstelliche Steilheit im eingestellten Arbeitspunkt
 Zeigerbereich des Gerätes

Die Prüfkarten sind in der Kartothek nummeriert und im Deckel des Gerätes unter-gebracht. Die erforderliche Karte sucht man nach dem Register im Kartensatz.

22

VERLAUF DER PRÜFUNG

VERLAUF DER PRÜFUNG

Die herausgesuchte Karte legt man an den Verbindungsumschalter Pr(Bild1) und in
die Öffnungen in der Karte leigt man die Verbindungs-Stoppel entsprechend den auf
der Öffnungen in der Karte leigt man die Verbindungs-Stoppel entsprechend den auf
Priffvorgang oder keine bestimmte Ausnahme festgelegt, dann ist grundsätzlich darauf zu achten, dass in keiner wasgerechten Reihe des Umschalerts Pr (einschliesslich der Reserve-Büchsen) mehr als nur ein Stöpsel
eingesetzt ist. Diese Bedingung muss stets eingehalten werden. Sofern zum Anstelluss
der Karten die Reservestopsel der senkrechten Reine incht ausreichen, müssen
weitere Stöpsel aus dem Behalter des Geräteschildes entnommen werden. Bei
Einlegen der Verbindungsstoppel ist nach den auf der Karte enthaltenen Weisungen
vorzugehen!
Hierauf wird die Röhre in den entsprechenden Sockel einessesekt und durch die

vorzugehen!
Hierauf wird die Röhre in den entsprechenden Sockel eingesteckt und durch die
Umstellung des Schalters P1 in die Lage "SHORT CIRCUITS" wird das Gerät eingeschaltet. Die Netz-Seite wird durch die unter dem Geräteschild angeordnete

BETRIEBS-SCHALTER

Der weitere Verlauf der üblichen Prüfung ist durch die Stellung beider Betriebs-Schalter P1 und P2 gegeben. Diese Schalter arbeiten voneinander unabhängig und haben folgende Stellungen:

SCHALTER P1

OFF
SHORT CIRCUITS
SPRE-HEAT, CONTROL
VACUUM
A
SEellung für Vakuumprüfung
SS-Stellung für Vakuumprüfung
Stellung für Vakuumprüfung
Stellung für Vakuumprüfung
Stellung für Vakuumprüfung

SCHALTER P2

SCHALTER P2

HEATER — Stellung zur Prüfung der Unversehrheit des Heizfadens FK

Kurzschluss - Heizfaden - Kathode FK

Kurzschluss - Heizfaden - Anson Gitter FA

Kurzschluss - Heizfaden - Anode GKG1 — Kurzschluss - Heizfaden - Anode FKG2 — Kurzschluss - Kathode - erstes Gitter FKG4 — Kurzschluss - Kathode - zweites Gitter FKG4 — Kurzschluss - Kathode - zweites Gitter FKG4 — Kurzschluss - Kathode - zweites Gitter FKG4 — Kurzschluss - sertes und zweites Gitter G1G4 — Kurzschluss - erstes und zweites Gitter G1A — Kurzschluss - erstes Gitter - Anode G2A — Kurzschluss - erstes Gitter - Anode

KURZSCHLUSS-PRÜFUNG UND UNVERSEHRTHEIT DES HEIZFADENS

ist der Umschalter PI in der Stellung "SHORT GIRCUITS", dann wird der Heisfaden der Röhre und die Röhre selbst auf Kurzachluss geprüft. Man legt den Schalter P2 langsam um und beobachtet den Zeigerausschlag des Messgerätes, ob er nicht in das runde note Feld ausschlägt. Der Zeiger soll bei allen Schalterstellungen in der Nuil-Lage verbielben.

Cer Ausschlag ins rote Feld zeigt bei Schalterstellung "HEATER" einen unter-brochenen Heitzfaden an in ihrer anderen entsprechend den bezeichneten Stellungen des Schalters PZ gibt der Zeigt einen Kurzschlusz weisten den Elcktroden an. Bei Kurzschluss und unsebrechenem Heitzfaden darf und soll man in der Röhren-prüfung nicht forschan die Röhre ist schadhaft. In welchen Fällen die Röhre Kurzschluss hebbn kann, geben die Prüfkarten an!

MESSUNG DES ANODENSTROMES

MESSUNG DES ANDENSTROMÉS

Nach der Kurzschlussprüfung schalter man P2 in die Stellung "HEATER" zurück.
Der Schalter P1 wird in die Stellung "ht" geschaltet und man beobachtet hierbei den
Zeiger des Messgerites. Ungeden "ht" geschaltet und man beobachtet hierbei den
zeiger des Nessgerites. Ungeden "ht" die Stellung "ht" geschaltet der Zeiger des Nessgerites
aus und gibt ein stauf der Karte durch ein langliches schwarzes Feld gekennzeichnet.
Schläg der Zeiger bis an das Ende der Skala, so muss der Schalter sofort in die
Stellung her Stellung her Stellung her Stellung her Stellung her
stellung her Stellung her
stellung her Stellung her
stellung her Stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung her
stellung he

MESSUNG DER DURCHSCHNITTLICHEN STEILHEIT

Der Schalter wird in die Stellung "S" umgelegt. Vom Ausschlag des Messgerätes "Ja" nerchnet man den Ausschlag in Stellung "S" us, Die Ableung wird auf inener Skalentenlung vorgenommen, welche durch der vereirende im rechten unteren Kartenteilung vorgenommen, welche durch der Werte ist die durchschnittliche Stellheit in anA", Phil mei bei der Stellenteilung vorgenommen, welche durch werte sie die durchschnittliche Stellheit in anA", Phil mei bei der Stellheit die Stellheit in anA", Phil mei der Stellheit (S = ...).

VAKIILIM-PRÜFUNG

Das richtige Vakuum ist durch den sich nicht verändernden Ausschlag bei der Umschaltung aus der Stellung "Ja" nach der Stellung "VACUUM" geprüft. Ist das Vakuum fehlerhalt, so ist der Ausschlag in der Stellung "VACUUM" etwa um 10% grösser als in der Stellung "VACUUM" etwa um 10% grösser als in der Stellung "I".

PRÜFUNG DER ABSTIMMUNGSANZEIGER

Die Prüfung der Abstimmungsanzeiger wird mit Hille zweier Karten durchgeführt. Zuerst wird die Steuer-Triode nach oben angeführen Art geprüft, hierauf prüftman das Schirmgitzer-Drieben der Schirmgitzer-Drieben des Anodenstromes, wobei die Heisen des Anodenstromes, wobei die Hohen haten die Abstimation in die Stein des gleichmässige Leuchten begutachtet wird. Bei schafhaften in dilaten nimmt die Heiligkeit innerhalb von 3 Minuten beträchtlich ab und macht sich in einem ungleichmässigen Leuchten bemerkbar.

DIE PRÜFUNG KOMBINIERTER SYSTEME

Diese wird üblicherweise mit Hilfe zweier Karten oder durch Umstecken zweier Kontakt-Stöpsel in der Karte durchgeführt. Das rechte untere Eck auf der Karten-vorderseite ist für die Prüfung kombinierter Systeme bestimmt. Nähere Angaben sind auf den einzelnen Karten angeführt.

Kurzschlüsse und beschädigte Heizfaden sind klare und deutliche Röhrenfehler. Das Absinken des Anodenstromes deutet oft auf eine erschöpfte Kathode hin oder auf

ein abgelösses Schutzgitter, ein Nullwert des Anodenstromes deutet gegebenenfalles auf eine Unterbrecheng der Zuleitung zur Kathode oder Anode hin. Das Überauf der Schleiber der Mohren int Kreisen der Schleiber der Mit zur Schleiber am Röhrenkoliben erkennen. Unterbrochene Zuletungen zu den Elektroden erkennt man beim Durchblicken einer Rohre mit Karglas-Koben.

WEITERE VERWENDUNGSMÖGLICHKEITEN DES GERÄTES

Eine stetige Regelung der Gitter-Vorspannung und eine Messung der Charakteristik kann mit einem Potentiometer von 10 k Ω –1 M Ω bei Anschliessung an die Kontakt büchsen "3", "4", "G1", vorgenommen werden (Bild 3).



Der Regelbereich ist entsprechend dem verwenderen Potentiometer 30—48 V. Die Einstellung kann dauernd durch ein Messinstrument ausserhalb des Gerätes (es wird an die Schaltbüchsen "Gi" und "A" angeschlossen kontroler ein. Dadurch kann mar zum B. näherungsweis der Verlaufe Lach zu der Verschwindens des Anodenstromes und silvifizie bestimmen. Die Feststellung des Versiufes der Charkteristik kann mar verweniste nach den Anweisungen und durch Benützung der Stellung "S" und "la" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "la" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "la" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "la" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "la" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "la" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung der Stellung "S" und "La" vornweise nach den Anweisungen und durch Benützung "S" und "La" vornweise nach den Anweisungen und durch Benützung "S" und "La" vornweise nach den Anweisungen und durch Benützung "S" und "La" vornweise nach den Anweisungen und durch Benützung "S" und "La" vornweise nach den Anweisungen und durch Benützung "S" und "La" vornweisen and "La" vornweise

PRÜFUNG AUF KURZSCHLUSS UND AUF UNVERSEHRTHEIT DES STROMKREISES

Man schaltet das Leitungskabel an die Kontaktbüchsen "1" und "2", den Schalter F2 legt man in die Gstellung für Kurzschlüsse "SHORT CIRCUITS", den Schalter F2 legt man enweder:

legt man entweder:

für die Prüfung auf Stromunterbrechung in die Lage "HEATER", oder für die Prüfung auf Stromunterbrechung in die Lage "HEATER", oder für Kurzschlussprüfung in die Stellung "SHORT CIRCUITS" (z. B. "KF", "KA") Der Fehler wird durch einen entgegengestersten Zeigerausschlag angegeben. Durch die Ausnützung der Kombinationsmöglichkeiten des Schalters P2 kann man durch de Ausnützung der Kombinationsmöglichkeiten des Schalters P2 kann man durch konstabiliche gegenseitige Schaltungen max. S Pankt einen die Verbindung in der Grossen-ki", "F1", "G2", "G2", "G2", "G3",
KURZSCHLUSSBESTIMMUNG BEI MEHRGITTERÖHREN

WIRZSCHLUSSBESTIMMUNG BEI MEHRGITTERÖHREN
Wie aus dem Verbindungsschalter Pr. und dem Funktionsschalter P2 hervorgeht,
werden die Rohren auf kurzechluss zwischen folgenden Elektroden geprüft: "K",
"K", "Gt", "Gt", "Gt", "Gt", "Gt", "Gt", "Gt",
"Gt", "Gt", "Gt", "Gt", "Gt", "Gt", "Gt",
an eine oder "Gt", "Gt", "Gt", "Gt", "Gt",
"Gt", "Gt", "Gt", "Gt", "Gt",
"Gt", "Gt", "Gt",
"Gt", "Gt", "Gt",
"Gt", "Gt",
"Gt", "Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"Gt",
"

- Man prüft die Röhre der Reihe nach mit den Karten 21, 22 und 23.

 Macht sich in irgendeiner Stellung des Funktionsschalters P2 ein Kurzschluss bemerkbar, so vermerkt man die betreffende Schalterlage ("FK", "FG1", "FG2" usw.).
- usw.)

 3. Am Verbindungsschalter Pr stellt man fest, welche senkrechten Kolonnen der betreffenden Schalterlage an P2 entsprechen (Die senkrechten Reihen sind am oberen Rande mit den Kennzeichen "k", "f1", "f2", "g2", "g2", "g2" bezeichnet.)

 4. Man stellt fest, in welchen waagrechten Reihen die den kurzgeschlossenen senkrechten Kolonnen entsprechenden Kontaktstoppel eingesteckt sind. (Die waagrechten Reihen sind mit den Ziffern 1—9 nummeriert.)

 5. Anhand der Karte 33 und des Rohrenkatalogs bestimmt man nun, welche Elektroden den Kurzschluss aufweisen.

Deispiel

Die Röhre EF93 zeigt Kurzschluss bei der Prüfung mit Karte 23 in der Stellung "KA"
dies Funktionsschalters PZ. In den senkrechten Kolonnen ist "k" die erste und "a"
die vorletzte Kolonne von links. Die Kontaktstöpsel sind in diesen Kolonnen in den

Dic Symbole 2 und 3 dienen allgemein für Röhren mit auf den Kolben ausgeführten Elektroden.

Auf der Karte sind die Werte der eingestellten Spannungen angegeben, und zwar:

Vgf — Gleichstrom-Spannung des ersten Gitters


Ea — Anoden-Wechselstromspannung, und zwar der max. Wert

Eg2 — Wechselspannung des zweiten Gitters, und zwar der max. Wert

V — Nenn - Heitzpannung

Messbereich für den max. Wert des Anodenstromes

Auf der Karte sind verzeichnet: der Nennausschlag für die gepfrüte Röhre, die bestimmte Grösse der Steilbeit, das geprüfe System der Röhre und der Bereich des Messgerätes. Einige Röhren haben gemeinsame Karten, daher ist der Nennausschlag für beide Röhren auf einer Karte und unterschiedlich in der Beschreibung.

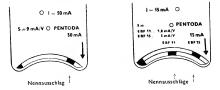

Die zweite Kartenseite enthält: links oben das System der Röhre bzw. Verwendung; in der Tabelle sind die Durchschnittswerte angeführt,

SYMBOLE UND EINHEITEN

Kathode

— ersee, meist Steuergitter

— zweites, meist Schirmgitter

— tweites, meist Schirmgitter

— drittes Gitter, z. B. Brems- oder Schutz-Gitter (Supressor) bei Pentoden,
Misch-Gitter bei Hexoden und Heptoden

Elektrode mit Index entsprechend ihrer Reihenfolge in Richtung von der
Kathode zur Anoderstess Abstimmung Absteiner.

Kathode zur Anode
Schirm des elektronischen Abstimmungs-Anzeigers
Anode
Anode der Diode (in kombin)erten Röhren)
Heizfade
Innerer Schirm
ausserer Schirm (Metallislerung)
Heiz-Wechseispannung in V
Heiz-Gleichspannung in V

If
Va
Vgx
Ia
Ig2
S
SC
D
Ri
Rk
Ra
Rg2
Eg1
Ze
Pa
Vam

If — Heiz-Strom in A

Va — Anodon-Gleichspannung gegenüber der Kathode in V

Vg — Spanung der Gitter mit Index x in V

Ia — Anodenstrom in mA

Ig — Strom des zweiten Gitters in mA

S — Steilheit in mA/V

S — Misch-Steilheit in mA/V

D — Durchgriff in %

RI — Innerer Widerstand in kΩ

Ra — Anoden-Widerstand in kΩ

Ra — Anoden-Widerstand in kΩ

Rg — Widerstand des zweiten Gitters in kΩ

Egf — Max. Erregerspannung an gf in V

Ze — Spanungs-Verstäckung

Pa — Wechselstrom-Leistung in W

Vg2m — Max. Anoden-Normung in V

Vg2m — Max. Anoden-Normung in V

Vg2m — Max. Anoden-Normung in W

Pam — Max. Anoden-Normung in W

Pam — Max. Anoden-Normung in W

Rg — Max. Verlust am zweiten Gitter in W

Cxy — Kapazitàt zwischen den Elektroden mit Index xy, in pF

Rg Im — Max. vulbssige Ableitung in MΩ

TECHNISCHE DATEN

Socke	larten	
Sockel	Röhren-Beispiel	Sockel Nr.
Amerikan, Vierstift-Sockel Europ. Fünflamel-Sockel Miniatur-Sockel Noval-Sockel Rimiock-Sockel Oktal europ. Oktal. amerik. Zehner-Reihe Fünfstift-Sockel Spezial-Sockel EF50 Spezial-Sockel EF50 Spezial-Sockel EF60 Siebenstift-Sockel werop. Siebenstift-Sockel Miniatur-S. für Baterie-Reihe Baterie-Reihe	5X3 AB2 6F31 (EF93) 6CC41(ECC83) EF41 EF22 UY1N AZ11 REN924 EF50 6T50 AL4 ACH1 6F7 1F33 (DF96)	1 2 3 4 5 5 7 8 9 10 11 12 13 14

0 bis 300 Y in 6 Stufen

Abstufung der Anodenspannung Ea max. und die Schirmgitter-Spannung Eg2 max.: 0; 20; 50; 100; 150; 250; 300 V

Spannungs-Genauigkeit:

 $\pm 5\,\%$ bei einer Netzspannung von 220 V (120 V) und einer Belastung bis 0,1 A

Abstufung der Vorspannung des ersten Gitters Vg1: 0; 1,5; 3; 6; 12; 24; 48 V

Spannungs-Genauigkeit:

 \pm 3% bei einer Netzspannung 220 V (120 V) ohne Entnahme

Abstufung des Bereiches des Messinstrumentes I max.: 1,5; 5; 15; 50; 150; 500 mA

Spannungen an den Kontakten "Vf" des durchgeschalt. Umschalters 0: 0,5; 1; 9,3; 20: 43: 60 V 0; 1,45; 3; 52: 7; 15; 50 V mit welchen man für die Mehrzahl aller Röhren die Heitzspannung mit einer Genaufgeit von ±5% ein-stellen kann Die max zulässies Belastung bei Spannungen bi-

Stellen kann Die max. zulässige Belastung bei Spannungen bis 25 V ist 2 A, über 25 V — 0,3 A

Netz-Spannung:

220 oder 120 V, 50 c/s $\pm\,15\,\%$ cca 15 W + Verbrauch der geprüften Röhre

Verbrauch: Sicherung:

durch Schmelzsicherungen: für 220 V ... 0,6 A für 120 V ... 1 A Anodenkreis . 0,1 A

6Z31

Bestückung:

230 × 240 × 340 mm cca 16 kg

Das Zubehör ist im Deckel des Gerätes untergebracht:

- Netz-Anschluss-Kabel

 Netz-Anschluss-Kabel

 Kabeln für den Anschluss der Elektroden am Kolben der Röhre

 Kabeln zum Verbinden der Kontakt-Buchsen


 Kartensatz

 Reserve-Stöpsel

- 5 Reserve-stopsel I Locher im Futteral für die Anfertigung der Karten 1 Sackchen mit Ersatzsicherungen 1 Anweisung

ИСПЫТАТЕЛЬ РАДИОЛАМП TESLA BM 215A

инструкция по обслуживанию

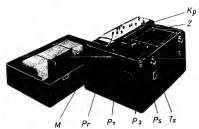

Пепнататель лами тип ВМ 215А преднадвачен для испытации всех применяемых типов лами. Пепнататель в особенности пригоден для быстрого определения годиости лами в торудошей сетя, ремоптиых мастерских, на заводахподность долесть пределяется путем просерки замесновной способности катола
годиость доле в пределяется путем просерки замесновной способности катола
годиость доле в при в пределяется пределяется пределяется програматьной сервие при в пределяется пределяется програматьной сервиеной пормативной аппатутуре. Пепнататель можно также
применить для просерка специальным потов дали (с специальным цеколом).
Исполнение прибора позводяться пределяется по также для различимых самостоятельных функций, шес для определения короткого замыкания, выявлеимя обрывов в внектрических ценях.

Прябор состоит из силовой части с двумя трансформаторами для всех требуемых напряжений, коммутационного переключателя Pr, двух переключа-

присоединение прибора к сети

Неред присоединением прибора к сети ладо проверить положении переключатель долже и паприжении (рис. 2). Этот переключатель долже быть установлен задом положении, при котором мисло, соответствузенее наприжению сети, будет против тругольника.
Перед отправной на завода-начитывитель этот передоматель подитовител дам сети 220 в Енгалечением при образователь при образовательного при образовательного при устращить фиксирующую полосу переключатель, выпуть переда поволюция, сиска, встанить ого опить в прибор так, чтобы под тругольником базла число 120 и опить зафинентовать в этом пополжении.

Для зациты прибора предусмотрены плавиен поволь



овано пал. 120 и опить водим провыть в зова подожении.
Для завишта прибора предумотрены вланкие предоключении прибора для другого наприжения сети.
Несле проперки положении переспаставлению сети, падо проверить,
жения, которы, жиз другого наприжения сети.
Несле проперки положении переспаставлению сети, падо проверить,
жения, которы, жиз править переспаставлению сети, падо проверить,
жения которы, жиз править переспаставлению сети, падо проверить,
жения которы, жиз править переспаставлений привор в крайних позоляениях "ОРК" и "ПЕАТЕК". После этого прибор можно подалючить из
сеть. Шихр, для присоссиваения к сети повещен под кожух мов в правиме приборы, который открывается изакатием фикспрумовей пружины.
При полоши конки В золяен провери показывает на отметку "—". Когда
пет, падо установить наприжение при можни переключателя Ръ. Диназоов
регулиции: —12 °°° —8 °°° —4 °°° —18 °°° —48 °°° +12 °°°.

польор проверочной карточки

Эксилюатации прибора облегчена путем применения т. наз. проверочных карточек с данными соответствующей лампы:

- 1. Тип поколи

- гии поваси.
 Напримение электрод
 Номинальный висодый ток
 Средина вругизна характеристики и рабочей точке
 Дианазон измерительного прибора.

Проверочные зарточки нумерированы и составляют комплект, полеженный в крыние прабора. Отвежание соответствующей карточки производится при помощи, регистров лами, которые находитея в составе корхочек.

полнитации задми прикладивается в коммутационному переключателю Ре (рис. 1) и в отверстви устанляются переключающие штифты соглукааний, приведенных на картоне Если на картоне иет соотнетствующу указаний, то надю обратить полняние на тох этобы в какуюм горызитальном разу переключется (полняни ресервные отверству) был пестда только один штифт. Это устовие одинование один стерству был пестда только принагального должно предоставление и петрукцией на картоне. Носле этого проверому за должно полняние и положение "SHORT CHRCUTTS" Включению состояние прибора сигнализируется дамночно.

нереключатели функции

Дальнейний процесс исвытания протокает в соответствии с положениями обоих переключателей функции прибора P1 и P2. Эти переключатели рабо-тият исавяненмо один от другого и имеют следующие положения:

ПЕРЕКЛЮЧАТЕЛЬ Р1

OFF
SHORT CIRCUITS
- npn6op otkinous
normal normal panepise kopotkoro замыкання
PRE-HEAT.
CONTROL.
- nakma panor penaetru
CONTROL.
- normal nposepise викуум
положение при проверке викуум
положение при полож намна разогревается
 положение при проверке вакуума
 положение при проверке анодного тока
 положение при проверке крутизим характеристики

РЕПЕКЛЮЧАТЕЛЬ P2

проверка короткого замыкания и обрыва инти

ИГОВЕГЛА КОГОТКОТ ЗАВЫКАВИЛ В ОБУВНА ВИПТ

ЕСЛЯ переключатель Р накодител в положения, «SHORT CIRCULTS" и прибор
разорет, то можно проверить отсутствие обрыва иги паказа и процедить
портого положения и поставления при поставления представления представления представления при поставления при поставления при всех положениях переключателя должна остаться на нуле.

Если стрелка прибора при переключеска 12 в положения "НЕАТЕК" от-клюнится в красную часть инферебватта, то это означает обрыв инти накада. В оставлями инолюжения доможения развитами развитами и прибора списальную положения самывания можему электродами в соответствии самывания можем положения переключатели Рг. В случае обнаружения ко-ротного замывания или обрыва пельзя и не имеет смаслу продолжеть про-рену, т. в. камы не притодия для далальной шего привесний. Случая да восто-рыя короткое замывание не пилител дефоктом, приведены на парточно.

измерение анодного тока

ньмытелния на коротное завывание переключатель Р2 снова переключатель подоставления на коротное завывание переключатель Р1 переключатель положение "На" и сметрител на положение "На" и сметрител на стремку прибора. Примерго через одру минуту стремка потклюниется и показывается воличну аподного тока. Номинальным пеличина обозначена на карточке черным примутольником. Номинальным пеличина обозначена на карточке черным примутольником переключить в правительности на положение "PRE-EEACA, ООХТКОСУ. 7. к. это переключить обратно в положение "PRE-EEACA, осоткост, 7. к. это спащетельствует от том, тот в лимие дефорапрованы электроды или отсоединена управлено при на стем.

определение средней кривизны характеристики

Переключатель Р1 переключается в положение "8". От покования стредки в положении переключателя "Га" вычитаем покование в положении "8". От чет производится на той инале прибора, которы соответствует дианазову с тредки в правом инярем углу карточки. Разпость обоих поможний явля-сте средней величиной крутивым характеристики (ма)». Эту величину сравниваем с правильной пеничний вкуртивым характеристики приведенной на карточке в правом инярем.

проверка вакуума

Если при переключении из положении "Га" в положение "VACUUM" по-клавине стрелки не мениетси, то это сивдетельствует о правильности выкума. При пеправильном викума воложение стрелки в положении "VACUUM" будет приверги на 10 % больше чем в положении "Га".

проверка индикатора настройки

Проверка пиднятого настройки производится при помощи двух карточек. Сначала пенатавлется триод пиднятора способов, ком было уже описавто. После этого пециатавлется зараш путаточно сполож аподнятого тока и при выпосно проверкется сечтится техно при тутаточно спально и равпомерно. У пложих падваюторо в мерализатогора по истечении трох минут светится значительно меньше и перациомерно.

ИСПЫТАНИЕ КОМБИНИРОВАННЫХ ЛАМП

Пспытавию пропаводится обымновенно при помощи двух карточек или не-ремещеняем итифгов в карточке. В правом углу ваверху на передней стороне карточки приведены денные испытываемой системы. Подробные данные при-водены на всех карточках.

КОРОТКИЕ ЗАМИ

Короткие замывания и обрыв накола ивдиотся истла дефоктами. Призополя уменьнения авершего тока индивител в большинстве случаев паное катодо или отсемивание экрапирующей сетки. Если вызопат ток ровен иулу, то предата от тока индивительного уменьного у

на "8" не меняетен). Иной причиной может бить деформации денеграция намисе при переключения с. "Га" намисе денеграция денегр

дальнейшее применение испытателя лами

ДАЛЬНЕНШЕЕ ПРИМЕНЕНИЕ ИСПЫТАТЕЛЯ ЛАМИ
Плавную регулировогу смощении сетки для синти характеристики можно
произвести при помети петеницометра от 10 кназом до 1 мгом, присоедивомого к гиоздам (т. ст. применями по 10 кназом до 1 мгом, присоедивомого к гиоздам (т. ст. применямого от 10 кназом до 1 мгом, присоедипомого к гиоздам (т. ст. применямого отоенциометра в вределя
отретулирование значение можно отретулирование в посторонным имерительным прибором мето определить по ступения и отоеторонным имерительным прибором мето определить по ступения и при
отретулирование при при том по проделить по ступения при
отретулирование при при том по подоедить по ступения при
отретулирование при при том по подоедить по ступения при
томоги пределение при при том по подоедить по ступения при
томоги при том при том при том по подоедить по ступения при
том при том при том при том по подоедить по ступения при
том при том при том при том при том по подоедить по ступения при
том при том при том при том при том при том по подоедить по ступения при
том при то

в положении Ia 0; -1,5; -3; -6; ... в положении S -1; -2,5; -4; -7; ...

проверка короткого замыкання и обрыва в ценях

ОПРЕДЕЛЕНИЕ КОРОТКОГО ЗАМЫКАНИЯ ЛАМИЫ С БОЛЬШИМ КОЛИЧЕСТВОМ ЭЛЕКТРОДОВ

С ВОЛЬНИМ КОЛИЧЕСТВОМ ЭЛЕКТРОДОВ

Бак следует на оболнаемений коммутационного переключателя Рг и переключателя (в при переключателя размения в при переключателя (в при переключателя размения в при переключателя (в при переключателя размения в переключателя размения в переключателя дектродов переключателя о таканное под переключателя о таканное под переключателя (при объекповенном и ещитации определат прибор портокое авмыштерное при объекповенном и ещитации определат прибор портокое авмыштерное при объекповенном и переключателя (при переключателя при переключателя при переключателя при переключателя при переключателя при переключателя (при переключателя размения при переключателя (при переключателя размения при переключателя (при переключателя размения при переключателя размения пропораменны переключателя размения при переключателя при переключателя размения при переключателя размения при переключателя размения при переключателя размения переключателя ра

- Электронную дамну испытываем последовательно по карточкам 21, 22 и 23.
- Нокажет ли прибор короткое замыкапие в какоминоўдь положении пере-ключатели Р2, отметим обозначение этого положения ("FK", "FGI", "FG2" итп.).
- Па коммутационном переключателе определим колониы, гоответ-прующие обазначения отмеченного положения переключателя Р2. (Колонна обозначения на верхием крае коммутационного переключателя Рг свабо-лами "k", "f1", "f2", "g2", "g1", "a")
- 4. Определям риды по горязонтали, в которых вставлены штифты, соответствующие вакоротко заикнутым колониям переключателя. (Ряды по горязонтали обозначены цифрами 1-9.)
- По карточке 33 и таблице электронных ламп определим пару электродов, между которым приисходит короткое замыкание.

Электроннай дамиа ЕЕРЗ при применении карточки 23 даст коротьое за мыкание в подожении "ЕАЗ" переключатели Р2. На комуулаторе Рг индистем да," первой да стороны. В этих колоннай изходител игипрата в 6-ох и 9-ох прад по городикантали. Вы карточка 33 изменен за светройных дахи определым, что пакоротко замкнутами электродими индистем де 2 и 63.

СРАВНЕНИЕ ЛАМИ С ПОМОЩЬЮ ОСЦИЛОГРАФА

Паприжение, пропорциональное апклиому току, получается на гисадах ... 1 ... A^{11} ("A2") на сопротпыения примерно 160 см стим определяется треобучами мужетительность сопильнораму. Анхулос перимение на гисадах ... A^{12} ("A2") и ... K^{2} . На эти ваприжения исплючаемене на гисадах ... A^{12} ("A2") и ... K^{2} . На эти ваприжения исплючаемене сърез делигиорожность от величины въздание сърез делигиорожность от величины въздание сърез делигиорожности от величины въздание същина въздание портому на основании кривой на осцилографе можно проверять ламина и поэтому на основании кривой на осцилографе можно проверять ламина и поэтому на основании кривой на осцилографе можно проверять ламина и поэтому на основании кривой на осцилографе можно проверять ламина и поэтому на основании кривой на осцилографе можно проверять ламина.

ИСПЫТАНИЕ ЧУВСТВИТЕЛЬНОСТИ ИНДИКАТОРА НАСТРОЙКИ

Проверку пидикатора при помощи карточки можно дополнить контролем работы светащегося экрона пидикатора. Присоединение производится по картоме, ЕЛУПОСАТОВ: При этом одновь но вставляем и в разух, Кр2? — Гисара, АП " и "G2" соединяются через сопротивление в пределах от 1 мгома од 2 мгом. Вмежение направления на сетке управлението прикора пызывает ваменение тепн на экрале.

Наприжение изменяем на 1 в переключением переключатели на положения "Та" в положение "S" или перемещением штифта в риду "Vg1".

изготовление карточек

ВАГОТОВЛЕНИЕ КАРТОЧЕК
Для наготовления карточек примениются инвечатениме резервные карточки и пробойник.
На основании данных в прейскуранте и номеров гисад наиссъва, приведенных на карточке 33, производитем присостивлением своюла обучаения (налачении) приведены в вертикальных столбиах а контакты в горизонтальных ридах гол. обознач. на переключателю Р. Напр. если всталени штифт в раду 3 а столбце а, то этим самым контакту 3 ссота, наиссъван даетси функции анода. В остальных нести градах подбирается всегниять рабочего наприжения самым близкая и величите данных прейскуранта. Анодное напр. определается в разу, 7,6. "Напряж ене данных прейскуранта. Анодное напр. определается в разу, 7,6." Напряж день выдат данных прейскуранта. Диналаю измерительного прибора определается в разу. Тольтем с узмой величии, состветствующих вставляющих инферестации в данных узмой пределается в разу. Тольтем с образования годой дамых. У кенотронов подбирается и напряжение значительно меньше поизводим у кенотронов подбирается и напряжение значительно меньше поизводим с учува представляют высокочастотные днолы, у которых катод включается в голобие дняги представляют высокочастотные днолы, у которых катод включается в голобие дняги соединяются гисада "+" и "К". Напряжение задается в ряду "Vg"

大田村で

9

(объявлению саман малан величны). Остальное легаю водыть на примере отчимых варточек, Перед ваготовлением карточек рекомендуется прочитать вся» инструмцию.

обозначения на карточках

ОБОЗИАЧЕНИЯ ПА КАРТОЧКАХ

На передней стороне наперху приведен помер поколя дамна. В первом углу
памерах помер карточка, и тип соотв. дамна. Вроме того на карточке прирезелен примечания, касавописся пеключительных случаев в специального
коротные заммание, касавописся пеключительных случаев в специального
коротные заммание, касавописся пеключительных случаев в специального
коротные заммание обыкновенно касается пециальня зами е песередстаниям. Это примечание обыкновенно касается пециально постаниям
паключительных размененты, касается педиально в
паключительной паключительного
паменами паключительного
паменами паключительного
паменами паменами с
паменами паменами с
паменами с
паменами с
паменами с
паменами с
паменами с
паменами с
паменами с
паменами с
паменами с
паменами с
паменами с
паменами
памена

пояснение обозначений

Соединить гибким проводом гиезда " +" и ", К". Это обозначение обыкновенно касается высокочастотных диодов.



Соединить электрод, выведенный на колбе, с гнездом "G1".



. Обозначения 2 и 3 объявновенно кас него и теми с досктродеми, выпеденными на колбе.


На карточке приведены значении сооти, паприжений:

Vg1

Eg2 Vf

напряжение тока первой сетки
 напряжение пер. тока зпора (макс. лиач.)
 напряжение пер. тока второй сетки (макс. лиач.)
 номинальное вапряжение накала
 дваналон вемерительного прибора для макс. значения инодиото тока

На карточке приведено поминальное отклюнение стрелки для провернемой лямны, величина крутнаны характеристики, тип ламны и дивиазон измерительного прибора. Некоторые ламны имеют общие карточки и поэтому поминальные отклюнения стрелки, приведенные на одной и той же карточке, имеют соответствующее обозмачение.

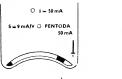



номии. отклонение

помии, отклонеция

На другой стороне карточки наверху приведен тип ламны (назначение). В таблите приведены данкые прейскурацта.

обозначения и едипицы

- катод первал сетка (обыкновенно управл.) вторым сетка (обыкновенно экрапир.) третья сетка (обыкновенно экрапир.) третья сетка (илир. тормозники) третья сетка (илир. тормозники) сетка у гексодов и гентодов электрод с обозначением последовательности в паправлении от катода и аподу закрил лампового пидинатора настройки апод должно сетка (у комбинированных лами) пить пакала экранировка внутри

паружная зерапировы (веталінация)
паприженне пер. тока пакала (в)
паприженне пет. тока накала (в)
паприженне пет. тока накала (в)
паприженне пет. тока накала (в)
пон накала жлектром, обозначення к катоду (в)
алюдное наприженне пост. тока по отношенню к катоду (в)
алюдное наприження (ка)
крутила хрантериетики (ма в)
крутила хрантериетики (ма в)
крутила хрантериетики (калом)
визтрешнее сопротивление (калом)
визтрешнее сопротивление (калом)
которотивление во поторотивления (калом)
макстрешнее по противления (калом)
макстрешнее по примення (калом)
макстрешнее по паружения
(в)
макстрешнее по паружения (в)
макстрешнее по паружения (в)
макстрешнее по паружения (в)
макстрешнее по тока прижения (в)
макстрешнее тока прижения (в)
макстрешнее тока прижения (в)
макстрешнее со тока прижения (в

техинческие данные

Виды папелек			
Цоколь	Пример типа ламиы	Цоколь №	
Четырех штырьковый американский	5×3	1	
Европейский с 5-тью контакт иластипами	AB2	2	
Р альчиковый	6F31 (6/K111)	3	
Нова:1	6CC41 (6H2H)	4	
Puncior	EF41	3	
Восьмишт, с ключем	EF22	6	
Восьминт, америк,	UYIN	7	
Восьминт. еврои.	AZ11	8	
Интингырык.	REN924	9	
Сиециальный ЕF50	EF50	10	
Специальный 6L50	6Y50	11	
С 8 конт. пласт.	AL4	12	
Семиштырык. европ.	ACHI	13	
Семиштырьк, америк,	6F7	14	
Пальчиковый для батарей- ных лами	1F33 (1K2H)	15	

Аподное наприменно от 0 до 300 и и пости ступених Ступени апод наприменни Еж манс. и напр. экрап. сети Еg2 манс. 0; 20; 50; 100; 150; 250; 300 и точность напряжения: Ступени напряжения первой сетки Vgi 0; 1,5; 3; 6; 12; 24; 48 в $\pm 3\,\%$ при наприжении сетки 220 в (120 в) без нагруми точность наприжения: Дианазоны измерит. ирибора — І_{маке.}: 1,5; 5; 15; 50; 150; 500 ma 0; 0,5; 1; 9,3; 20; 40; 60 в 0,7; 1,45; 3; 5,2; 7; 15; 50 в Напряжение накала: \pm 5 % Макс. допустимая нагрузка при наприжении до 25 в=2 а, свыше 25 в=0.3 а 220 или 120 в, 50 гн \pm 15% точность напряжения: Напряжение сети: Потребляемая мощность: прибл. 15 вт + питание испытаемой ламиы Защита: плавкие предохранители для 220 в—0,6 а для 120 в—1 а предохранитель в цени апода 0,1 а 6**Z**31 Размеры: Вес: 230×240×340 mm приблизит. 16 кг принадлежности Принадлежности испытателя лами находятся в крышке ящика: Принадлежности исплататал лами нахадител в крышке и 3 гибкие провода для присоединении электродов на колбе 3 интура для соединении гнезд 1 комплект карточек 5 запасных штифтов 1 пробойник в футлире (для изготовлиени карточек) 1 мешечек с запасными предохранителями 1 инструкция ПЕРЕВОД НА РУССКИЙ ЯЗЫК НАДПИСЕЙ НА ПСИЫТАТЕЛЬНЫХ КАРТОЧКАХ

Короткие замыкания в ламие с несколькими электродами. Для выявления замыканий между электродами вадопоочередно применить карточки № 21, 22, 23.

Карточки 21, 22

Левын переилютатель в положении "коротное замывание". Правый переключатель в положениях от второго до одинадиатого. Соединение показывается отклюнением стрезки прибора назад в красиую часть инкаль. Подробное описание приведено в инструкции.

Карточка 23

Картовка 23 — Короска дамиса в двине с несколькими электродами. Штифт вставить пеосередно в при канадом вставлении переключать правым переключателем. Гля выпърскиви замыкамий вежку электродами вадо поочередно применить карточна № 21, 22 и 23. — Правий переключатель в положении "короткое замыкание". Правий переключатель в положениях от эторого до витото. Соединение показываетел отключением стрелки прибора назад в красную акты писалу править положения применения примене



COMPONENT LIST BM 215A

No.	Art	Value	Max. load	Notice
R 1	carbon resistor	1.25 ks		(*)
R 2	carbon resistor	1.6 ks		')
R 3	carbon resistor	32 k!	0.1 W	± 1%
R 4	carbon resistor	16 k	0.1 W	± 1%
R 5	carbon resistor	8 ks	0.1 W	± 1%
R 6	carbon resistor	4 ks	0.1 W	± 1%
R 7	carbon resistor	2 ks	0.1 W	± 1%
R 8	carbon resistor	2 k!	0.1 W	11%
	carbon resistor	1.33 ks	2 0.1 W	± 1%
		200 ki	2 0.25 W	
R 10	carbon resistor	160 ks	2 0.1 W	± %
R 13	carbon resistor	160 ks	2 0.1 W	± 1%
R 14	carbon resistor	160 k	0.1 W	+ 1%
R 15	carbon resistor	160 ks		± 1%
R 16	carbon resistor	8.57		1 AK 669 09
R 20	wire-wound resistor		2	1 AK 669 10
R 21	wire-wound resistor		2	1AK 669 11
R 22	wire-wound resistor		Ω	1 AK 669 12
R 23	wire-wound resistor		ů.	1 AK 669 13
R 24	wire-wound resistor		0	1AK 669 14
R 25	wire-wound resistor	38.7 k		± 1%
R 26	carbon resistor			
R 27	carbon resistor	227 k 533 k	4	± 1%
R 28	carbon resistor		0 1 W	
R 34	carbon resistor			
R 38	carbon resistor	20 k	Ω 0.5 W	
R 40	carbon resistor		Ω 0.5 W	
R 41	carbon resistor		Ω 0.5 W	
R 43	carbon resistor		Q 0.1 W	
R 44	carbon resistor		0 0.1 W	
R 45	carbon resistor			
R 46	potentiometer		Ω 0.5 W	
R 47	carbon resistor			
R 51	carbon resistor	160	0 1 W	
R 52	wire-wound resistor		25 1	
R 53	carbon resistor	160	**	
R 54	wire-wound resistor	50		
R 55	wire-wound resistor	50		
R 56	carbon resistor	160		
R 57	carbon resistor	160		
R 58	carbon resistor	160	Ω 1 V	T 270

^{*)} Ra = R41 + R40 (or R41 + R1 or R2) in series.


CAPACITORS

No.	Art	Value	Max. DC voltage	Notice
C 1	Box-type capacitor	8 μF	160 V	
C 2	Paper capacitor	0.1 µF	160 V	
C 3	Paper capacitor	1 μΕ	160 V	

Tube E1 (6Z31)	-	1AN	110 41
Pilot lamp 0.3/7		1AN	109 00
Measuring instrument		1AP	780 22
Fuses cartridge ČSN 35 4731			0.1/250
Fuses cartridge ČSN 35 4731			0.6/250
Fuses cartridge ČSN 35 4731			1/250

Technological changes are reserved.

Nápisy na kartách	Instruktions on the cards	Падписи на карточках	Kartenanschriften	
Výjimka	Exception	Пеключение	Ausnahme	
Kolik zasunut	Plug pushed in	Штифт вставлен	Kontaktstöpsel eingesteckt	
Neměřit v poloze "S" a "Vakuum"	Not to be measur- ed in the position "S" and "Vacuum"	Пе измерать в по- ложении "S" и "VACUUM"	In der Stellung "S und "Vacuum" nicht prüfen	
Zkrat FK neni závada	Short FK not considered as default	Короткое замыка- ине FK не ивли- ется дефектом	Kurzschluss FK bestimmt kein Defekt	
Kolik zasouvat postupně	Plug to be pushed in successively	Штифт вставлять ностепенно	Kontaktstöpsei nacheinander einstecken	
Na čepičce je napětí	Voltage on the cap	На колпак при- соединено на- пряжение	Vorsicht — Span- nung auf der Röhrekappe	
Zkrat FK a FG1 není závada	Short FK and FG1 not considered as default	Короткое замыка- ние FK и FG I не я- вляется дефектом	und FG1 bestimm	

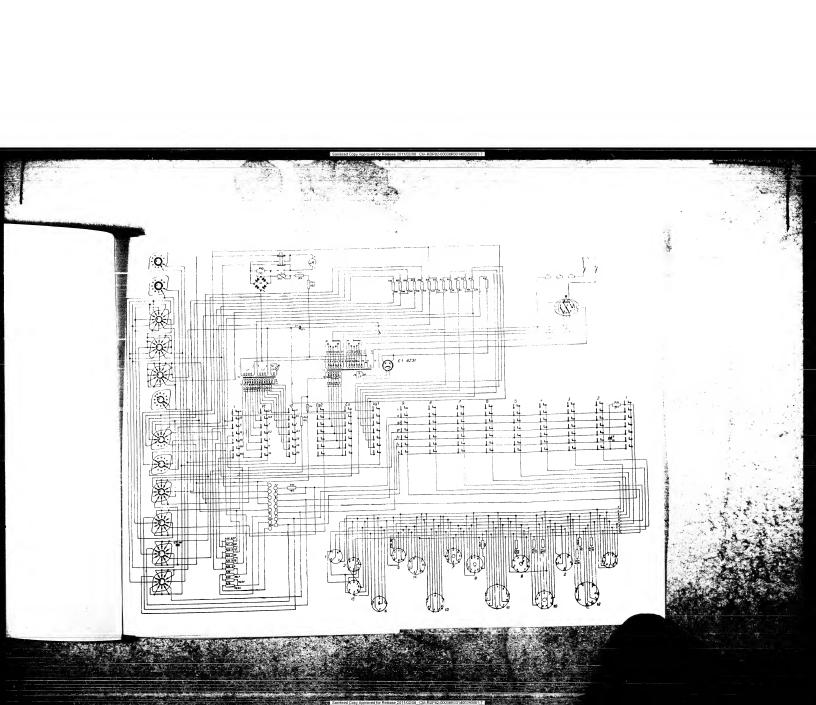


Konstrukční změny vzhledové a technologické vyhrazeny Další překlady a publikace pouze se souhlasem dokumentační skupiny výrobního závodu



PŘESNÝ TÓNOVÝ GENERATOR ŽEBBA DM 269

přesní tómoví generátor tesla ba 269

Návod k obsluze pro přístroje vyrobní číslo 101501 - 101900

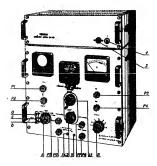

- P1 posuv bodu v horizontálním směru
 P2 posuv bodu ve vertikálním směru
 P3 nastavení jasu bodu
 P4 zaostření bodu
 P5 regulece šíře časové základny
 P6 připojení el voltmetru na výstup

1170

- P? nastavení nuly el. voltmetru P8 jemná regulace výstupního napětí A hrubé regulace výstupního napětí

- a výstupní svorka 1. výstupu
 b výstupní svorka 2. výstupu
 c svorka o nulovém potenciálu
 Il hrubé nastavení knitočtu
 I2 jemné nastavení knitočtu
 R přepinač knitočtových rozsahů
 I regulace výšty obrazu
 II regulace výstupního napětí
 Z kontrolní žárovka
 V vypinač

```
TECHNICKÉ ÍDATE
```

63

```
Kmitočtový rozsah:
                          11 Hz - 22 kHz v sedmí pásmech
```

B 30 Hz = 35 Hz
B 30 Hz = 90 Hz
C 75 Hz = 230 Hz
D 200 Hz = 670 Hz
E 655 Hz = 2300 Hz
F 2000 Hz = 7000 Hz
G 6500 Hz = 22000 Hz

Přesnost odečítání kmitočtu:

a) ± 5.10⁻⁴ pomocí vestavěného normálu a obrazovky

b) přímé čtení na stupnici ± 0,5 % ± 0,2 Hz

pro f > 30 Hz a f < 100 Hz menší než 1 % pro f > 100 Hz menší než 0,5 % při výstupním nepětí 5 V neprázdno

změny teploty okolí 20°C ± 10°C Tepelná stálost: nemění vlastnosti přístroje

Výátupní napětí: základní napětí O až 10 V plynule nastavitelné. Na výstupní svorky je připojeno přes dekadický atenuátor O dB, -20 dB, -40 dB, -60 dB, -80 dB.

Na rossasích A, B se nedoséhne výstupního napětí 10 V.

Kmitočtová charakteristika výstupního napětí:

pro rossahy C, D, E, F, G je pokles kmitočtové charakteristiky -5 dB (porovnáno s výstupním napětím 10 V na počátku uvedených rossahů).

Pro rozsehy A, B je pokles kmitočtové cherakteristiky větší než 3 dB (porovnáno s výstupním napětím 10 V na konci uvedených

rozsahů).

Stabilita výst. napětí: se změnou sítě ± 10 % je ± 2 %

pro f > 100 Hz max. 1 % pro f < 100 Hz > 1 % Symetrie výstupu:

přesnost nastavení jednotlivých stupňů Přesnost děliče:

děliče je ± 0,5 %

cca 500 Q na rozsahu -20 až-80 dB Výstupní impedance:

± 3 % Přesnost voltmetru:

se změnou sítě ± 10 % se mění údaj Stabilita voltmetru: o ± 4 % z plné výchylky měřidla

Interference výstupního

napětí se sítovým kmitočtem: 2 %

generator: 2 x 6F31, 2 x 6F36, 3 x 6L31, 1x 6F32 (1 x 6F32V),1 x 6CC31, 2x 6BC32, 1 x 7QR20, křemehný krystal 10 kHz, 2 x žárovky 220 V/15 W

Mignon.

napájecí zdroj: 1 x AZ11, 1 x AZ4, 1 x 1Y32, 2 x 11TA31, 1 x 11TF25, 1 x BGW 210 - 230 V

220 V nebo 120 V, 50 Hz Napájení:

cca 140 W

příslušne stupnici proti rysce ukazatele. Knoflíkem L2 otáčíme jemno v obou směrech, až se obrez na stínítku obrezovky zastaví. Pro inter-polační způsob měření s cejchování slouží stupnice na obvodu stupni-cového kqtouče, která je rozdělena na 200 stejných dílků. Odečítání hodnot se provádí s přesností <u>t</u> 0,1 dílku pomocí nonia. Pod krycí zátkou I je potenciometr R25, kterým je možno dostavit výšku obrozu. Pod krycí zátkou II je potenciometr R26, který umožňuje korekci mu-ximální hodnoty výstupního nepětí.

PŘEJNÉ ST. NOVENÍ KLITOČTU

Přesný kmitočet stanovíme metodou Lissajousových obrazců. Objeví-li se na stínítku obrazovky stojící obraz, platí pro neznámý kmitočet

$$\frac{f_X}{f_Z} = \frac{m}{n} \Rightarrow f_X = f_Z = \frac{m}{n},$$

kde f $_{\rm Z}$ je kmitošet subnormálu, který se nastaví outomaticky přepnutím přeplance R na příslušný kmitotový rozah, n a m jsou celá čísla. Ze stojícího obrozce na stinítku lze určit vzájemný poměr kmitočtů f $_{\rm X}$ n f $_{\rm Z}$ nejjednodušeji přetnutím obrozce v okolí středu vodorovnou a svislou přímkou tak, aby neprocházely žádným průsečíkem stop. Vodorovná přímka protne stopu na stinítku makrát, svislá protne stopu nakrát, jak putrno z obrázku Sc. Tíno způsobem přesně nastavíme dva okrajové kmitočty v rozahu, čo smalu se protne stopu na kráty jak putrno z obrázku Sc. Tíno způsobem přesně nastavíme dva okrajové kmitočty v rozahu, čo smalu se protne stopu na okrajové kmitočty v rozahu. okrejové knitočty vrcene pak jakýkoliv kmitočet odečtením na stupnici.

Příklad stanovení kmitočtu pomocí obrazovky:

) f _z = 200	Hz (pro re	ozsah A - C)		
obr.	m	n	f _z (Hz)	f _x (Hz)
5a	2	10	200	40
5 b	2	8	200	5C
5c	2	4	200	100
5đ	6	8	20C	15C

Tímto způsobem stanovíme neznámý kmitočet $\mathbf{f}_{\mathbf{x}}$ s přesností \pm 5.10⁻⁴. Viz obr. 5a, b, c, d.





$$f_x = f_z - \frac{m}{n} = 200 - 2 = 40 \text{ Hz}$$
obr. 5a

$$E_{\rm x} = 200 \frac{2}{8} = 50 \text{ H}$$

$$gf_{x} = 200\frac{2}{4} = 100 \text{ Hz}$$
obr. 50

$$r_x = 200 \frac{6}{8} = 150 \text{ Hz}$$
obr. 5d

2) $f_z = 1000 \text{ Hz}$ (pro rozsah D -.G)

obr.	т.	. n	f _z (Hz)	f _x (H ₂
6a	2	10	1000	200
െ	4	10	1000	400
6e	6	10	1000	600
6a	14	4	1000	5500

Elektrická rozpiska.

odpory:



$$f_X = 1000 \frac{2}{10} = 200 \text{ Hz}$$
 $f_X = 1000 \frac{4}{10} = 400 \text{ Hz}$ obr. 6a obr. 6b





$$t_{\rm x} = 1000 \frac{6}{10} = 600 \text{ Hz}$$
 $t_{\rm x} = 1000 \frac{14}{4} = 3500 \text{ Hz}$ obr. 6c obr. 6d

Číslo Norma odpor vrstvový
odpor vrstvový
potenciometr vrstvový
odpor vrstvový THE 103 ML/A
THE 105 EE/A
THE 105 MM/A
THE 1

| Care | Sensor | Sen

- 13 -

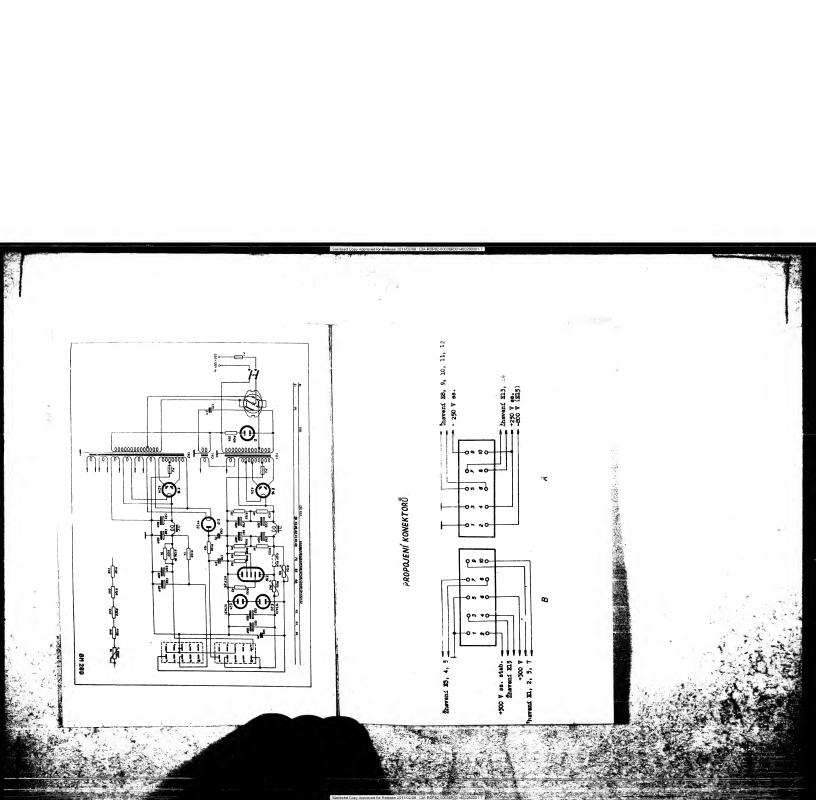

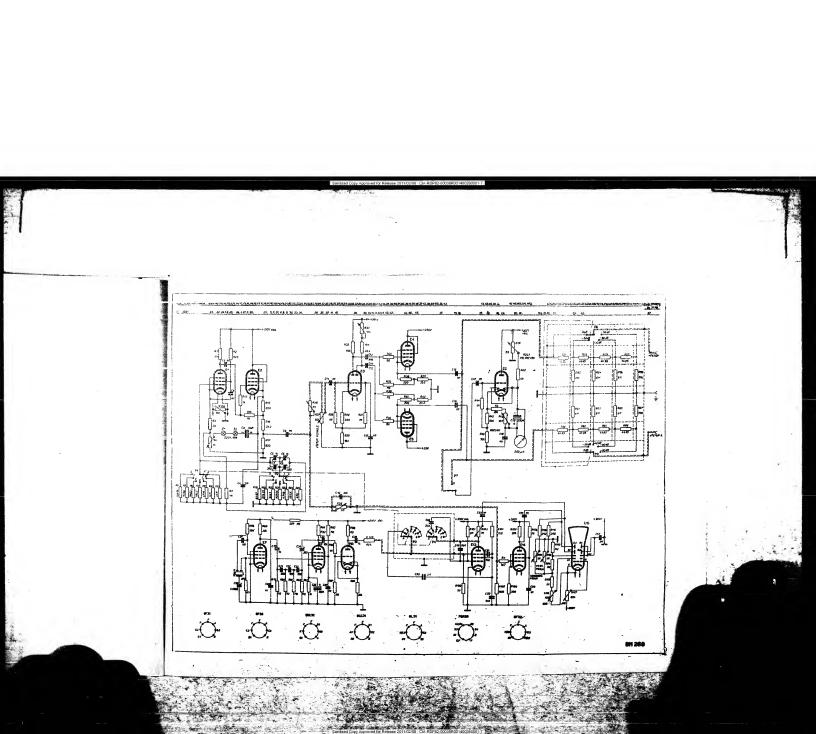



NAPÁJECÍ ZDROJ TESLA BS 275

NAVODK OBSLUZE

NAPÁJECÍ ZDROJ TESLA BS 275




Obr. 1

Napájecí zdroj Tesla BS 275 má široké použití ve všech oborech elektrotechnického průmyslu. Používá se s výhodou pro napájení různých slaboproudých zařízení, na př. v opravářské praxi nebo v laboratořích k napájení některých pokusných montážních dílců při výzkumných a vývojových pracích atd.

Napájeci zdroj Tesla BS 275 je jedním ze základních přístrojů a představuje nejnutnější vybavení každého pracoviště v slaboproudém oboru elektrotechniky.

VŠEOBECNÝ POPIS.

Přístroj je zabudován do celokovové skříně opatřené vkusným koženým držadlem pro snadné přenášení. Výstupní svorky, kontrolní měřicí přistroje a všechny ovládací prvky jsou soustředěny na čelní stěně, která je kryta štítkem s nápisy. Pohled na přistroj předu je na obr. 1. Na zadní stěně je umístěna zásuvka stíové šnůry, voliče střového napětí, pouzdra s pojistkami a zemnicí svorka. Zadní stěna je znázorněna na obr. 2.

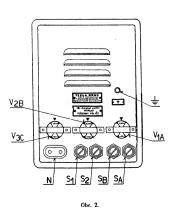


FUNKČNÍ POPIS.

Napájeci zdroj BS 275 sestává ze dvou samostatně regulovatelných stejnosměrných zdrojů A a B a samostatného zdroje střídavých žhavicích napětí C (obr. 3).

Výstupní napětí obou stejnosměrných i drojú se reguluj. změnou předpětí řídicích mřížek strmých pentod, které svým anodovým prudom ovládají vnitřní odpor výkonových elektronek.

Zdroje lze propojovat paralelně, seriově nebo proti sobě, takže můžeme odebírat výstupní napětí prakticky od 0 až do 700 V. Oba zdroje jsou stabilisovány. Stabilisace je nejtáčnnější v oblastech středních napětí. Stejnosměrné napětí a odebíraný proud se kontroluje ručkovými měticimi přístroji na čelním panelu, které se přepinačem P2 (ob. 1) připojují buď k jednomu nebo k druhému zdroji. Přesnost těchto kontrolních měřídel je 2,5 %.

PRINCIPIÁLNÍ SCHEMA.

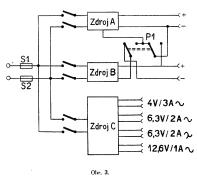

NÁVOD K OBSLUZE A POUŽITÍ NAPÁJECÍHO ZDROJE typ BS 275.

PRIPOJENÍ NA SÍT

Zdroj BS 275 se připojuje na síť 220 V nebo 120 V, 50 c/s přívední sífovou šňúrou, která se dodává jako příslušenství přístroje. Před připojením sífové šňůry nutno překontrolovat, zda všechny voliče sífového napětí $V_{\rm LA}, V_{\rm 2B}, V_{\rm 3C}$ jsou správně přepojeny. Přepojeni zjistime podle údaje napětí pd trojúhelníkovou značkou (obr. 4). Je-li nutno přístroj přepoji na sífové napětí 120 V, odšroubujeme ne prve zajišťovací půsky, potom všechny přepojovací koloučky vytáhneme a



obi. i.

opět zasuneme v takové poloze, aby pod trojúhelníkovou značkou byl údaj "120". Po přepojení zajišťovací pásky opět upevn'me. Přístroj je z výrobního závodu přepojen na 220 V.

Vpravo od siťové násuvky N (obr. 2) jsou umístěny pojistky v bakelitových pouzdrech:

S_1	1,6	Α	pro	220	V	síť	(2,5)	Α	pro	120	V	síť)
S_2	1,6	Α	pro	220	V	síť	(2.5	Α	pro	120	V	sit)
S_B	0,12	Α										
S.	0.12	Α										

POZOR!

Při přepojování voličů sífového napětí neopomeňte vyměnit pojistky S1 a S2! Náhradní pojistky pro 220 i 120 V jsou v papírovém sáčku zavěšeném na koženém držadle.

OVLÁDACÍ PRVKY.

Všechny ovládací prvky jsou umistěny na čelní stěně př.stroj. Přepojování kontrolních měřicích přistrojů na zdroj A nebo B (obr. 3) umožňuje přepinač P2 (obr. 1) se dvěma polohami vyznacenymi na štítku. Potenciometry R11, R24 slouží k regulaci nupětí siejnosměrných zdrojů. Vypinačí V_A,V_B,V_C se zapínají jednotlivý zdroje A, B, C; P1 zapojuje zdroj A a B v poloze "200–350 V" nejsou výstupy propojeny.

Ovládací prvky a všechny výstupní svorky jsou označeny nápisy na štítku, takže orientace je velmi snadná. Zemnici svorka je umístěna na zadní stěně a je označena štítkem $\frac{1}{\pi}$

POUŽITÍ PŘÍSTROJE.

Během provozu přístroje je nutno kontrolovat cdebíraný proud. Odebíraný proud nesmí překročit hodnoty uvedené v technických údajích, jinak jsou ohroženy elektronky přístroje.


ZDROJ "A" SAMOSTATNĚ.

Zdroj A se zapíná vypinačem V_A (obr. 1) a dovoluje cdběr ss stabilisovaného napětí, které je r:galovatelné pot neiemetrem R11 v rozsahu 200 až 350 V. Přepinač P1 je přitom v poloze "200–350 V". P2 přepnut do polohy "MĚŘENÍ ZDROJ A", ve které ko;ro'ní přístroje měří napětí a odebíraný proud zdroje A (levá poloha).

Výstupní napětí se odebírá ze svorek označených "A". Proud nesmi překročit hodnotu 70 mA.

INFORMATIVNI KŘIVKY

ZDROJ A a B SAMOSTATNĚ.

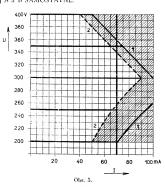

Srafovaná oblast udává přetížení zdroje.

Zatěžovací křivky jsou informatívní a jsou měčeny při síť. napětí 220 V. Křivky l ohraničují oblast přetížení zdroje při síť. napětí 220 V. Křivka 2 ohraničuje oblast přetížení zdroje při síť. napětí 220 V + 10%.


ZDROJ "B" SAMOSTATNĚ

Manipulace při využití druhého zabudovaného zdroje (B) je obd.bní jako v předešlém případě. Do chodu se uvede vypinačem BV, regulace výstupního napětí se provádí po:enciometrem R24. Přepinač P1 je v poloze "200—350 V", výstupní svorky jsou na štítku označeny "B". Výstupní napětí 200 až 350 V a odebíraný proud kontrolují měřicí

přistroje v pravé poloze přepinače P2 (MERENÍ, ZDROJ B). Proud nesmí překročit hodnotu 70 mA. Při činnosti obou zdrojů sončasně je možno přepinač P2 přepnout během provozu do kterékoliv z oboa velob.

SPOJENÍ ZDROJŮ A a B ZA SEBOU

Spojení obou stejnosměrných zdrojů za sebou dává možnost odběru ss napětí v rozsahu 400 až 700 V. Zatěžovací proud nesmí překročit hodnotu 60 mA. Při větším zatížení (cca 60 mA) je důležité, aby napětí zdrojů A a B byla stejná. Jinak může být zdroj s nižším napětím přetížen. Propojení obou zdrojů je vyznačeno v obr. 6.

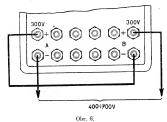


Velikost výstupního stejnosměrného napětí se i íd. potenciometry R11 a R24. Výstupní napětí se měří voltmetrem tak, že přejnianě P2 přepínáme střídavě z jedné polohy do druhé za součaného regulování obou zdrojů potenciometry R11 a R24. Naměřené hodnoty se sečítají. Velikost odebíraného proudu se odečítá na stupnicí miliamp. rmetru přímo.

PARALELNÍ SPOJENÍ - ZDROJ A + B

Při tomto spojení lze výstupní napětí regulovat v rozsahu 200 až 350 V. Výstupní svorky A a B se propojí iso!ovanými kabl:ky a od-

pory 50 Ω podle obr. 7. Vřazením ochranných odporů ovšem úměrně stoupne vnitřní odpor zdroje.

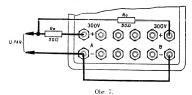


Zádané výstupní napětí se nastaví oběma potenciometry R11 a R24 tak, aby neprotékal vyrovnávací proud — miliampérmetr musí ukazovat v obou polohách přepinače P2 stejnou výchylku při zatížení, nebo bez zátěže nulu.

Při delším provozu se doporučuje provádět častější kontrolu správného nastavení potenciometrů R11, R24, poněvadž vyrovnávací proud může vznikhout i při obvyklých změnách sifového napětí.

Celkový odebíraný proud při napětí sítě = 220 V + 10% nesmí překročit hodnotu 120 mA při U = 200 – 240 V 140 mA při U = 240 – 350 V.

VÝSTUPNÍ NAPĚTÍ 0-200 V


Napětí v rozsahu 0-200 V se získá při spojení zdroje A a B proti sobě. Oba zdroje zapneme příslušnými vypinači (VA a VB), přepinač P2 přepneme do polohy "MĚŘENÍ ZDROJ A". Potenciomeiry R11 a R24 vytočíme úplně doleva, přepinač P1 přepneme do polohy "0-200 V". Otáčením doprava nastavíme R24 tak, aby voltmetr ukazoval nulovotu výchylku a pak pomocí R11 nastavíme žádané výchostavení sprátí Myčiří Majeria pod procesaní procesaní vypinace v procesaní procesaní vypinace v procesaním vypinace v p stupní napěří. Nestači-li rozsah napěří regulací RII, zvětšíme jej pomocí R24 otáčením doleva. Takto lze nastavit až cca 200 V, která odebíráme ze svorek "A". Svorky "B" jsou přitom bez napě.í. Odebíraný proud nesmí překročit hodnoty určené omezovací křivkou zakreslenou v obr. 8.

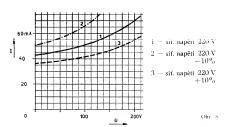

NAPĚTÍ PRO ŽHAVENÍ ELEKTRONEK

Napájecí zdroj BS 275 má rovněž 4 páry svorek na sobě nezávislých. Napajet zdroj US 273 lia ložica. I pary svete na soci nazavstati na nichž jsou vyvedena bězán napětí pro žhavení elektronek: 4 V/3 A. 2× 6,3 V/2 A, 12,6 V/1 A. Tato napětí jsou získávána ze samostat-ného zdroje C. Začátky vinutí tohoto zdroje jsou připojeny vždy na horní svorky, konce na spodní. Svorky nejsou uzemněny, takže je možno kteroukoliv z nich připojit na kostru, nebo jednotlivé páry libovolně mezi sebou propojovat.

Příklad propojení svorek v serii je na obr. 9.

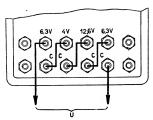

Obr. 9

ZARUKA A OPRAVY

Výrobní závod poskytuje na každý přistroj 6 měsíční záruku podle všeobecných záručních podmínek platných pro výrobky n. p. Tesla

Vady, které se na výrobku vyskytnou během poskytovaní zárační thúty a budou způsobeny chybami při výrobě, nebo špatnými technolegickými vlastnostmi použitých materiálů, budou bezplatně opraveny. Garanční povinnost výrobuího závodu zaniká při porušení plomby nebo při provedení jakýchkoliv cizích zásahů do elektrické funkce či mechanické konstrukce přistroje.

Opravy přístrojů v záruce i mimo záruční dobu provádí výrobní záved odborně vedenou service opravnou.

Bude-li někdy třeba zaslat přístroj k opravě nebo k přezkoušení, zašle:e jej pokud možno v původním balení s připojeným záručním listem a popisem závady na adresu:

TESLA

n. p., Brno, Čechyňská 16.

ROZPISKA EL, SOUČÁSTÍ

Odpory

Ozna- čení	Druh	Norma
R1 R2 R3	odpor vrstvový odpor vrstvový odpor vrstvový	TR 103 M32 B TR 103 M4, B TR 103 M32-B
R4 R5	odpor vrstvový odpor vrstvový	TR 103 M4 B TR 103 M1 TR 103 M125
R6 R9 R10	odpor vrstvový odpor vrstvový odpor vrstvový	TR 103 M2 B TR 103 M1/B
R11 R12	potenciometr odpor vrstvový	WN 696 04/50k/N TR 103 32k/B
R14 R15	odpor vrstvový odpor vrstvový	TR 103 M32/B TR 103 M4/B TR 103 M32/B
R16 R17 R18	odpor vrstvový odpor vrstvový odpor vrstvový	TR 103 M4'B TR 103 M1
R19 R20	odpor vrstvový odpor vrstvový	TR 103 M125 TR 103 M32 B
R22 R23	odpor vrstvový odpor vrstvový	TR 103 M2/B TR 103 M1/B WN 696 04/50k N
R24 R25	potenciometr odpor vrstvový	TR 103 32k/B TR 611 12k5
R27 R28 R29	odpor drátový odpor drátový odpor vrstvový	TR 611 12k5 TR 103 M32/B

Kondensátory

C1	kondensátor elektrolytický	TC 519 50M
ČŽ '	+ C3, C12 + C13 kondensátor	TC 521 32/32M
C4 C5 C6 C7 C8 C9 C10 C11 C14 C15 C16 C17	clektrolytický kondenastor elektrolytický kondenastor svitkový kondenastor svitkový kondenastor MP krabicový kondenastor MP krabicový kondenastor MP krabicový kondenastor MP krabicový kondenastor svitkový kondenastor svitkový kondenastor elektrolytický kondenastor elektrolytický kondenastor MP krabicový kondenastor svitkový	TC 519 50M TC 124 1k TC 485 2M TC 124 64k/A TC 485 5M TC 125 64k/B TC 124 64k/B TC 519 50M TC 519 50M TC 124 1k TC 485 2M TC 142 64k/A


C18 kondensitor MP krabicový TC 485 M1
C19 kondensitor MP krabicový TC 485 M2
C20 kondensitor svitkový TC 124 64k/B

OSTATNÍ EL, SOUČÁSTI

Součást	Тур	Norma — výkres
Méridlo		1AP 780 15
Métidlo		1AP 780 16
Elektronka E1, E2	AZ4	1111 700 10
Elektronka E3, E4	61.50	i
Elektronka E5, E6	6F36	
Stabilisátor E7, E8	12TA31	
Vložka 1,6 A/250 V		ČSN 35 4732
Vložka 0,12A/250 V		ČSN 35 4731

NÁHRADNÍ DÍLÝ

Název dílu	Norma	výkres
!	-	-
Kostra zdroje		IAF 196 29
Objimka lamelová	PK 0004	PK 497 03
Objimka elektronky	P1A 0024	1AK 497 04
Objimka elektronky s krytem	P1A 0023	WK 497 01
Objimka elektronky s krytem	PIA 0023	WK 497 02
Přepinač		IAK 533 28
Vypinač dvojpólový	P1A 0022	1AN 569 05
Přepinač dvojpolový	P1A 0022	IAN 569 07
Svorka isolačni	PK 0033	XK 484 01
Držák pojistky kompletní	P1A 0018	1AK 489 02
Držák pojistky kompletní	PIA 0018	1AK 489 01
Zásuvka voliče	P1A 0003	1AF 465 00
Zasuvka voliče Zastrčka voliče	P1A 0003	IAF 462 00
	P1A 0007	1AK 483 00
Sverka	I IA GOO	1AN 650 00
Tlumivka		1AN 650 06
Tlumivka		1AF 836 04
Deska svařená	!	IAN 661 28
Transformátor sítový	į.	1AN 661 29
		1AN 661 30
Transformátor sítový		1AF 526 00
Müstek	P1A 0028	1AF 243 10
Knoflík	P1A 0028	1AF 243 22
Knoflík malý se šipkou	1	1AF 694 14
Kryt sestavený	D14 0007	1AK 641 06
Šňůra síťová	P1A 0027	1AA 169 19
Čelo přední		1AA 169 19
Čelo zadní	D	1AF 178 01
Držadlo kožené	P1A 0019	1AF 488 04
Hlavice pojistková kompl.	P1A 0018	
Držák elektronek	P1A 0020	1AF 631 00
Můstek		1AF 526 01
Müstek		1AF 526 04

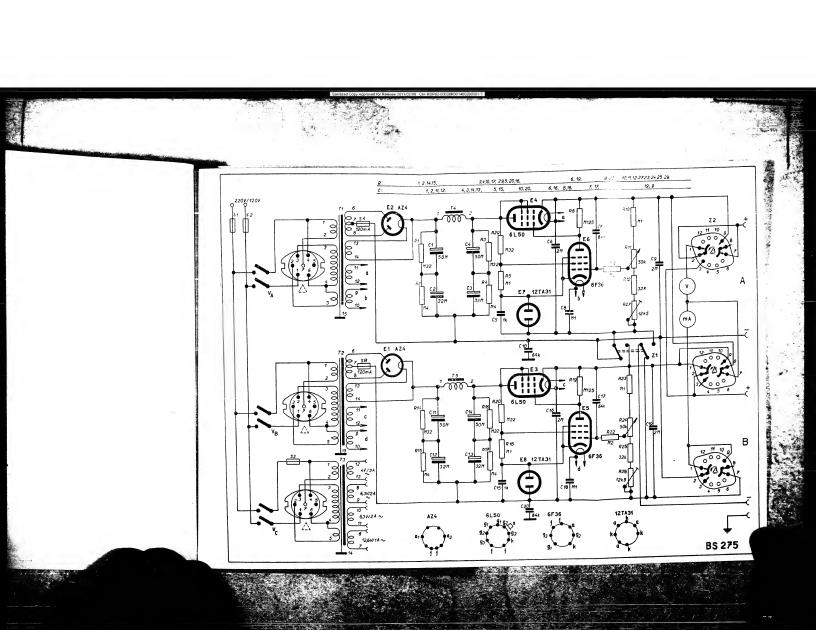


Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-7



rc chykrátok tesla by 344.

お、聖太子公衛

RC GENERÁTOR TESLA BM 344 Návod k obsluze.

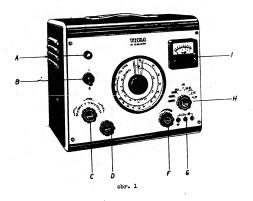

- signální žárovka
 vypinač sítě
 přepinač rozsahů kmitočtu
 jemná nestevení kmitočtu
 jemná regulace výstupního napětí
 výstupní zdířky
 dčlič výstupního napětí
 měřidlo výstupního napětí


POUŽITÍ

RC generátor EM 344 má rozsáhlá možnosti použití v mářicí technice při zjišťování citlivosti, skreslení, kmitočtových charekteristik různých přístrojů v rozsahu od 20 Hz do 1,4 MHz, ve spojení s volt-metren Teala EM 384, oscilografem TM 694 a měříčem skreslení EM 224. RC generátoru lze rovněž použít jako zdroje střídavého napětí o pro-měnném kmitočtu pro napájení různých zařízení.

Výhodou přístroje je malé skreslení, kmitočtová stabilita, velké a stálé výstupní napětí v celém kmitočtovém rozsahu, kontrola výstup-ního napětí vestavěným voltmetrem, plymulá a stupňovitá regulace výstupního napětí a malý výstupní odpor.

Oscilátor tvoří elektronka El a E2. El jako zesilovač, E2 jako ka-todový sledovač; z její katody se vede dvojí vazba: kladná, kmito-čtově nezávislá se stabilisací oscilačního napětí pomocí žárovek. čtová nezávislá se stabilisací oscilačního napětí pomocí žárovek. Záporná, kmitočtové závislá vlivam ED filtru tvaru přemostáného 7, přes který se přivádí napětí na mřížhu první elektronky. Nastavení prvhl R a C ve filtru určuje kmitočet, pro který je záporná zpětná vanba nejmenší a na níž tedy kmitá oscilátor. Kmitočtové rozsahy vasba nejmenší a na níž tedy kmitá oscilátor. Kmitočtové rozsahy jesu určeny přepinánía odpord ve řiltru a plymilá meňna kmitočtu se provádí dvojnásokopia otočným kondensátorem. Secilátor je oddělan od výstupu katedovým sledovačem (35), který součensé umožňuje plymulou regulaci výstupního napětí pomocí potenciometru F od 0 do 0 v. Magulace výstupního napětí pomocí potenciometru F od 0 do 0 tv. Asgulace výstupního napětí pomocí potenciometru F od 0 do 0 v. Osovatevního výstupním voltmetrem zapojeným před 10 v de 0,003 v. Vestavšným výstupním voltmetrem zapojeným před stupnovitý dělič se komtroluje výstupním požtí. Měřídlo má stupnici pro 10 v. 3 v a stupnici v dB pro amadnější zjišťování kmitočtových charakteristik.

funkční zapojení

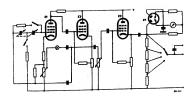

obr. 2

Před připojením přístroje k síti se přesvědčíme, zda je přístroj přepojen na správné sítové napětí. Přepojení se provádí kotoučkem

voliče napětí na zadní stěně přístroje. Vyšroubujeme šroub uprostřed voliče napětí, kotouč voliče povytáhneme a nato-číme tak, aby číslo udávající správné síťové napětí bylo pod trojúhelníkovou značkou. Šroub potom opět zašroubujeme. Je-li kotouček v poloze naznačené na

obrezku, je přístroj přepojem na sítové napětí 220 V. Při změně sítového napětí je třeba rovněž zkontrolovat hodmotu pojistky. Pro napětí 220 V

je předepsána pojistka 0,5 A, pro napětí 120 V je správná hodnota

Pristroj zapneme vypinaćem V a necháme asi 30 minut v chodu, aby se ustálila teplota. Chod sít.části přístroje indikuje žárovka A.

OBSTITUA


Při provozu není nutno přístroj uzemnovat, neboť jeho kryt je zepojen přívodní sítovou šnůrou na ochranný vodič. Celý kmitočtový rozsah je rozdělen do 5 dílěích rozsah; pro rozsah; I až IV, tj.
od 20 Hz do 200 MHz, platí společná stupnice (vnější). Pro rozsah
V (0,2 MHz až 1,4 MHz) je samostatná stupnice (vnitřní). Žédaný kmitočtový rozsah nastavíme přepinačem C. Kmitožet generátovu nastavíme knožlíkem D. Výstupní zdířky G (obr. 1) jsou rozmístěny podře obrázku (obr. 4). Zdířka 1 je spojena s kostrou. Mezi zdířkou hedi zdříkou la 3 je výstupního děliče. Mezi zdříkou la 3 je výstup přes katacitu 0,1 µF pro při-

pojení napětí z generátoru do místa se stejnosměrným napětím nebo předpětím o mux. hodnotě do 500 V. Vý-stupní napětí lze plynule měnit potenciometrem F a skokem pc 10 dB přepinačem H. Kontrola nastaveného



vystupního napětí se provádí vesta-obr. 4 vknym voltmestrem I, jenš má 2 stup-nice pre lo a 5 V a stupnicl v dB. Přepínání výstupního napětí po 10 dB a decibelová stupnice na měřídle umožnují snímání kmitočtových charakteristik různých čtyřpolů bez přepočítávání, odečítá-me-li potřebné vstupní napětí (v dB), přiváděné z RC generátoru při zachování stálěho napětí na výstupu čtyřpolu. Tento způsob je wyhodny v těch případech, kdy výstupní volimeri nemá stupnící cej-chovanou v dB. Označení v dB vztahujeme k výstupnímu napětí MC ge-neratiou. Přitom hodnota O dB odpovídá napětí O.775 V, t.j. 1 mW na 600 Q podle mezinárodní normy. Při záznemu knitočtové charakteristiky popsaným způsobem mutno ovšem zaznamenat odečtené odchylky v dB s opačným znaménkem.

Na zadní straně přístroje (obr. 5) je potenciometr označen "VAZBA", jímž je možno nestavit výstupní napětí až na hodnotu 15 V. Současně se ovšem zvětší skreslení a zhorší přesnost čtení kmitočtu. Dále je na zadní stěně umíštěn odbručovač označený R47, který byl při výrobě nastaven na minimální interferenční kolísání při kmitočtu 50 Hz.

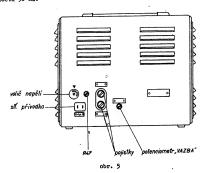

PŘÍSLUŠENSTVÍ

Příslušenství přístroje tvoří sítová šnůra s vidlicí a nástrčkou a sáček s náhradními pojistkami pro síť 220 i 120 V a náhradní anodovou pojistkou.

TECHNICKÉ ÚDAJE

Kmitočtový rozsah: 20 Hz - 1,4 MHz v 5 překrývajících se rozsasích.

200 Hz 2000 Hz II 200 A IA III 20 20 kHs 200 kHz

Přesnost kmitočtu: po půlhodině od zapnutí na prvním až čtvrtém

rozsahu ± 2 % ± 1 Hz

Skreslenf:

od 20 Hz do 200 kHz ≦ 0,5 %

Výstupní napětí:

plysule nastavitelné potenciometrem od 0 do 10 V. (Potenciometrem Eledné vasky lze v pří-padě potřeby nastavit asi 15 V se změnou akreslení a kmitočtu na 5. ressahu.)

Stupňovité ovlédění výstupního napětí děličem:

Výstupní impedance:

		•							
10	3	1	0,5	0,1	0,05	0,01	0,003	٧	١.
+20	+10	0	-10	-20	-30	-40	-50	đΒ	1
	2000	200	200	20	20	20	20	5	1
(#)	1 400	200	200	20_	20	20	20	127	1 -

aku 10 V je napětí odebíráno s katodového sledoveče.

děliče :

voltmetru:

teristim:

v celés rossein ± 1 dB

ní přístroje: lz MBSL, 3z 6145, lz 6852

ed af€ 220 mebo 120 V ± 10 %, 50 Hs

Jištění:

síťová pojistka 0,5 A pro 220 V, síťová pojistka 1 A pro 120 V, anodová pojistka 0,16 A

Příkon:

asi 60 W 10 kg

Váha:

270 x 330 x 240 mm Rozměry:

příklady měření

Široký kmitočtový rozsah RC generátoru Tesla BM 344 umožňuje jeho používání při nejrůznějších elektronických měřemích v oboru skustických i vř kmitočtů. Různými možnostmi použití se stal RC generátor BM 344 jedním ze základních elektronických měřicích přístrojů, které jsou nutné pro vybevení kažké laborstoře. Elektronické měřicí přístroje a metody se používají mejen ve všech odvátvích elektrotechniky, ale i ve strojírenství, chemii, biologii a jimde.

Pojednámí o oscilografických měřicích metodách a o problematice elektronických měření, měřicích přístrojů a nejrůznější oscilogra-fická měření s použitím RC generatoru nalezne zájemce v odkazu na podrobnou literaturu str. 17.


Základní elektronická měření při použití RC generátoru Tesla EM 344 jsou zde popsána pro názor jen v několika nejběžnějších případech.

Měření kmitočtu

Metoda Lissajousových obrazců.

1. RC generator Tesla BM 344 2. Service oscilograf Tesla TM 694 3. Zdroj neznámého kmitočtu

-7 -

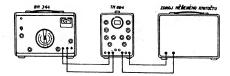

Generátoru EM 344 použijeme v tomto případě jako vnější časové základny. Jestliže souhlasí kmitočet generátoru přesně s kmito-čtem měřeným, objeví se na stínítku obrazovky stojící obrazec. Má-li měřené napětí sinusový průběh, je obraz kružnice, elipsa nebo přímka. Při průběhu jiném (obdélníkový, pilový std.) je obraz nebo přímka. Při průběhu jiném (obdělníkový, pllový stá.) je obraz na stinítku skreslen. Je-li, jeden ze srovnávacích kmitoštů celistvým násobkem druhého, dosteneme jednoduché obrazce, jejichž tvar se mění vlivem řásováho posunu. Na obr. 7 jsou Lissajousovy obrazce pro poměr kmitoštů 2: 1, 1: 2 a 5: 1. Není-li jeden z kmitoštů celistvým násobkem druhého, ale je-li poměr vyjádřem poměrem celých čísel, dosteneme slošitější tvar, jehož příklad je na obr.8 pro poměr 5: 4, 3: 2 a 2: 3. Poměr je dán poměrem poštu vrcholů obrazce na jedné straně k počtu vrcholů na druhé straně vaniklého obdělníhu.

Platí jednoduchý vstah:

$$f_v = \frac{m}{n} \cdot f_h$$

kde $\hat{\mathbf{f}}_{\mathbf{v}}$ je kmitočet napětí přivedeného na vertikální zesilovač (nebo na vertikální vychylovací destičky) s $\mathbf{f}_{\mathbf{h}}$ je kmitočet napětí přivedeného na bortzontální sesilovač (nebo destičky). Počet vrcholů v rovině vodcrovné je pak osnečen a a v rovině svislé n (obr.8).







obr. 7

Přesnost měření je dána přesností použitého cejchovaného generátoru, v tomto případě RC generátoru TESLA EM 344.






Delší metody měření kmitočtu jsou popsány v publikaci [1], [2], [3], [4], [6]. (Viz seznam literatury str. 17.)

- 9 -

2. Měření fázového rozdílu mezi proudem a napětím metodou elipsy.

Přístroje: 1. RC generátor TESLA EM 344 2. Stejnosměrný oscilograf TESLA EM 243 3. Regulační odpor R_S= 100 Q

4. Impedance Z

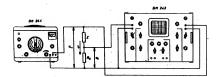

obr. 9

RC geomrátoru EM 344 použijeme jako zdroje střídevého napětí, na který připojíme přes seriový odpor $R_{\rm g}$ impedanci Z. Proud i $_{\rm g}$ protékající obvodem bude řásově posunut vůči napětí u $_{\rm w}$ a vytvoří na odporu $R_{\rm g}$ úbytek napětí u_s :

Na horizontální zesilovač oscilografu EM 243 přivádíme napětí zdroje \mathbf{u}_{\sim} , na vertikální zesilovač přivedeme napětí \mathbf{u}_{s} .

Na obou sesilovačích musí být nastaveny stejné výchylky pro horizon-

tální i vertikální složky. Na stínítku obrazovky se objeví Na stínítku obrazovky se objeví v obecném případě elipsa, jako geometrické místo komcového bodu vektoru výsledného napětí, vzniklého vektorovým součtem napětí zdroje u., a napětí na odporu u., které je posumato vůči napětí u., o úhel ý.



Fázový rozdíl mezi napětím u_{γ_i} a proudem i_{γ_i} určíme ze vzorce:

$$\sin \varphi = \pm \frac{a \cdot b}{\overline{AB} \cdot \overline{CD}} = \frac{\overline{OE}}{\overline{OA}} = \frac{\overline{EF}}{\overline{AB}}$$

Fázový rozdíl lze měřit rovněž metodou sinusovek, nebo přesně me-todou půlkružnice (viz publikaci [5] v saznamu literatury str. 17). Obdobnými způsoby lze měřit také fázovou charakteristiku zesilova-če. Elokové zspojení a seznam použitých měřicích přístrojů uvádíme:

Přístroje:


1. RC generator TESLA BM 344

2. Ss oscilograf TESLA BM 243

3. Měřený zesilovač

Měření se provádí v podstatě metodou měření fázového rozdílu mezi vstupním a výstupním napětím zesilovače metodou elipsy.

Zapojení přístrojů provedeme podle obr. 11.

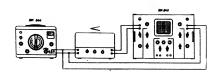


obr. 11

3. Měření kmitočtové charakteristiky nf zesilovače

Přístroje:

- 1. RC generátor BM 344 2. Nf milivoltmetr BM 384 3. Měřený zesilovač
- Tracoviště propojíme podle obr. 12.

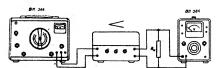


Platí:

zatěžovací odpor zesilovače.


paralelní kombinace vstupního odporu milivoltmetru a zatěžovacího odporu zesilovače.

Připojení elektronkového milivoltmetru vlivem jeho vysokého vstup-ního odporu prekticky neovlivňuje napštové poměry na výstupu zesi-lovače. Na výstupu zesilovače udržujeme konstantní napští, které kontrolujeme elektronkovým milivoltmetrem a na měřídle Nč generá-toru odečítéme přímo pokles nebo převýšení kmitočtové charakteris-tiky přímo v dB (s opačným znaměnkem). Takto získané hodnoty vy-něšíme do grefu, obvykle s použitím logaritmické stupnice. Viz obr. 15.

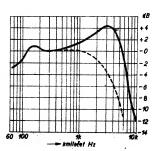

obr. 13

- 13 -

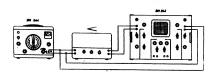


obr. 11

3. Měření kmitočtové charakteristiky nf zesilovače

Přístroje:

- 1. NC generátor BM 344 2. Nf milivoltmetr BM 384 3. Měřený zesilovač
- Pracoviště propojíme podle obr. 12.

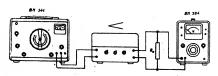


Platí:

zatěžovací odpor zesilovače.

Rx - paralelní kombinace vstupního odporu milivoltmetru a zatěžo-vacího odporu zesilovače.

Připojení elektronkového milivoltmetru vlivem jeho vysokého vstup-ního odporu prakticky neovlivňuje nepětové poměry na výstupu zesi-lovače. Na výstupu zesilogače udržujeme konstantní nepětí, které kontrolujeme elektronkovým milivoltmetrem a na měřidle RC generá-toru odečítáme přímo pokles nebo převýšení kuntočtové charatteris-tiky přímo v dB (a opačným znamánkem). Takto získaná hodnoty vy-měšíme do grafu, obvykle s použitím logaritmické stupnice. Viz obr. 13.

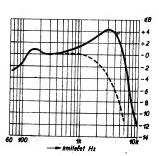

obr. 13

4. Měření citlivosti ní zesilovače.

Přístroje a zapojení pracoviště zůstávají stejné jako v předešlém případě. Citlivost zesilovače je definována jako nf napětí, které je nutno přivést na vstup zesilovače, aby tento byl vybuzen na jmenovitý výkon. Pro dosažení jmenovitého výkomu je třeba, aby výstupní napětí bylo

E_{výst.} =
$$\sqrt{Rz \cdot N}$$
 ,

kde Rz je zatěžovací odpor zesilovače a N je jmenovitý výkon. Zesílení zesilovače je pak dáno poměrem

$$A = \frac{E_{\text{výst.}}}{E_{\text{g}}},$$

kde Eg je napětí přiváděné na vstup zesilovače z nf generátoru. Pro sprévné měření je třeba, aby vstupní impedance měřeného zesilovače byla větší než výstupní impedance R generátoru. Jen v depřípadě je údaj vestaváného voltmetru správny. Není-li výše uvedené podmínka splněna, je třeba vstupní napětí nf zesilovače kontrolovat vnějším milivoltmetrem, trvale po dobu měření připojeným.

5. Măření časových konstant relé.

Přístroje: 1. RC generator TESLA BM 344 2. Sa oscilograf TESLA BM 243

Napájecí zdroj TESLA BS 275
 Měřené relé R

5. Dvoupolový mžikový spiner S

Zepojení přístrojů provedeme podle obr. 14.

obr. 14

Na zdroji BS 275 nastavíme potřebnou velikost stejnosměrného napětí nutného pro vybavení relá. Kmitočet BC generátoru nastevíme řádová stovky Hs, na oscilografu nateváme vhodně děliče vetupního napětí přiváděného na vertikální zésilovač a česovou základom nastavíme na níský opakovací kmitočet. V klidovém stavu je na obrazovce vodo-

na nizký opakovací kmitočet v klidovem stavu je na obrezovce vodo-rovná přímka časové základny. Sepnutím mžikováho spinače S přivedeme pomocí jednoho kontaktového páru stejnosměrně napětí na vimutí relé, kterým začne protékat proud a kotra relá sepne s určiým časovým zpoždáním kontakty. Součesně při sepnutí spinače S přivedeme okamžitě střídavé napětí z R generátoru přes druhý pár kontaktů na vstup horizontálního zesilovače oscilografu a na obrazovce se objeví několik sinusovek. Seprutím relé je výstup RC generátoru zkratován, na obrazovce se objeví vodorovná přímka, přerušená kmity jen při zavibrování kontaktů relé. Rozeputi a seputi spinače S několikrát opakujeme a nastavujeme vhodný kmitočet K generátoru a časové základny, až zjistíme počet celých shunovek, objevujících se na obrazovce po dobu přitahování nebo vibrace kotvy relé. Známe-li kmitočet K generátoru a odečtameli počet kmitů na stínítku, zjistíme jednoduchým způsobem dobu přívání a vibrace kotvy.

Při měření relé RF100 Křižík Trutnov (100 má, 200 Vse) byla doba přitahování kotvy asi 1/35 vt; na obrazovce se při kmitočtu f = 35 Hz objevoval během přitahování kotvy 1 kmit. Vibrace kotvy nebyly pozorovány. Pomocí této metody můžeme také měřit dobu přepnutí mži kových

Pomocí této metody můžeme také měřit dobu přepnutí mži kových spinačů (viz publikaci [5] v seznamu literatury str. 17).

ODKAZY NA PODROBNOU LITERATURU

Podrobný přehled měřicích metod, které používají R generátoru a oscilogrefu spolu s teoretickým rozborem vlivu na přesnost měření a prektickými záváry nalezne čtenář v publikací [4], kde je také v záváru ureden podrobný seznem domácí literatury, pojednavající o oscilografických měřeních od roku 1953 do konce roku 1958.

Seznam cisojezyčné literatury, pojednávající o oscilografických měřeních do roku 1953, tvoří přílohu publikace [3].

Pojednání o převadětích změn fysikálních veličin na změny elektrického napětí, což je hlavní problematika při používání elektronických měřících přístrojů v průmyalu a při hledění nových měřících metod, spolu s popisy některých těchto metod je obasženo v publikaci [5], odkud byly použity některé příklady měření pro tento návod.

Záklední zapojení a funkce elektronických měřicích přístrojů společně s měřením v radictechnice jsou popadna v publikaci [7].

SEZNAM LITERATURY

- [1] Kamil Donát: "Elektronický osciloskop" Naše Vojsko Preha 1956.
- [2] Morton Nadler: "Elektronkový oscilograf" SNTL, Proha 1955
- [3] J. Czech: "Der Elektronenstrahl-Oszillogref" Verlag für Radio, Foto, Kinotechnik, SmbH Berlin.
- [4] Morton Nadler: "Oscilografická měření" SNTL, Praha 1958.
- [5] Svoboda, Ripper, Schwarz:

"Měření" (čidla, elektronické měřicí přístroje, měření oscílogrefy) – učební text, Studijní s informační ústav odborného školství, Preha II, Mezibranské 21, 1958.

- [6] Bohumír Kleskeň: "Merania v rádiotechnike" SVTL, Bratislava 1957.
- [7] A.M. Turičin: "Elektrické měření neelektrických veličin" SNTL, Praha 1958.

POKYNY PRO OFRAVY A ÚDRŽBU FŘÍSTROJE

Fo delší době provozu přístroje může dojít ke zhoršení některých vlastností přístroje, případně k vysazení z funkce. Tyto závady bývají většinou způsobeny stárnutím elektronek. Vedalším textu jsou popsány závady, které se mohou nejčastěji vyskytnout, jejich pravděpodobné přičiny a způsob odstranění.

1) Pokles amplitudy výstupního napětí.

Může být způsoben jednoduchými příčinemi, jako špatně nastaveným hazze nyt zpusoven jeunouczymi przezione, przezione, potenciometrem "WAZBA" na zadni strank přistroje, nedostatečným anodovým napětím, vlivem vyčerpané EZSI, nebo ztrátou emise některé z elektronek El až EJ. O tom je možno se nejlépe přesvědčit měřením napětí katoda-zem a předpětí pro řídící mřížku jednotliwich elektronek. Sprawné hodnoty jsou předepsány na schematu. Při výměně elektronky El je nutné provést některé kontroly a nastavení, jak je to uvedeno v následujícím odstavci.

2) Vzrůst skreslení výstupního signálu.

Vzroste-li skreslení a není to způsobeno poklesem emise některé z elektronek, nebo dokonce u elektronky El je možno pozorovat zvýšení anodového proudu, projevující se zvýšením napětí katoda-zem této elektronky, pak bývá příčina ve špatném vakuu El nebo v tom, te u ní nasszuje sekundární mříškové enise. Tato vada může nasa-zovat také sž po zahřátí elektronky. I když jen výjimečné, může se přece projevovat i u nové elektronky buď hned, nebo po krátké době provosu. Nejcitelněji ovlivní l. kmitočtový rozsah.

Po výměně elektronky se nejdříve nastaví potenciometrem "VAZBA" pri potencionetru F na maximu - výstupní napětí větší než 10 V ne tom kmitotiu, tterý děvá najnižší výstupní napětí větší než 10 V ne oby při libovolném kmitočtu celého rossahu bylo zaručeno nastavení výstupního napětí 10 V.

Kmitočtový souhlas 1. až 4. rozsahu nemí třeba při výměně kontrolovat. na 5. rozsahu dostaví se scuhlas kmitočtu se stupnicí na

Tatáž vada u elektronky El může vést i k tomu, že na l. kmitočtovém rossehu výstupní napětí není stálé, ale kýve ve velmi níských kmitech. Vada se zřetelně projeví na měřidle výstupního napětí.

3) Kolisaní výstupního napětí kolem kmitočtu 50 Hz.

Jako u všech RC generátorů i u tohoto se projevuje, sle poměrně v melé míře, interferenční kolísání kolem kmitočtu 50 Hs. Minimum kolísání as dostaví odbručovacím potenciometrem R47 na zadní straně přístroje.

4) Nedostatečná filtrace anodového napětí.

Může způsobit zvýšení akreslení zejména při nastavení niššího napětí potenciometrem F. Aby bylo možné zjistit, který z elektrolytických kondensátorů nevyhovuje, jsou uvedeny hodnoty dovoleného svlně-ní, je-li nastaven kmitočet 1 kHz.

- C29 4 V Zvlnění je možne měřit elektronkovým milivolt-
- C19 60 mV C16 12 mV

5) Nescuhlas mulové polohy na voltmetru.

Neukazuje-li měřidlo na mulu, když je nastaveno mulové napětí na vistupu, je třeba ji dostavit potenciometram ESS, ktarý je umístěn uvnitř přístroje. Tím se dostavuje hodnota kompansečního proudu ého z druhého diodového systému:



Je-li nutné vyměnit E4, nastaví se nejdříve mula na měřidle (viz bod 5) a kontrolujeme voltmetrem s vnitřním odporem pokud možno větším než 5 kQ výstupní napětí 10. V. Výchylka měřidla se dostaví na dílek 10 V potenciometrem R96, který je uvnitř přístroje. Pak se opětovně zkontroluje a přípedně opraví nastavení nuly a 10 V. Pro výměnu vyhoví taková elaktronka, u které se nastavená nula nepatrně mění i při kolísání sítového napětí o ± 10 %.

Upozornění.

Uvedené pokyny pro opravy generátoru EM 344 jsou uvéděny pouze pro zvláštní případ, kdy není možno přístroj odeslat ke kontrole nebo opravě do výrobního závodu. Ve všech ostatních případech doporučujeme odběrstelům, sby použili služeb naší odborné opravny, která provádí všechny závuční i misozáruční opravy odborně, svědomitě a v nejkratších lhůtách.

V neglaticame, že záruční (bezplatné) opravy provádíme pouze u přístrojů s neporušenou plombou.

ROZPIS ELEKTRICKÍCH SCUČÁSTÍ

0 d p o r y :

		WK 681 01 3k/D
a	odper vrstvový	WK 681 01 32k/D
12	odpor vrstvový	WK 681 01 M32/D
13	odpor vrstvový	WK 681 01 3M2/D
4	odpor vrstvový	WK 681 01 10M/C
15	odpor vrstvový	WK 681 01 10M/C
16	odpor vrstvový	WK 681 04 12M/B
7	odpor vrstvový	WK 681 01 660/D
88	odpor vrstvový	WK 681 01 7k4/D
19	odpor vrstvový	WK 681 01 74k/D
110	odpor vrstvový	
11	odpor vrstvový	WK 681 01 M74/D
112	odpor vrstv ový	WK 681 01 7M4/C
113	odpor vrstvový	TR 101 400
214	odpor vrstvový	TR 101 1M/A
115	odpor vrstvový	TR 102 320/A
R16	odpor vrstvový	TR 102 40/A
117	potenciometr lin.	WN 694 01 250/N
818	odpor vrstvový	TR 102 820/A
319	odpor vrstvový	TR 103 6k4/A
R20	odpor vrstvový	TR 101 160/A
R21	odpor vrstvový	TR 102 16k/A
323	odpor drátevý	TR 636 1k/A
R24	odpor vrstvový	TR 101 1M/A
R25	odpor vrstvový	TR 101 400/A
R26	odpor vratvový	TR 102 40/B
227	odpor vrstvový	TR 104 6k4/A
R28	odpor vrstvový	TR 104 6k4/A
R29	potenciometr lin.	wn 694 00 5k∕n
R30	odpor vrstvový	TR 101 400/A
R31	odpor vrstvový	TR 101 1M/A
	4	

- 21

```
TR 102 40/B
TR 104 6k4/A
TR 104 6k4/A
TR 102 M1/A
TR 612 25k/A
                                                                                                                         kondensátor elektrolytický
                                                                                                                                                                            TC 596 16M
                                                                                                             C15
           odpor vrstvový
                                                                                                             C16,19
                                                                                                                         kondensátor elektrolytický
                                                                                                                                                                            TC 519 50/50M
            odpor vrstvový
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
                                                                                                                                                                            TC 122 M25
                                                                                                             C17
                                                                                                                         kondensátor svitkový
            odpor vrstvový
                                                                                                                                                                            TC 595 G1
TC 122 10k
                                                                                                             C18
                                                                                                                         kondensátor elektrolytický
            odpor vrstvový
                                                                                                             C20
C21
                                                                                                                         kondensátor svitkový
            odpor drátový
odpor vratvový
                                                                TR 102 64k/A
WN 694 01 W16/N
                                                                                                                         kondensátor elektrolytický
                                                                                                                                                                            TC 595 50M
                                                                                                             C22
C23
                                                                                                                         kondensátor svitkový
kondensátor svitkový
                                                                                                                                                                            TC 122 M25
            potenciometr lin.
                                                                 WK 681 01 1k520/D
                                                                                                                                                                            TC 122 10k
TC 595 50M
             odpor vrstvový
                                                                 WK 681 01 22j2/D
                                                                                                             C24
C25
C26
C27
C28
C29
C30
C31
C32
C33
C34
                                                                                                                         kondensátor elektrolytický
             odpor vrstvový
                                                                 WK 681 01 200/D
WK 681 01 24j7/D
                                                                                                                         kondensátor MP krabicový
                                                                                                                                                                            TC 455 4M
             odpor wrstwowy
                                                                                                                         kondensátor elektrolytický
kondensátor svitkový
                                                                                                                                                                            TC 581 50M
             odpor vrstvový
                                                                 WK 681 01 200/D
WK 681 01 2k/D
                                                                                                                                                                            TC 153 2k5/A
              odpor wratwowy
                                                                                                                         kondensátor svitkový
                                                                                                                                                                            TC 162 MT
              odpor vrstvový
                                                                  WK 681 01 100/D
WK 681 01 1k025/D
                                                                                                                                                                            TC 519 32M
                                                                                                                         kondensátor elektrolytický
                                                                                                                         kondensátor svitkový
                                                                                                                                                                            TC 122 64k/A
              odpor vrstvový
potenciemetr
                                                                  WN 690 01 50
TR 101 20
                                                                                                                                                                            TC 124 4k
                                                                                                                         kondensátor svitkový
   R47
R48
                                                                                                                                                                            TC 124 4k
TC 700 3j2
                                                                                                                         kondensátor svitkový
               odpor vrstvový
                                                                                                                         kondensátor keremický
                                                                                                                         kondensátor keramický
                                                                                                                                                                            TC 700 5
                                                                                                             Ostatní el. součásti:
                                                                   1AK 701 02
                kondensátor doladovací
                                                                   1AK 701 02
1AK 701 02
                                                                                                                                                                            1.AN 133, 23
                 kondensátor doladovací
kondensátor doladovací
                                                                                                             Elektronka El, E2, E3
                                                                                                                                                6L43
    C2
C5
C4
C5
C6
C7
C8,9
C10
C11
C12
C12
                                                                                                             Elektronka E4
                                                                                                                                                 6B32
                                                                                                                                                                            1AN,110 80
                                                                    1AK 701 02
TC 200 5/A
                                                                                                             Elektronka E5
Žárovka Ž1,
Žárovka Ž4
                                                                                                                                                EZ81
                        nsator doladovací
                 kondensátor slídový
                                                                                                                                                                            1AN 109 07
                                                                    TC 200 5/A
PN 703 01
IAN 705 06
                                                                                                                                                                           IAN 109 07

IAN 109 12

IAP 780 44

ČSN 35 4751


ČSN 35 4751

ČSN 35 4751
                      densator alidový
                                                                                                                                                6 V/0,05 A
100 µA DHR5
                  kondensétor dolad
                                                                                                             Měřidlo
                                                                                                             Vložka
                                                                                                                            Pl
Pl
                  kondensátor otočný
                                                                                                                                                C.5A/25CV
                                                                    TC 211 64/A
TC 122 2k5/A
                  kondensator slidový
                                                                                                             Vložka
                                                                                                                                                1 A/250 V
                                                                                                              Vložka
                  kondensátor svitkový
kondensáto. svitkový
kondensátor svitkový
                                                                                                                            P2
                                                                                                                                                0,16 A/500 V
                                                                     TC 122 25k
TC 122 M1
                                                                     TC 200 51/B
                                  alidovi
                                                                                                              Elektronka o
                                                                                                                               načená IAN 110 .. je vybírána podle zvláštních
```

předpisů.


10.1

1

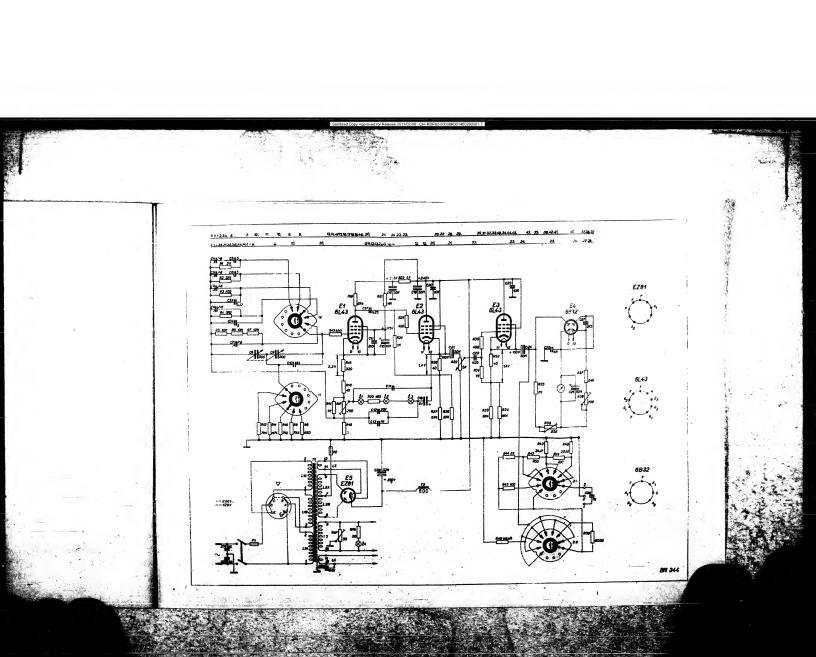

Sanitized Copy Approved for Release 2011/02/08 : CIA-RDP82-00038R001400280



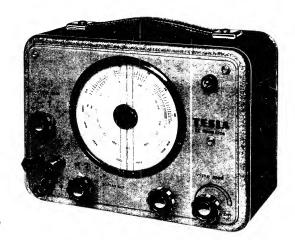


TESLA BAA 365

SIGNAL GENERATOR

DPR 1 4000 - 0159

Grafia 03 Vyškov - 113 59 Q 16691

SIGNAL GENERATOR TESLA BM 365

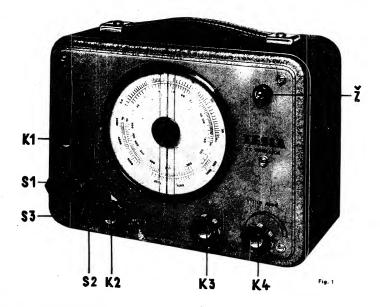

The RC generator TESLA BM 365 is an A. F. source of wide frequency range and it supplies a voltage of sinussoidal waveform of low distortion. Because of its small dimensions and light weight, this generator is well suited for servicing work, particularly where it is necessary to carry out repair work directly in the home of the customer (for repairing radiograms, television receivers, sound amplifying plants, etc.). The generator is equally well applicable for routine laboratory work, e. g. as a source of a modulation signal, etc.

DESCRIPTION

The operation of the RC generator TESLA BM 365 is based on positive feedback by a Wien element. The oscillator tube is fitted with an incandescent lomp stabilizer for automatically controlling the oscillatory voltage. Range changing is carried out by switching the resistors in the Wien element, and a ganged tuning capacitor is applied for continuous frequency control. To prevent the external load from influencing the frequency of the oscillator, a cathode follower is applied in the output stage. The total output voltage of 10 V can be reduced with a decade divider 1:1, 1:10, 1:100, 1:1000, 1:100.

Sanitized Copy Approved for Release 2011/02/08 : CIA-RDP82-00038R001400280001-7

The RC generator TESLA BM 365 is an A. F. source of wide frequency range and it supplies a voltage of sinussoidal waveform of low distortion. Because of its small dimensions and light weight, this generator is well suited for servicing work, particularly where it is necessary to carry out repair work directly in the home of the customer (for repairing radiograms, television receivers, sound amplifying plants, etc.). The generator is equally well applicable for routine laboratory work, e. g. as a source of a modulation signal, etc.

DESCRIPTION

The operation of the RC generator TESLA BM 365 is based on positive feedback by a Wien element. The oscillator tube is fitted with an incandescent lamp stabilizer for automatically controlling the oscillatory voltage. Range changing is carried out by switching the resistors in the Wien element, and a ganged tuning capacitor is applied for continuous frequency control. To prevent the external load from influencing the frequency of the oscillator, a cathode follower is applied in the output stage. The total output voltage of 10 V can be reduced with a decade divider 1:1, 1:10, 1:100, 1:1000, 1:10000. For continuous output control a potentiometer is connected in front of the divider.


CONNECTION TO THE MAINS

Before the instrument is connected to the mains it is necessary to make sure that it is switched to the correct mains voltage. A changeover disc is mounted on the back wall of the instrument. To change its position, the screw in its centre must be first loosened, then the disc can be withdrawn partially and rotated so that the available mains voltage is indicated below the triangular mark. Then the screw must be tightened again in order to secure the disc. When the disc is in the position as indicated in Fig. 2, the instrument is switched to 220 V.



Fig.

A CONTRACTOR OF THE PARTY OF TH

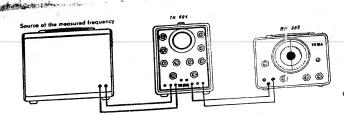


A number of generators are fitted with a mains changeover switch of a different design. To change the position of this other type of switch, first the retaining metal strip must be loosened, then the disc must be withdrawn and, after turning it to the required position, it has to be pushed back so that the marking of the available mains voltage appears under the triangular mark; then the retain-

Next to the changeover switch is a mains fuse which must be exchanged whenever the mains voltage of the instrument is altered. The correct values of the fuses for 120 V and 220 V are given in the section "TECHNICAL DATA".

OPERATION

The RC generator TESLA BM 365 is switched on with the knob K4. The pilot lamp Ž indicates that the instrument is in operation. After switching on, approximately 15 minutes must elapse to attain

The required frequency can be selected with the knobs K2 and K3. With the knob K2 (marked as D1, $^{\circ}$ D2 on the wiring diagram), the required range is chosen and then the required frequency is adjusted exactly with the knob K3 (fine drive of the ganged capacitor C5 and C8).

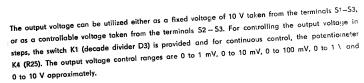

EXAMPLES OF APPLICATION

RC generators are used in many branches of science and industry for a great variety of electronic measurements and tests. It is obvious that within the framework of a brief instructions booklet it is not possible to exhaust all the actual application possibilities of this instrument. However, below are given some examples of its use is connection with an oscilloscope, to offer some guidance to less versed users for their own work.

1. FREQUENCY MEASUREMENT

For frequency measurements, direct indicating frequency meters, absorption or heterodyne vavemeters, measuring receivers, etc. are utilized usually. If none of these instruments is available, the fre-









quency of a tested source can be measured also by the application of the RC generator in connection with an oscilloscope. As in all measurements in which an oscilloscope is used, this method is very instructive and gives easily interpretable results. These features are particularly suitable for tuition purposes in schools and specialized courses. The best known method of frequency measurement is the utilization of Lissojous figures. The instruments, i. e. the RC generator, the oscilloscope and the source of the frequency which has to be measured, are connected so that the signal delivered by the RC generator is fed to the vertical amplifier of the oscilloscope and the signal of the generator under test is fed to the horizontal amplifier. In Fig. 3 is given the measuring setup which applies the RC generator TESLA BM 365 and the workshop oscilloscope TESLA TM 694; obviously other suitable instruments can be applied also.

With the instruments interconnected and switched on, it is essential to wait for the thermal conditions of the instruments to become stabilized (approximately 10 to 15 minutes). Then the RC generator is set to deliver such a frequency at which a stationary figure is displayed on the screen of the C. R. oscilloscope. If the compared frequencies are equal, then the figure will be a circle, an ellipse or a straight line, provided that the measured frequency is of pure sinusoidal waveform. If this is not the case, the figure will be distorted without affecting the accuracy of measurement. If one of the frequencies is a whole multiple of the other, a more involved figure is obtained which can serve for evaluating the ratio between the two frequencies in the following manner: A horizontal tangent and a vertical tangent are drawn to the figure on the screen. The number of peaks touching the vertical tangent is designated as n and the number of peaks touching the horizontal tangent is designated as m.

Then the following relation applies:

Several Lissajous figures pertaining to different frequency ratios are given in Fig. 4, 4a, the method of peak counting being indicated for the ratio 3:2.

Another method of frequency measurement is applicable if the applied oscilloscope is equipped with a socket for beam modulation.

$$\frac{m}{n} = \frac{r_V}{f_h}$$
and thus the unknown frequency is

This method is anvantageous provided that

Modulation is carried out so that the control grid of the C.R. tube is supplied with an A. C. voltage. If the grid bias, i. e. the brightness control of the C.R. oscilloscope, is adjusted correctly, the brightness of the trace on the screen is increased at every positive half-wave of the connected voltage, whereas at the negative half-waves of it the trace on the screen is suppressed. The second of the two compared frequencies is connected to the vertical amplifier, and with a phase difference of 90° also to the horizontal amplifier.


To achieve the required phase shift of 90° a suitable RC element is applied (Fig. 5).

The components R and C are selected according to the frequency which is being measured. As long as the ellipse displayed on the C. R. tube screen is sufficiently wide, it is of no significance that the figure is not a circle.

The figure in Fig. 6 is obtained when the frequency which is being measured is a whole multiple of the reference frequency delivered by the standard source. The unknown frequency is given by the relation where f_n is the frequency of the standard and k is the number of dark or light spots along the figure on the screen.

$$-\blacktriangleright \quad \frac{f_x}{f_n} > \frac{1}{5}$$

fx = k . in

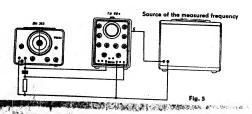



The accuracy of both methods is determined by the accuracy of the generator which is applied as standard.

2. REVOLUTIONS MEASUREMENT

This measurement is quite similar to the frequency measurement. Revolutions measurements are carried out usually by the application of electromagnetic revolutions meters which are subject to wear and which cannot be attached permanently to the measured object. The accuracy of such measurements is relatively low and is approximately \pm 10 %0.

Supposing that a suitable transducer is available, then revolutions can be measured with the RC generator with the relatively hight accuracy of approximately \pm 3%. Continuous measurement can be applied with remote indication at a fairly large distance from the measured rotary object. If no other pick-up is available, one earpiece of a head telephone set can be applied with the iron membrane removed. The pick-up is fixed opposite to some protrusions of the rotating object (e.g. a tooth wheel, blades of a turbine, etc.) at a distance of 1 to 3 mm. The only condition is that one protrusions must be of a magnetic material. Whenever a protrusion passes along the pick-up, an electric pulse is created in the pick-up. For the actual measurement, the transducer is connected as one of the frequency sources, whilst the RC generator is the second one. The measurement is carried out by the application of a Lissajous figure. The revolutions of the rotary object can be calculated from the formula:

$$n = \frac{f.60}{k}$$

where n is the number of revolutions per minute, f the measured frequency and k the number of pro-

TECHNICAL DATA

Frequency range: 25 c/s - 32 kc/s, divided into 4 bands:

25 c/s - 150 c/s - 900 c/s - 5.4 kc/s - 32 kc/s

approximately

Accuracy of the selected frequency: \pm 1.5% or \pm 3 c/s

Stability of the frequency (related to the time): \pm 1.5%

Distortion: < 2% within the first band, < 1% in all other bands

Output voltage: $0-10 \text{ V} \pm 1.5 \text{ dB}$

Ranges of the divider: 10 V, 1 V, 100 mV, 10 mV, 1 mV

Accuracy of the divider: ± 10 %

Frequency stability: \pm 1 % at mains voltage fluctuations of \pm 10 %

and under other influences

Power supply: 220 V or 120 V, 50 c/s

Power consumption: 25 W approx.

 Protective devices:
 fuse in the mains supply circuit:

 0.4 A/250 V for 120 V, or 0.2 A/250 V for 220 V

2×6F32, 6L31, 6Z31 (the tubes marked 1 AN 110...

are selected specially for use in the generator).

Dimensions: 260×190×145 mm


Weight: 5.6

ACCESSORIES

Tube complement:


The following are supplied with the instrument as accessories: a rubber-insulated mains cord, a bag with spare fuses for 120 V and 220 V, an instructions booklet and a guarantee.



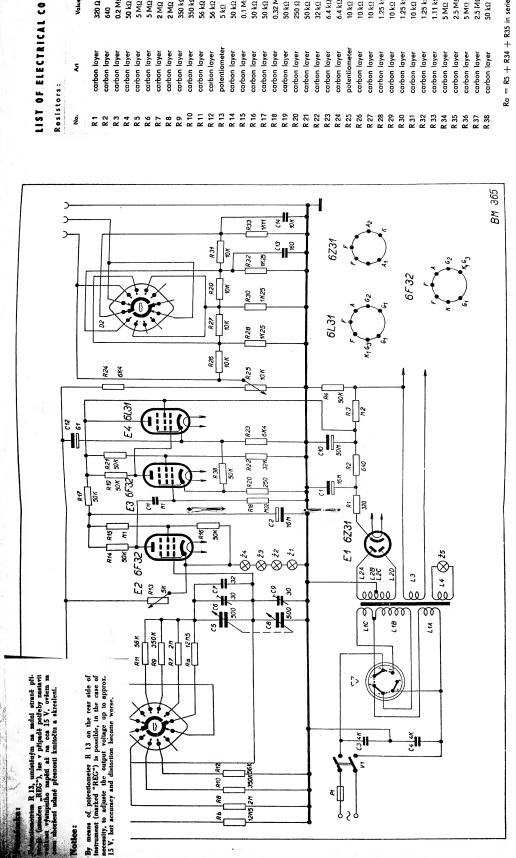

LIST OF ELECTRICAL COMPONENTS

	_	7	-	-			-						MIN E																												
	Standard CSR	and the state of t	TR 102 320	TR 104 640	TR 102 M2/R	TR 102 50k/B	WK 681 01 5M/C	WK 681 01 5M/C	WK 681 01 2M/D	WK 681 01 2M/D	WK 681 01 350k/D	WK 681 01 350k/D	WK 681 01 56k/D	WK 681 01 56k/D	WN 694 01 5k/N	TR 102 50k/B	TR 102 M1/B	TR 102 50k/B	TR 102 50k/B	TR 102 M32/8	TR 102 50k/B	TR 102 250/B	TR 102 50k/B	TR 102 32kB	TR 104 6k4/B	TR 102 6k4/B	WN 695 00 10k/N	WK 681 01 10k/D	WK 681 01 10k/D	WK 681 01 1k25/D	WK 681 01 10k/D	WK 681 01 1k25/D	WK 681 01 10k/D	WK 681 01 1k25/D	WK 681 01 1k11/D	WK 681 01 5M/C	WK 681 01 2M5/D	WK 681 01 5M/C	WK 681 01 2M5/D	TR 102 50k/B	R6 + R36 + R 37 in series
	3		0.5	0	0.5	20	3	5	0.1	0.0		0.1	0.1	0.1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	2	0.5	0.5	0.1	0.1	0.1	0.1	1.0	0.1	1.0	0.1	0.1	0.1	0.1	0.1	0.5	R6 + R36 +
2	Tolerance				±2%	720	+ 5%	+ 5%	+1	+1	+1 95	+1	+1%	+1%		+ 5%	+ 5%	÷ 5%	0,65	+ 50/0	0/05:	°4-5°/0	1.5%	· 20/0	, 5 ⁰ / ₀	°,2°,		. 1	°.1	.10.	o-1-	100	10%	10,0	. 1°	, 2°.	100	+200	+1%	±2%	Rb
	Value		320 0	640	0.2 MΩ	50 kΩ	5 MΩ	5 MΩ	2 MΩ	2 MΩ	350 kΩ	350 kΩ	56 kΩ	56 kΩ	5 kΩ	50 kΩ	0.1 MΩ	50 kΩ	50 kΩ	0.32 MΩ	20 kΩ	250 Ω	50 kΩ	32 kΩ	6.4 kΩ	6.4 kΩ	10 kΩ	10 kΩ	10 kΩ	1.25 kΩ	10 kΩ	1.25 kΩ	10 kΩ	1.25 kΩ	1.11 kg	5 MΩ	2.5 MΩ	5 M _Q	2.5 MΩ	50 kΩ	35 in series
11.00.00	¥		carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	potentiometer	carbon layer	carbon layer	potentiometer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	carbon layer	Ra = R5 + R34 + R35 in series													
The latest section in the latest	ģ	1	2	R2	8 3	R 4	22	R 6	R 7	88	R9	R 10	R 11	R 12	R 13	R 14	R 15	R 16	R 17	R 18	R 19	R 20	R 21	R 22	R 23	R 24	25 25	R 26	R 27	R 28	R 29	K 30		R 32		R 34	R 35		R 37	R 38	ď

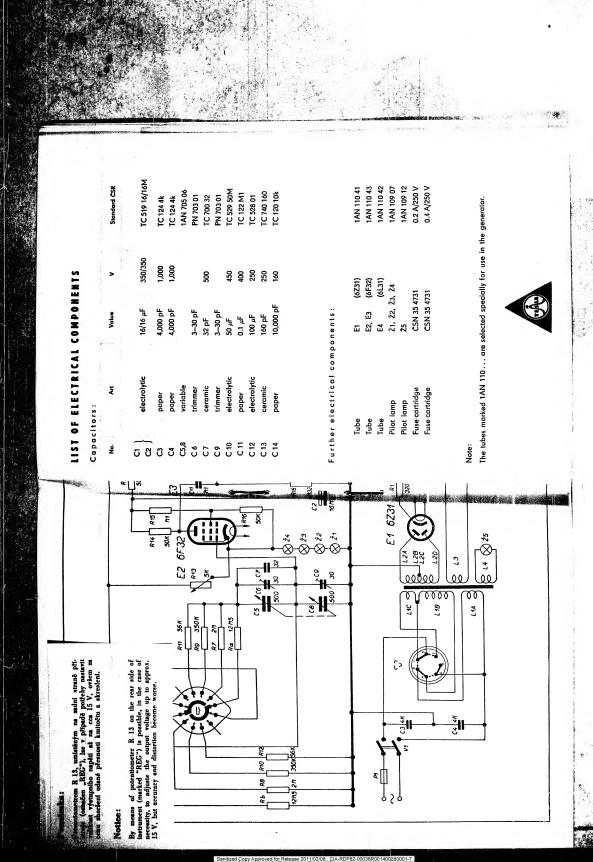

trvole. Přesnost těchto obrátkoměrů je při vyšších obrátkách poměrně nízká a pohybuje se asť kole ± 10%

Máme-li vhodný snímač, můžeme měřit obrátky s výšší přesností (ca ± 3%). Můžeme je měřit trvals a měření provádět ve větší vzdálenosti od rotující části. Nemáme-li po ruce vhodný snímač, můžem použít nouzově i elektromagnetické sluchátko se sejmutou membránou. Tento snímač upevníma prot vhodným výstupkům na rotující části (např. ozubené kolo, lopatky oběžného kola turbíny atá.) do vzdálenosti ca 1 až 3 mm. Podmínkou je, aby výstupky byly z magneticky vodívého materičiu. Př každém průchodu výstupku kolem snímače vzniká ve snímačí elektrický impuls. Při měření žapoljme snímač jako jeden zdroj kmitočtu, generátor jako druhý a měříme pomocí Lissajousových obrazčí Vlastní obrátky vyčíslíme podle vztahu

kde n je počet obrátek za minutu, f je změřený kmitočet a k je počet výstupků,

TECHNICKÉ ÚDAJE

Kmitočtový rozsah:

25 c/s — 32 kc/s, rozdělen do 4 rozsahů: $25 \div 150$ c/s $\div 900$ c/s $\div 5.4$ kc/s $\div 32$ kc/s

Přesnost odečítání kmitočtu: Stálost kmitočtu s časem:

± 1,5% nebo ± 3 c/s ±, 1,5 %

Skreslení:

na rozsahu i < 2 %

Výstupní napětí:

na ostatních rozsazích < 1 %

Rozsahy děliče:

 $0 - 10 \text{ V} \pm 1,5 \text{ dB}$

Přesnost děliče:

10 V; 1 V; 100 mV; 10 mV; 1 mV

Stálost kmitočtu:

Napájení:

při změně síť. napětí o \pm 10% a ostatních vlivech \pm 1% síť. napětím 220 nebo 120 V, 50 c/s

Spotřeba:

tavnou pojistkou v síť. obvodu pro 120 V pojistka 0,4 A/250 V, pro 220 V pojistka 0,2 A/250 V

Jištění:

Osazení:

2× 6F32, 6L31, 6Z31 (elektronky označené 1AN 110... jsou vybírány podle zvláštních předpisů)

Rozměry:

260×190×145 mm

Váha:

5,6 kg

PŘÍSLUŠENSTVÍ

Jako příslušenství se dodává s přístrojem přívodní síťová šňůra, sáček s náhradními pojistkami pro 120 a 220 V, návod k obsluze a záruční list.



pomocí RC generátoru ve spojení s osciloskopem. Jako všechna osciloskopická měření je i toto velmi názorné a dává dobré výsledky. Názornost měření se zvláště uplatní ve školách a odborných kursech, Nejznámější metoda je měření kmitočtu pomocí Lissajousových obrazců. Přístroje, tj. RC generátor, osciloskop a zdroj neznámého kmitočtu zapojíme tak, že signál z RC generátoru přivedeme na vertikální zesilovač osciloskopu a signál z měřeného generátoru na horizontální zesilovač. Na obr. 3 je propojení pracoviště při použití RC generátoru Tesla BM 365 a dílenskéhu osciloskopu Tesla TM 694, lze však použít i jiných vhodných přistrojů.

Po propojení pracoviště zapneme přístroje a vyčkáme, až se ustálí vnitřní teploty (ca 10 až 15 min.).

Potom nastavíme na RC generátoru takový kmitočet, při kterém dostaneme na stínítku osciloskopu stojící obrazec. Jestliže jsou oba kmitočty stejné, obdržíme kružnicí, elipsu nebo úsečku, ovšem za předpokladu, že se jedná o napětí čistě sinusového průběhu. Není-li napětí, jehož kmitočet měříme, slnusové, jsou obrazec skresleny, což ovšem při měření kmitočtu není na závadu. Jestliže jeden z kmitočtů je celistvým násobkem druhého, dostaneme složitější obrazec, z něhož poměr kmitočtů můžeme vyčíslit. Vyhodnocení pravedeme tak, že vedeme v rovině horizontální i vertikální tečnu k obrazci. Počet vrcholů na tečně vertikální označíme např. n a počet vrcholů na tečně horizontální m. Potom platí

Pro názornost uvádíme ještě několik Lissajousových obrazců pro různé poměry kmitočtů. Na poměru 3 : 2 (obr. 4e) je ukázán způsob počítání vrcholů.

Druhý způsob měření kmitočtů je možný jen tehdy, má-li osciloskop vyvedenu zdířku pro modulaci jasu paprsku.

Tento způsob je vhodný za předpokladu, že $\frac{m}{n} = \frac{f_0}{f_h}$ o z toho neznámý kmitočet $f_h = f_0 \cdot \frac{n}{m}$

Modulace jasu se provádí tak, že na mřížku obrazovky se přivádí střídavé napětí. Je-li pak předpětí, tj. jas, správně nastaveno, nastává při kladných půlvlnách přiváděného napětí zvýšení jasu a při záporných půlvlnách snížení jasu, tj. zatmívání stopy. Druhé ze srovnávaných napětí přivádíme na vertikální zesilovač a s fázovým posuvem 90° i na horizontální zesilovač.

Fázový posuv 90° dosáhneme zařazením vhodného RC členu (viz např. obr. 5).

Hodnoty R a C volíme podle měřeného kmitočtu. Pokud se na stínítku nevytvoří přesný kruh, ale elipsa dostatečně široká, není to na závadu.


Na obr. 6 je znázorněn obrazec, který obdržíme, je-li měřený kmitočet celistvým násobkem kmitočtu normálu.

Neznámý kmitočet je dán vztahem


kde fn je kmitočet normálu a k je počet tmavých nebo světlých bodů. Přesnost obou metod jest dána přesností nastavení stojícího obrazce a přesností generátoru, který používáme jako normál.


2. MĚŘENÍ OBRÁTEK

Měření obrátek se velmi podobá měření kmitočtu. Běžně se provádí měření obrátek elektromechakými obrátkoměry, které trpí opotřebením a které obvykle není možno na měřený objekt připojit

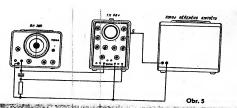



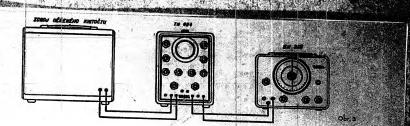

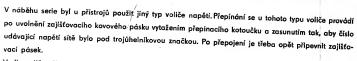

Vedle voliče síťového napětí je síťová pojistka, kterou při přepojení přístroje na jiné síťové napětí je třeba vyměnit. Hodnoty pojistek pro napětí 120 V a 220 V jsou uvedeny v odstavci "Technické údaje".

UVEDENÍ DO CHODU

RC generátor zapínáme a vypínáme otočením knoflíku K4. Zapnutí přístroje signalisuje žárovka **Z.** Po zapnutí necháme přístroj tepelně ustálit asi 15 minut.

Nastavení požadovaného kmitočtu provádíme knoflíky K2 a K3. Knoflíkem K2 (ve schematu přepinač D1, D2) nastavíme rozsah a přesně dostavíme kmitočet knoflíkem K3 (jemný převod na kondensátor C5 a C8).

Výstupní napětí můžeme odebírat buď neregulované, tj. 10 V, ze svorek S1 – S3, nebo regulované



ze svorek S2 – S3. Regulaci výstupního napětí provádíme stupňovitě knoflíkem K1 (přepinač dekadlc; kého děliče D3) a jemně knoflíkem K4 (R25). Rozsahy regulace výstupního napětí jsou 0÷1 mV, 0÷10 mV, 0÷100 mV, 0÷1 V, 0÷10 V.

PŘÍKLADY POUŽITÍ

RC generátory se používají v různých technických oborech pro nejrůznější elektronická měření a zkoušky. Je samozřejmé, že není možno v krátkém přehledu vyčerpat všechny možností využití tohoto přístroje, které přicházejí v praxi v úvahu. Přesto uvádíme několik příkladů praktického použítí RCapnerátoru ve spojení s oscilografem, které poslouží méně zkušeným pracovníkům jako vodítka pro dolší aplikace a praxi.

1. MĚŘENÍ KMITOČTU

Pro měření neznámých kmitočtů se používají přímo ukazující měřiče kmitočtu, absorpční a záznějové vlnoměry, měrné přijimače atd. Pokud není podobný přístroj po ruce, je možno měřit kmitočet ravněž


Obr. 4 - a, b, c, d, e







TÓNOVÝ GENERÁTOR TESLA BM 365

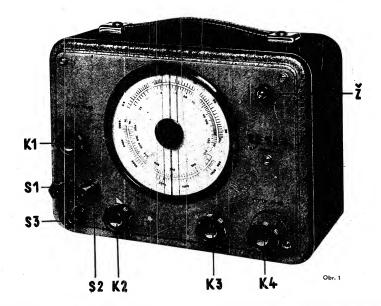

RC generátor TESLA BM 365 je zdroj nf sinusového napětí s malým skreslením a širokým rozsahem kmitočtů. Jeho malé rozměry a malá váha jej předurčují pro opravářskou praxi, zvláště v těch případech, kdy je nutné provádět rychlé opravy přímo u zákazníka (hudební skříně, televisory, rozhlasové ústředny). Generátor lze rovněž použít i pro běžná laboratorní měření, např. jako zdroj modulačního signálu apod.


FUNKČNÍ POPIS


RC generátor TESLA BM 365 pracuje na principu positivní zpětné vazby Wienovým členem. Oscilační elektronka má automatické vyrovnávání oscilačního napětí pomocí žárovkové stabilisace. Změna rozsahů se provádí přepínáním odporů ve Wienově členu a plynulá změna kmitočtu dvojitým otočným kondensátorem. Aby zatížení výstupu neovlivňovalo kmitočet oscilátoru, je na výstupu zařazen katodový sledovač. Výstupní napětí 10 V je možno snižovat dekadickým děličem 1:1, 1:10, 1:100, 1:1000, 1:10.000. Plynulá změna výstupního napětí se provádí potenciometrem zařazeným před děličem.

PŘIPOJENÍ NA SÍŤ


Před připojením na síť se přesvědčíme, zda je přístroj přepojen na správné síťové napětí. Přepojení se provádí kotoučkem přepinače na zadní stěně přístroje. Vyšroubujeme šroub uprostřed voliče napětí. Kotouč voliče povytáhneme a natočíme tak, aby číslo udávající správné síťové napětí bylo pod trojúhelníkovou značkou. Sroub potom opět zašroubujeme, a tím kotouček zajistíme. Je-li kotouček v poloze naznačené na obr. 2, je přístroj přepojen na síťové napětí 220 V.



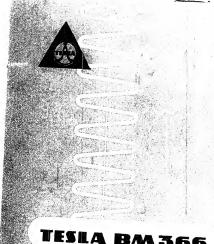

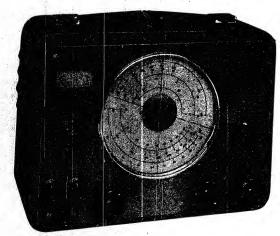

INDUCTANCE AND CAPACITANCE METER

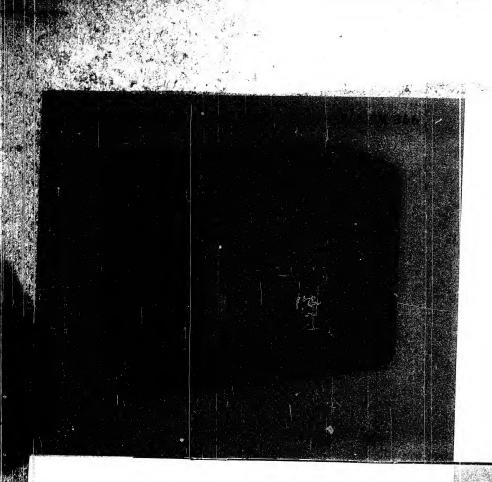

The inductance and capacitance measuring instrument TESLA BM 366 is an electronic instrument for measuring capacitances and inductances. Its small dimensions and light weight make it particulorly sultable for applications in repair work and servicing; however, it is suitable also for routine laboratory measurements.

DESCRIPTION

The operation of the instrument is based on the resonance principle. The inductance or the capacitance which hos to be measured forms, together with the built-in capacitance or inductance, an oscillatory measuring circuit into which on R. F. voltage of variable frequency is injected. When the ascillator is tuned to the frequency which is equal to the resonant frequency of the oscillatory circuit, the meter of the built-in V. T. voltmeter indicates maximum deflection. The tuning capacitor of the oscillator is fitted with a dial calibrated in terms of capacitance and inductance. Consequently the results of measurements are indicated directly by the graticule on the dial of the instrument.

CONNECTION TO THE MAINS

Before the instrument is connected to the mains, it must be ascertained that it is switched to the avoilable mains voltage. For changing the mains voltage, a selector switch is provided on the back wall of the instrument. The disc of this switch can be rotated after its centre screw has been released. The number corresponding to the ovailable mains voltage must be set against the triangular mark. After changing the voltage, the centre screw must be tightened again in order to secure the chosen position of the switch. When the disc is in the position indicated in Fig. 2, the instrument is switched to the mains voltage of 220 V.

A certain number of instruments have been fitted with a mains changeover switch of a different type. To adjust the mains voltage of these instruments, the retaining metal strip of the changeover disc must be removed, then the disc is withdrawn and replaced in such a position that the number on it which corresponds to the ovailable mains voltage is under the triangular mark. After completing the mains voltage selection, the retaining strip must be replaced.

the pilot lamp mounted on the panel glows. Before beginning the actual measurement, it is recommended to allow approximately 15 minutes to e'apse to ensure thermal stabilization of the instrument. Then the switch P (Fig. 1) is placed in the position Cx or Lx according to the component which has to be measured. An inductor has to be connected between the binding post marked Lx and the binding post marked earth (±); a capacitor has to be connected to the binding post Cx and ± either directly or by the application of connecting wires which, may affect the accuracy of the measurement owing to their inductance (capacitance). Therefore, very small inductances and capacitances must be connected either directly to the binding posts, or, if the use of connecting wires is unavoidable, the self-inductance of the latter must be deducted from the result of the measurement. The capacitance of the connecting wires can be compensated for with the trimmer Co which is on the left side wall of the instrument near to the binding posts. To set this trimmer, the connecting wires are attached to the binding posts, resonance is established and then the shaft of Co is rotated to set the dial back to zero.

The control K2 (Fig. 1) is set to the range which is expected to cover the value of the measured component. The sensitivity of the V. T. voltmeter is then adjusted with the control K1. When the oscillator is tuned to resonance, it is necessary for the zero of the indicator to lie in the middle of the scale near the red dot marked "max.". The black field to the lefthand side of this position indicates an enlarged zero position and deflections within its range are useless for the measurement. The other black field on the right-hand side near the full scale deflection, is similarly unsuitable for the measurement. In some instances a grid current flows in the V. T. voltmeter and the oscillatory measuring circuit is damped, so that the accuracy of maximum setting is reduced.

The water to place this been established. Live at making a particular of the dial of the state of the dial of the state of the dial of the state of the particular of the state of the dial of the state of the particular of the state of the

The Control of Committee A TM, 506 is designed to a

transmitted by the second of t

aber seinisterieter (1964-1965). 35. als Universioni (1964-1966) selli

racy by a simple method by the application of the instrument TESLA BM 366. Usually the specific capacitance of the cable, i. e. the capacitance per metre of length, is known; therefore it is sufficient to measure the capacitance of one end of the broken cable and to divide the result by the specific capacitance. The result is the distance (in metres) of the fault from the end where the measuring instrument has been applied. If the specific capacitance of the cable is not known, both ends of the cable must be measured and the location of the break ascertained as follows:

The following values are known:

- total length of the cable

C₁ - capacitance measured at one end

 C_2 — capacitance measured at the other end.

The distance of the fault from the first end is given by the relation: where the distance is in metres and the capacitances in any units which must be identical.


The distance of the fault from the other end is given similarly as follows: The accuracy of location is determined by the accuracy of the instrument and the production accuracy of the cable, i. e. it depends a great deal on the evenness of the specific capacitance along the cable.

MUTUAL INDUCTANCE AND COUPLING FACTOR MEASUREMENTS

Two coils L1 and L2 placed at a distance x from each other are mutually coupled. It is often necessary to know the coupling factor k or the mutual inductance M. To set a pre-determined mutual inductance M, the procedure is as follows:

1. The coils are connected in series and the inductance $L'_{ab} = L_1 + L_2 + 2M$ is measured.

The coils must be connected so that the directions of the windings are the same.

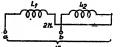

2. The connections to one of the coils are changed and the inductance $L_{ab}^{"} = L_1 + L_2 - 2M$ is measured.

The mutual inductance M is one quarter of the difference between the results obtained as described above.

If the coupling factor k has to be found, the following relation must be used: (L1 and L2 are the individually measured inductances of the coils.) (M, L'ab, L'ab, L1, L2 must all be in identical terms μH or mH.)



TECHNICAL DATA

Inductance ranges:

0.02 μH — 2.5 μH 2.5 μH — 12.5 μH 12.5 μH — 100 μH 100 μH — 1 mH 1 mH — 10 mH

Accuracy of measurement:

 \pm 2.5 % \pm 0.02 μH at an ambient temperature of 18 °C to 25 °C

Capacitance ranges:

0 pF 100 pF 1,000 pF 10,000 pF 100 pF 1000 pF 10,000 pF 0.1 μF

Accuracy of measurement:

 \pm 1.5 % \pm 0.5 pF at an ambient temperature of 18 °C to 25 °C and for C > 25 pF.

 \pm 0.5 % in all ranges

Reading accuracy: Tube complement:

6CC31, 6F32, 6Z31 120 V or 220 V, 50 c/s

Powering:

Safety devices:

Mains fuse for 120 V, 0,4 A, or mains fuse for 220 V, 0.2 A

Power consumption: Dimensions:


15 W 260×190×145 mm

Weight:

5.2 kg




tance M, the procedure is as follows:

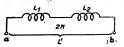

1. The coils are connected in series and the inductance $L_{ab} = L_1 + L_2 + 2M$ is measured.

The coils must be connected so that the directions of the windings are the same.

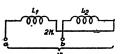

2. The connections to one of the coils are changed and the inductance $L_{ab}^{"} = L_1 + L_2 - 2M$ is measured.

The mutual inductance M is ane quarter of the difference between the results obtained as described above.

If the coupling factor k has to be found, the fallowing relation must be used: (L1 and L2 are the individually measured inductances of the coils.) (M, L'ab. L'ab, L1, L2 must all be in identical terms \(\mu H \) or mH.)

TECHNICAL DATA

Inductance ranges:

0.02 μH - 2.5 μH 2.5 μH - 12.5 μH 12.5 μH - 100 μH 100 μH - 1 mH 1 mH - 10 mH

Accuracy of measurement:

 \pm 2.5 % \pm 0.02 μH at an ambient temperature of 18 °C to 25 °C

10,000 pF

Capacitance ranges:

0 pF 100 pF 1,000 pF 100 pF 1000 pF 10,000 pF 0.1 μF

Accuracy of measurement:

 \pm 1.5 % $\,\pm$ 0.5 pF at an ambient temperature of 18 °C to 25 °C and for C > 25 pF.

Reading accuracy: Tube camplement:

 \pm 0.5 % in all ranges 6CC31, 6F32, 6Z31 120 V or 220 V, 50 c/s

Powering: Safety devices:

Mains fuse for 120 V, 0,4 A, or mains fuse for 220 V, 0.2 A

Power cansumption:

15 W

Dimensions: Welght:

ELECTRICAL COMPONENTS

260×190×145 mm

5.2 kg


and 220 V, and an instructions



1			
	Standard CSR	TC 334 30 TC 334 30 WK 714 31 5k/D WK 714 31 5k/D WK 714 31 5k/D TC 122 M25 TC 305 10/B WK 714 07 100/B WK 714 08 320/B WK 714 08 320/B WK 714 07 100/B TC 120 25k	
	Max. D. C. voltage	400 V 400 V 250 V 250 V 400 V 600 V 500 V 500 V 500 V	in parallel in -arallel in parallel
	Value	30 pF 30 pF 5,000 pF 5,000 pF 0.25 μF 100 pF 600 pF 320 pF 100 pF	Ca = C5 + C8 in parallel Cb = C18 + C19 in -arallel Cd = C24 + C25 in parallel
	At	trinmer trinmer mica mica poper ceranic mica mica mica pica	
	2	00000000000000000000000000000000000000	

Meter	1AP 780 24
Tube E1 (6Z31)	1AP 110 41
Tube E2 (6CC31)	1AN 110 97 (1AN 110 83)
Tube E3 (6F32)	1AN 110 43
Pilot lamp	1AN 109 12
Fuse cortridae	CSN 35 4731
	0.2 A/250 V
Fuse contridos	CSN 35 4731
	0.4 A/250 V

marked 1AN 110.. are specially selected for

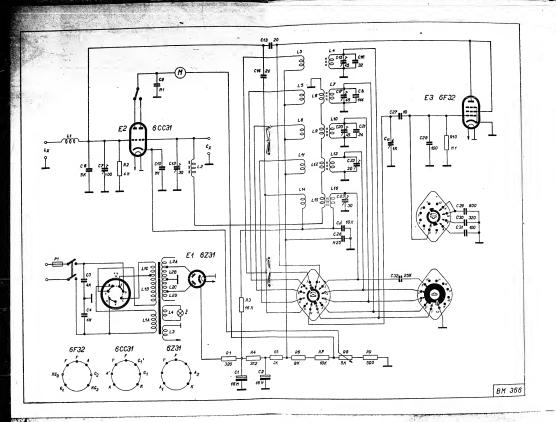

LIST OF ELECTRICAL COMPONENTS

Resistors

No	Art	Value	Max. load	Standard CSR
R1	carbon layer	320 Ω	0.5 W	TR 102 320
R2	carban layer	4 MΩ	0.5 W	TR 102 4M
R3	carbon layer	16 kΩ	1 W	TR 103 16k
R4	carbon layer	3.2 kΩ	1 W	TR 103 3k2
R5	carbon layer	2 kΩ	0.5 W	TR 102 2k
R6	carbon layer	8 kΩ	1 W	TR 103 8k
R7	carban layer	10 kΩ	1 W	TR 103 10k
R8	patentiameter	5 kΩ	0.5 W	WN 695 00 5k/N
R9	carban layer	500 Ω	0.5 W	TR 102 500
R 10	carbon layer	0.1 MΩ	0.5 W	TR 102 M1
R 11	carban layer	10 Ω	0,25 W	TR 101 10/A
R 12	carban layer	20 Ω	0,25 W	TR 101 20/A

By same instruments is parallel connected the resistor R 11 or R 12 to the coil L 15 $\,$

Capacitars

Lapaci	tors			
No	Art	Vatue	Mox. D. C. voltoge	Standard CSR
C1)				
C2	electrolytic	16/10μΕ	350/385V	TC 519 16/16M
C3	paper	4,000 pF	1,000 V	TC 124 4k
C4	paper	4,000 pF	1,000 V	TC 124 4k
C 5,8	tuning	2×500 pF	250 V	1AN 705 06
C6	mica	5,000 pF	250 V	WK 714 31 5k/D
C7	trimmer	100 pF	400 V	TC 340 100
C9)	black	2×0.1 μF	- 250 V	TC 461 2×M1
C 10	DIOCK	2 Λ0.1 μΓ	230 V	
C 12	trimmer	30 pF	400 V	TC 334 30
C 13	ceramic	20 pF	600 V	TC 305 20 B
C 14	ceramic	20 pF	600 V	TC 305 20/B
C 15	trimmer	45 pF	400 V	TC 334 45
C 16	mica	32 pF	500 V	WK 714 07 32/B
C 17	trimmer	45 pF	400 V	TC 334 45
C 18	mica	80 pF	500 V	WK 714 07 80/B
C 19	mica	64 pF	500 V	WK 714 07 64/B
C 20	trimmer	45 pF	400 V	TC 334 45
C 21	mica	24 pF	500 V	WK 714 07 24/B

Vzdálenost místa přerušení od prvního konce je dána vztahem


kde vzdálenosti jsou v metrech a kapacity v libovolných ale stejných jednotkách.

Pro vzdálenost místa přerušení od druhého konce platí analogicky

Přesnost měření je dána přesností přístroje a přesností, s jakou je vyráběn měřený kabel, tj. s jakou je dodržena jeho měrná kapacita.

MĚŘENÍ VZÁJEMNÉ INDUKČNOSTI A ČINITELE VAZBY


Dvě cívky L, a Lz ve vzdálenosti x jsou vázány mezi sebou vazbou. Často je třeba činitel vazby k nastavit, nebo znát vzájemnou indukčnost M. Pří nastavování vzájemné indukčnosti M se postupuje takto:

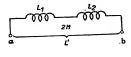

1. Cívky se zapojí do serie a změří se indukčnost

$$L_{ab}^{\prime}=L_{\scriptscriptstyle 1}+L_{\scriptscriptstyle 2}+2M.$$

Cívky musí být zapojeny tak, aby smysl vinutí byl stejný.

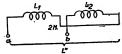

2. Zamění se přívody jedné cívky a změří se znovu

$$L_{ab}^{\prime\prime}=L_{\scriptscriptstyle 1}+L_{\scriptscriptstyle 2}-2M$$

Vzájemná indukčnost M je čtvrtina z rozdílu změřených indukčností $\mathbf{L_{ab}}$ a $\mathbf{L_{ab}}$

Máme-li zjistit k (činitel vazby), dosadíme do známé rovníce. (L1 a L2 jsou změřené indukčností každé cívky zvlášť) (M, L_{ab} , L_{ab} , L_1 , L_2 ve stejných jednotkách μH , mH)

TECHNICKÉ ÚDAJE

 $0,02 \mu H = .2,5 \mu H$ Rozsah indukčností:

2,5 μH – 12,5 μH 12,5 μH – 100 μH

100 μH – 1 mH 1 mH – 10 mH

 \pm 2,5 %, \pm 0,02 $\mu \mathrm{H}$ při teplotě okolí 18–25 °C Přesnost měření:

Rozsah kapacit: 100 pF — 1.000 pF 1.000 pF — 10.000 pF

— 100 pF

10.000 pF - 0,1 μF

 \pm 1,5 % \pm 0,5 pF při teplotě okolí 18–25 °C a C > 25 pF Přesnost měření:

± 0,5 % na všech stupnicích Přesnost odečítání:

6CC31, 6F32, 6Z31 Osazení:

120 nebo 220 V, 50 c/s

Napájení: tavnou pojistkou v síť. obvodu Jištění:


pro 220 V 0,2 A; pro 120 V 0,4 A

cca 15 W Příkon:

260×190×145 mm Rozměry:

5,2 kg Váha:



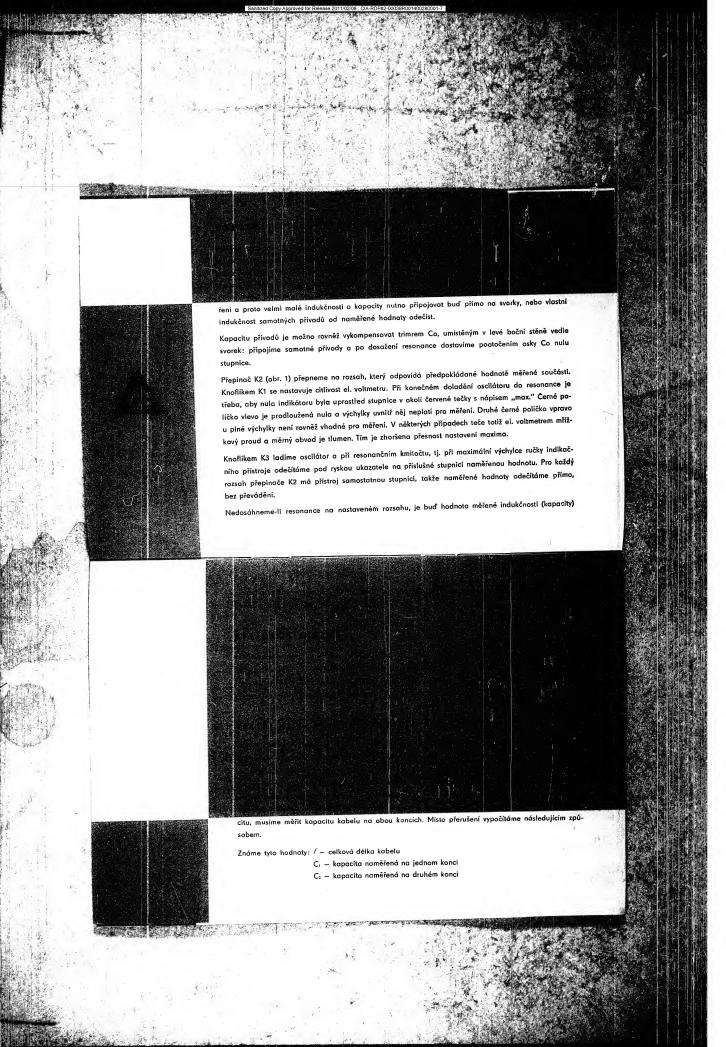

Měřič indukčností a kapacit TESLA BM 366 je elektronický měřicí přístroj pro měření kapacit a indukčností. Malé rozměry a váha jej předurčují pro použití v dílenské a opravářské praxi, lze jej však použít i pro běžná měření laboratorní. POPIS Přístroj pracuje na principu resonančním. Měřená indukčnost nebo kapacita tvoří spolu s vestavěnou kapacítou nebo indukčností kmitavý obvod, na který se přivádí vf napětí proměnného kmitočtu. Při naladění oscilátoru na kmitočet, který odpovídá resonančnímu kmitočtu kmitavého obvodu, ukáže měřidlo vestavěného elektronkového voltmetru maximální výchylku. Ladicí kondensátor oscilátoru má stupnici cejchovanou v hodnotách kapacit a indukčností, takže naměřené hodnoty odečítáme přímo pod ryskou ukazatele. PŘIPOJENÍ NA SÍŤ Před připojením na síť se přesvědčíme, zda je přístroj přepojen na správné síťové napětí. Přepojení se provádí kotoučkem přepinače na zadní stěně přístroje. Otáčením šroubu uprostřed kotoučku voliče kotouč uvolníme a natočíme tak, aby číslo udávající správné síťové napětí bylo pod trojúhelnikovou značkou. Šroub potom opět zašroubujeme a tím kotouček zajistíme. Je-li kotouček v poloze naznačené na obr. 2, je přístroj přepojen na síťové napětí 220 V. V náběhu serie byl u přístrojů použit jiný typvoliče napětí. Přepínání se u tohoto typu voliče provádí po uvolnění zajišťovacího kovového pásku, vytažením přepínacího kotoučku a zasunutím tak, aby číslo udávající napětí sítě bylo pod trojúhelníkovou značkou. Po přepojení je třeba opět připevnít zajišťovací pásek. Vedle voliče síťového napětí je síťová pojistka a síťová zástrčka. Při přepojení přístroje na jiné sí**ťové napětí je třeba vyměnit** siťovou pojistku. Hodnoty pojistek pro napětí 120 V a 220 V jsou uvedeny v odstavci "Technické údaje".

STABILISÁTOR STŘÍDAVÉHO NAPĚTÍ TESLA BM 206 (1964)



Stabilisátor střídavého napětí je určen pro obory elektrotechnicstanislavorstrdaveňo napětie určen pro obory elektroecehnického prumytul, deš s vyžaduje konstancia napětic i zívšavá napěti. Lez jej použit při provozu nejrôznějích elektrištych přistroje, protoce stalkliných kollující napěti sité pro každou zátěž v mezich udaných hodnot, je jednoduchý a pracuje zcela sevonaticky. Novjete se použité v kinematografii, při použití fotočlánků, fotometrů, komparšoro barev a).

Stabilisátoru střidavého napěti lze s výhodou používat rovněž pro napájení různých lékafských přistrojů, obzvláště v roentge-nologii, kde udržuje stojnoměrné žhavicí napětí a zvyšuje tím životnost lamp.

Širokými možnostmi využiti se stává stabilisátor TESLA BM 206 nezbytným doplňkem každé dobře vybavené laboratoře.

POPIS PŘÍSTROJE

Stabilisátor pracuje s magneticky přesyceným železem a skládá se z prvků, jež jsou v částečné resonanci.

Pracuje zcela samočinně a bezhlučně a nevyžaduje žádné obsluhy. Do provozu se uvádí pouhým připojením na slč.

Výstupní napětí je pro každou zátěž až do 300 W neproměnné a odebírá se ze tři párů zdířek, umistěných na čelní desce přistroje.

Přisluženství, které je dodáváno s přistrojem, tvoří síčová Shúra se zásuvkou a zástrčkou "Flexo" a sáček s náhradní pojistkou.

Stabilisátor je konstruován pro 220 V — 50 c/s, při účiníku sltě cos $\phi \doteq$ 1. Stabilita výstupního napětí při kolisání sítě o ± 15% je lepší než 1%. Výstup je upraven pro tři různé maximální zátěže: 100, 200, 300 W.

360 W.

Spotřeba naprázdno: max. 70 W

Jištěni: disvou pojistkou 2.5 A


Rozměry: Hřka 265 mm

Noukha 320 mm

Váha: 25 kg

Váha:

SCHEMA

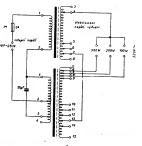

INSTRUCTIONS FOR USE

RUCTIONS FOR USE

The TESLA A. C. voltage stabilizer, type BM 206, is designed for use in all fotos branches of the electrical industry where constant voltage is required for the powering of appliances. It may be utilized for usupolying A. C. to electrical instruments as it stabilizes flustuating mains voltage regardless of load within the raced limits. The stabilizer is of simple design and operates fully aucomatically, it is most useful in the motion picture industry for the feeding of photoelectric cells, photometers, colour comparators, etc.

The TESLA stabilizer can be applied to advantage for powering medical instruments, especially X-xyr instruments, in connection with which it maincains a steady filament current and enhances the life of the tubes.

Owing to its versatility and wide possibilities of application, the TESLA MI 200 stabilizer is indispensable in all well equipped laboratories.

A. C. VOLTAGE STABILIZER TESLA BM 206

RIPTION

The TESIA stabilizer type BM 206, is designed for 220 V, $50\,c/s$ as a power factor $\cos\gamma \pm 1$, utilizes saturated from cores and is made up of components which are in partial resonance. The couptry voltage stability is better than 1.96 at main voltage fluctuations of $\pm 15\%$. The stabilizer operates automatically with a minimum of noise and does not require any maintenance. To see the stabilizer in operation it is sufficient to connect it to the main.

The output voltage can be taken from three pairs of terminals on the front panel of the stabilizer, Outputs are designed for loads 100, 200 and 300 W.

The following are supplied with each stabilizer as standard stocknown and the stabilizer than the stabiliz

WECHSELSPANNUNGSGLEICHHALTER TESLA BM 206

BEDIENUNGSANLEITUNG

ENUNGSANLEITUNG

Dieser feshilitztor für Wechtelspannungen ist für alle Betriebsfille in der Elektroetechnik bezimmt, die eine konstante Speisestannungen der Bestroetechnik bezimmt, die eine konstante Speisestannungen der Bestroetechnik bezimmt, die eine konstante Speisestannungen der Speiser der Speiser der Verschieder,
stannungen der Speiser der Speiser der Verschieder,
staften eine Gerik arbeitet vollig stommtisch von Fotocellen,
stachten der Speiser der Speiser der Speiser der Verschieder von Fotocellen,
stachten der Kannatersphis, beim Betrieb von Fotocellen,
stachten der Kannatersphis, beim Betrieb von Fotocellen,
stachten der Kannatersphis beim Betrieb von Fotocellen,
stachten von Speiser der Stabilitätor Tasla BN 202 zur unumgänglichen Aurrättung jedes
neutweitlichen Laborstoriums.

Der Spannengsfleichhalter itt für eine Netzspannung von 220 V. 50 Per., con w. 2.1 gebau.
Die stabilitäterende Wirkung bereite und dem Prinzip der magnetischen Steitigunge, wobei einneht auf des Stromkreites in Annonen arbeiten. Dies prachier in die Stromkreites in Annonen arbeiten. Dies prachier in des Stromkreites und Annonen arbeiten. Dies prachier in des Stromkreites und eine Warreng. Die Gerit stabilitäter die Netzestabankangen auf Warreng. Die Gerit stabilitäter die Netzestabankangen auf Sport mit Gerit des Gerit des Stromkreites und der Stromkreiten des Stromkreites des

стабилизатог нашеляжения TESLA BM 206

назначение

НАЧЕНИЕ

Слабсильное непремении предпачен для применения в раздичных отражения съедитерозания, требуращих въстоянство
веничных напримения петочных переовинот точа. Отвденням применять напримения петочных переовинот точа. Отвденням применятел при наслачения стабильноеми предоставител точа. Отвденням применения при напримент стабильноеми патружни
правилих ресусмах.

гланикх пресмах.

гланики пресмательноеми пресмательноеми преприсмательноеми пресмательноеми преприсмательноеми пресмательноеми преприсмательноеми преприсма



STABILISÁTOR STŘÍDAVÉHO NAPĚTÍ TESLA BM 206 (1964)



Stabilisátor střídavého napětí je určen pro obory elektrotechnicstabilistor strádavého napát je určen pro obory elektrocechnic-kého prámyti, kde z vyžáduje konstanci napítej střídavé napáti. Lte jej použít při provozu nejrůmářích elektrických přistrojů, prozic stabilisuje kolijající napát sité pro kizdou zácěl v mesích udných hodnoc, je jednoduchý a pracuje zeola sucematicky. Navýce se používá v kinematografií, při použítí socilánků, fotometrů, komparkorů barev a j.

Stabiliskoru střídavého napětí lze s výhodou používat rovněž pro napájení různých lékařských přistrojů, obzvážtě v roentge-nologií, kde udržuje stejnoměrné žhavicí napětí a zvyšuje tim

Širokými možnostmi využití se stává stabilisátor TESLA BM 206 nezbytným doplňkem každé dobře vybavené laboratoře,

POPIS PŘÍSTROJE

POUŽITÍ

Stabilisátor pracuje s magneticky přesyceným železem a skládá se z prvků, jež jsou v částečné resonanci.

Pracuje zcela samočinně a bezhlučně a nevyžaduje žádné obsluhy. Do provozu se uvádí pouhým připojením na síč.

Výstupní napětí je pro každou zátěž až do 300 W nej a odebirá se ze tři párů zdířek, umístěných na čelní desce při-stroje.


Přislušenství, které je dodáváno s přistrojem, tvoří slťová šhúra se zásuvkou a zástrčkou "Flexo" a sáček s náhradní nolimban.

Stabilisátor je konstruován pro 220 V — 50 c/s, při účiníku sítě cos $\varphi \doteq$ 1. Stabilita v Stabilita výstupního napětí při kolisání sítě o ± 15% je lepší než 1%. Wystup je upraven pro tři různé maximální zátěže: 100, 200, 300 W.

360 W. Yatupni napětí neni čistě sinusového průběhu.
Spotřeba naprázdoci max, 70 W
Jištěnii sičovou pojistkou 2,5 A
Rozměry: Jiřka 255 mm
Houbka 320 mm
Váha: 25 kg

Váha:

SCHEMA

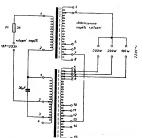

INSTRUCTIONS FOR USE

RUCTIONS FOR USE

The TESLA A. C. voltage stabilizer, type BM 206, is designed for use in all those branches of the electrical industry where constant voltage is required for the powering of appliances, it may be utilized for supplying A. C. to electrical instruments as it stabilizes fluctuating mains voltage regardless of load within the raced limits. The scaliblizer is of simple design and operates fully automatically. It is most useful in the motion picture industry for the feeding of photoelectric cells, photometers, colour comparators, etc.

The TESLA abulisher can be applied to advantage for powering medical instruments, stapecially. X-ray instruments, in connection with which it matastains a tready filament current and enhances the first of the cubes.

Owing to its versatility and wide possibilities of application. the TESLA BPL 200 stabilizer is indispensable in all well equipped laboratories.

A. C. VOLTAGE STABILIZER TESLA BM 206

The TESLA stabilizer type BH 206, is designed for 220 V, 50 c/s at a power factor $\cos \gamma \triangleq 1$, withins saturated iron cores and is made up of components which are in partial resonance. The coupur votage stability in better than 2.06 k at miss votage fluctuations of ± 150 s. The stabilizer operates automatically with a minimum of noise and does not require any maintenance. To see the stabilizer in operation it is sufficient to connect it to the main.

The output voltage can be taken from three pairs of terminals on the front panel of the tabilizer. Outputs are designed for loads 100, 200 and 300 W.

The following are supplied with each stabilizer as standard accessories: a student insulated mains cord fitted with plug and connector and a spare mains fuse.

WECHSELSPANNUNGSGLEICHHALTER TESLA BM 206

BEDIENUNGSANLEITUNG

ENUNGSANLEITUNG

Dieser Stabilitäter für Wechselspannungen ist für alle Betriebsfälle in der Elektrotechnik betrimmt, die eine konstante Speisespannung der Elektrotechnik betrimmt, die eine konstante Speisespannung der der der Stabilitäter unter Stabilitäter eine Stabilitäter der Stabilitäter der Stabilitäter und den anstegenen einstehe Gerät arbeitet vollig automatiet von Fotozallenstächlich der Stabilitäter unter Stabilitäter St

BESCHREIBUNG

MREIBUNG

Der Spannungsgleichhalter ist für eine Nettspannung von 220 V, 50 Per., con g = 1 zehben.

Die stabilisierende Wirkung blench auf dem Prinzip der magnesiehen Steiligung, wobei einstelle dies Stromkerises in
Annonan arbeiten. Dies geschlich vollig selbsteiligt und gerüssellon, ohne die Notwendigkeit ir zud einer Wartung.

Die Geste stabilisiere die Nettschahnunge all Spg eine Gesausglein (220 V 15) bei einschahnunge allege die Gestelle und den Verstelle und den Verstelle und den Verstelle und den Verstelle und der Verstelle und den Verstelle und der Verstelle und den Verstelle und der Verstelle und de

стабилизатог напряжения **TESLA BM 206**

назначение

НАМЕНИЕ

Слобаданску выправнении предвичен для применчини в раздичных отражених сенегротехника, гребураних въестоиство
поличных погражених сенегротехника, гребураних въестоиство
поличным выправнения пъстоиння
порежинето толь. Отдення объектором предвижения
предвижения предвижения от стабовления пътричних
поличени выправнение если при въводен величине патружни
поличени въргатири пред пред постои получени патружни
поличени поличения пред постед при получени патружни
поличени получения под получения при получения патружни
поличения въргатири получения при получения патружни
поличения въргатири получения при получения при получения при получения
получения на получения получения при получения при получения при получения получения
получения объектами, фотометрами, получения питании ражинписа устратири получения патружни подделяющими получения по

ОПИСАНИЕ





STŘÍDAVÝ ROZVOD TESLA BM 207

Stidarý rotvod TESA BM 201 je vhodný zároj nestabilitovaného střídového napší po dnos zároba i laboratomi pracováté v elektrotechníckém oboru. Dovoluje ode břeta jimnovité střové napší 130 a 200 V regulovaných a všechna běřná napší pro Borem. – vstonek buď neregulované, nacho nepo regulované, Razosta negulova je a 15½ Razod je výbove hostohním řábitaní přístvol, které te použít je ja v měšení vástoké nacho a deběrných provod, lok i pro nách mělení nimo přítruty.

POPIS FUNKCE

PRIPOJENI NA SIT

FRE diplogismin plistoje na sit nutno zkontrolovat správnou polohu valičá napěti, emistêný h na zadní sténě chassis. Případné přepojení provedeme po uvolnání zpjištovacího pásku, vytačením a opětným zosunutím přeplnacích kotosků lok, chy čásla odpovádující napětí sitě byla nastaveno proti troje halenítěková nacez. Zpjištovací páska, nutno opět upentiží. Z udovíny pe listoria ostavena zoží V. Vedle valičá napětí je umístena zápistka a zástavána obstavení post upentižíva svána postavení postavení za trožíva, označená vlnovkou. Sít zapínáme, respektíve vypladme vyplnačem V 1. Po sepruší vyplnače V 1 čazvítí se na panelu červená indíkační žárovka.

POUZITI PRISTROJE

Výstupní džilhy jou romistány v pravé poloviná panelu a jsou núznoborevné aznačeny. Ze čnou párů zdříak aznačených bilými kroužty ize odebírat ples oplistu přístupe jimenovité sitové nopětí. Regulované napětí 120 v a 220 v odebíráma ze zdříek, aznačených kroužky čerenými. Výstupní zdříky žhovicích napětí jeou aznačeny barou zděnou. Toto napětí mohou být regulovaná nebo nerzúlovaná, podle poloby přepínobě P 4. Všechny výstupní zdříky jsou označený údojem napětí op přístupní zdříky jsou označený údojem napětí op příjoustného proudu. Dobrou informací o zapojení a pouřití přístoje dává borevné označení zdříek a názorné schema vyznacema naposle.

Regulované napětí a přípustné proudy - - - 220 V/2 A, 120 V/2 A, 55 V/1 A, 12,6 V/2 A, 6,3 V/3 A, 5 V/3 A, 4 V/3 A, 2,5 V/4 A

Moximólní odběr ze všech zdířek 4 A

Regulačni rozsah: noprázdno - - - - -odběr 2 A - - - -Vnitřní odpor - - - -- menší než 3 Ohmy střidavá síť 120 nebo 220 V – 50 c/s Napájení - - - - - - Příkon naprázdna - - - střídovo síť 120 nebo zeu v – 30 čís regulace no maximum – 54 W regulace no minimum – 34 W tovná pojistka 4 A/250 V pro obě nopětl (při přepojení na 120 V o zatřžení plných 700 VA, doporučujeme vyměnit pojistku za silnější.)

490×230×340 mm

A. C. POWER SUPPLY UNIT TESLA BM 207

The A. C. power supply unit TESUA BM 207 is designed for use as a source of unstabilized A. C. voltreas is of electrical engineering. It delivers controllable mains voltages of 120 V and 220 V, and controllable or a receiving tuber. The orange of control is a, 15%: The supply unit is fitted with massuring instruments when the unit or supplied by any other external source.

OFERATION
The variable mains transformer controls the mains valtage within a 15%. The primary coil of a reparete transformer which delivers the filament valtages can be commended either directly to the mains or to the variable mains transformer. The voltmeter of the unit can be connected with the switches F2 and F3 to any of the output, and the control of the control of the variable mains to the variable mains to the variable mains transformer. The voltmeter of the unit can be connected with the switch F1. A shorting link explanes the animater in the branch the current of which is not being measured. Maintains valtage drop on the animater is ass than 6.1. Yet

being measured. Mountum voltage drop on the ameter's less non v.l. v.

MAINS CONNECTION

Alone be build the power supply until is inserted into the receptore of the A.C. mains, it is necessary to make sure their the settings of the voltage selector switches the build of the power supply until to inserted into the book of the opporture. If necessary their settings on the change offer the securing strips have along with the owner until the mains voltage. These excenting strips must be pulled out, turned and replaced in such a manner law tongular the securing strips must be replaced. Each to, power supply up it is set to 200 V by the mokers. Next to the voltage chanthe voltable mains voltage. The securing strips must be replaced. Each change of the power can be switched on with the main switch V i. When the power is
gower switches are the mains fuse and a receptore marked — for the mains plug. The power can be switched on with the main switch V i. When the power is

APPLICATION

The output societs are situated on the right-hand side of the ponel and are colour moked. Two societs marked with white deliver the mains vallage and the mains. The output societs marked with red supply a controlled mains valtage of 120 V or 220 V. The output societs of filament valtages are marked with green. These vallages may be fixed or controlled according to the position of the switch P A. All output societs are marked with the valtages and currents which they are copable of deliverings. To facilitate application, the diagram of the unit is engineed on the popular.

switch the ammeter may be utilized for the current delivered by some external Source. In the position "120 V $= 2 \, \Lambda$ " or "120 V $= 0.4 \, \Lambda^2$ of this switch the ammeter microlicotes the current token from the rad sockets mornied "120 V $= 2 \, \Lambda^2$. The bulli-in voltameter measures oil output voltages of the Λ . C, power unit solved to the position "150 V $= 0.0 \, \Lambda^2$ or "100 V or "(but double of this switch the voltameter indicates the voltage of any external source connected to the sockets marked λ^2 . Which are not he leit-hand did of the position "51" (while dod) of this switch the voltameter indicates the moints voltage to which the opportunits is connected. By switching to the right-hand position (red dot) the voltameter is connected by switching to the right-hand position (red dot) the voltameter is connected by switching to the right-hand position (red dot) the voltameter is connected to the switch P3, which connects subsequently all output voltages to the instrument. All these voltages may be controlled within $\pm 15\%$ by operating the knob K,

Controllable voltages (permissible currents) - 220 V/2 A, 120 V/2 A, 55 V/1 A, 12.6 V/2 A, 6.3 V/3 A, 5 V/3 A, 4 V/3 A, 2.5 V/4 A

Maximum output of all sockets 4 A for 220 V . 190 V = 255 V . 187 V = 250 V Control range: no load - - -2 A load - - less than 3 Ohm . . A. C. 120 V or 220 V, 50 c/s

Mains supply · ·

Mains supply . A. C. 120 V or 220 V, 30 cs . More supply . A. C. 150 V or 220 V, 30 cs . More consumption with no load with the control set to minimum — 34 W with the control set to minimum — 34 W with the control set to minimum — 34 W or 150 V for both mains vallages fuse Whan the source is on the noise vallage 120 V full loaded (200 VA), the higher value of the fuse must be used.

WECHSELSTROM-SPEISEGERÄT TESLA BM 207

Das Wechselstrom-Speisegerdt TESLA BM 207 ist eine nichtsabilitierte Wechselstrom-wild. Das Geröt lielett eine regelborte, nominalle Spannung von 180 V und 200 V son-Der Regelbereich erstreckt sich auf 1. 197 ist eine herbenetes. Das Messgerött ist mit 4. onzeigen und ondreitels auch zur Messung tender Stramquellen herangezogen werd

AR BEITS WEISE
MIL HIVE cines Regultronsformators wird die Netrspannung im Bereich von munitelber aus dem Lichtnets oder aus der geregelten Netzspannung gespelst
der Umscholter P 2 und P 3 on die verlongten Ausgangsklemmen ongeschieben
der nicht gemessen wird, durch Kurtzchlus seretzt. Die Mazimal-Spannungs

an den nicht gemeisten wirs, burch nutschriss seiset. Um einzelben erhopenspalen AN SCHLUS AN DAS LICHTNETZ Vor dem Anschliesten des Messgerittes en des lichtnetzt ist die richtige Einstellum werden der Vertrag
LES IRREBUNG

- / Augungsbuchsen befinden sich auf der rechten Frontplattenhällte und sind
- ichniens kann über die Apparatioherung die naminelle Neutzehnung und
- ichniens kann über die Apparatioherung die naminelle Neutzehnung und
- ichniens der ichn

KONTROLLE DER STROME UND SPANNUNGEN
Samtliche dem Gerifs untommenen Ströme und Sponnungen können mit dem
ingebouten Ampermeter und Voltmeter sowie den zugebrigen Umschalten
P1, P2 und P3 gemessen werden.
Wenn der Umschalten P1 und 220 Vm.
0,4 An oder 220 V = 2 A* steht, zeigt
bereichneten Buchsen übegenommenen Ström und mit 220 V = 2 A*
bereichneten Buchsen übegenommenen Ström
bereichneten Buchsen Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buchsen Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buchsen Buchsen Buchsen Buchsen Buchsen Buchsen
bereichneten Buchsen Buch

Messinstrument zur Messing frender Stomagellen aussehnlich des Gerotes benützt werden. Bei der Stellung 120 V – 9.4 "oder 120 V – 9.4 "wird der aus den unteren. Bei des Stellung 120 V – 9.4 "beseichneten Buchsen disgenommen. Strom gemessen."


Zur Messing der Sponnung an sömilichen Ausgangsbuchsen sowie für verstern gemessen. Bei der Stellung 120 v – 9.4 "bei der Stellung 120 v – 9.4 "bei der Stellung 120 v – 9.4 "bei der Gestellung 120 v – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 2 v uf P. 3 V – 9.4 "bei der Umscholler P. 9.4 "bei der Umscholler P. 9.4 "bei der Verlagen der Verlagen 120 v – 9.4 "bei
ele, die in zahlreichen Werkstätten und Labaratarien der Elektraindustrie benützt üle gebräuchlichen Rährenheitspannungen, und zwar mit oder ohne Regelung sstumenten ausgestattet, die einerseits die gelieferten Ströme und Spannungen onnen.

oit. Die Primönwicklung des selbständigen Heiztransfarmators kann entweder Spannungen werden mit einem Valtmeter gemessen, das durch Betätigung n. Das Ampermeter mit umschaltbaren Bereichen (P 1) ist an der Abzweigung, 1 Ampermeter ist geringer als 0,1 V.


edenfarbig gekennzeichnet. Aus den zwei weiss umrandeten erden. Die geregelten Netzspannungen 120 V und 220 V können digrin gekennzeichnet. Diese Spannungen können je nach Stel-Buchsen und das auf der Frantplatte eingezeichnete, übersicht-enütung des Gerütes.

TECHNISCHE ANGABEN

Reglarminimum — 34 W Schmelzsicherung 4 A/250 V für beide Spannungen (für 120 V Netzspannung und Vollabnah-me 700 V Al its eine stärkere Sicherung zu benützen.) 490×230×340 mm 28 kg

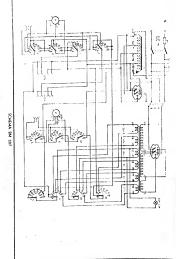




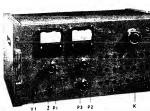

TESLA BM 2 NÁVOD K OBSLU

STEJNOSMĚRNÝ ROZVOD TESLA BM 208

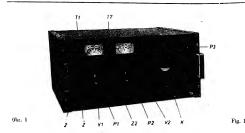

D. C. POWER SUPPLY TESLA BM 208

NÁVOD K OBSLUZE

NÁVOD K OBSLUZE

Stejnosměrný rozvod TESLA BM 208 je zdroj,
dovohlide plyvulou regulaci napětí od 0 do
500 V, při maximalimi odběru prouda 300 mA
do 250 V a 240 m A do 500 V. Napětí usení
stabilizováno. Odběr nastávenívání
možný za vlední v vicela v vicela. Je možní
proudu úbrnného. Kromě toho jsou vysedení
zditky pro sít a tři najběžnájší žiavicí napětí. Stejnosměrný rozvod TESLA BM 208 naleží
ča fady labotarotních přistrojí, konstituovajev
v panelovém provedení, takže jej jze s jinými
podobnými přistrojí seskupovat. Má štroké použití ve všech oborech elektrotechníckého práných slahoproudých zářízení v lihozenátech
pokusných a výskumných pracích, v opravářské
praxí apod.


INSTRUCTIONS FOR USE

The D. C. power supply TESLA BM 208 is a current source of continuously controllable output voltage from 0 to 500 V at maximum 300 mA up to 250 V and 240 mA up to 500 V. The delivered voltage is not subilized and is connected to 3-pairs of output scales. The currents and voltages of any of these outputs can be measured with the builtain instruments which also can indicate the total output. Sockets are fitted also which carry the mains voltage and 3 different commonly used A. C. Biament voltages.

The D. C. power supply TESLA BM 208 is built as a laboratory instrument. It is an independent panel unit and can be combined with other TESLA instruments to form a laboratory test assembly.


Description

V přistroji pracují dvè paralelně zapojené Two rectifying valves are applied in the power elektronky AZ 12 jako dvoucestný usměrňovač.
Filtrační řetěz zaručuje při zatřžení:
smootling network:

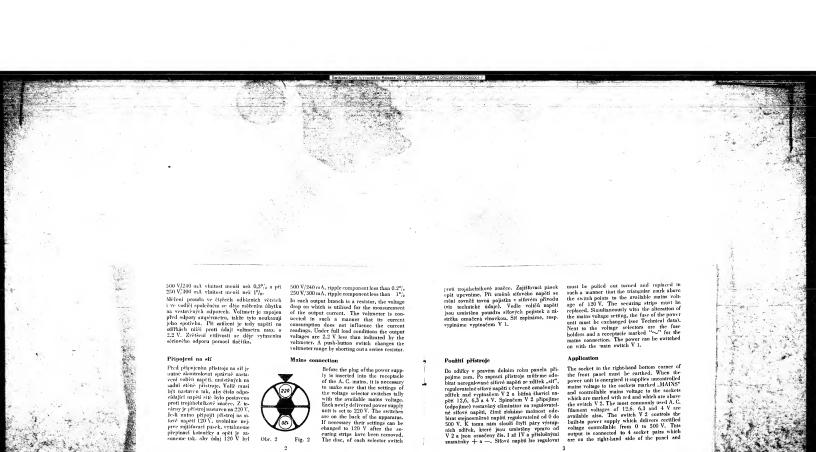

Obr. 2

Fig. 2

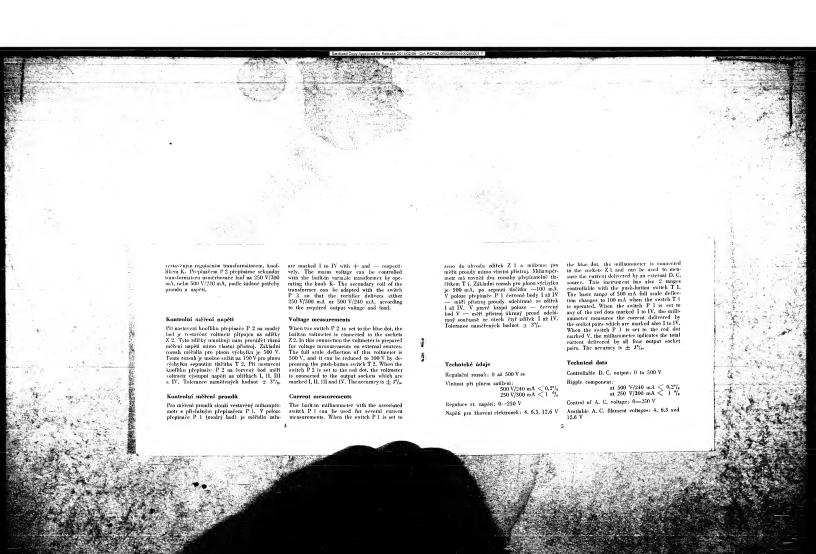


Valve complement: 2×AZ 12
Pilot lamp: 12 V/0.2 A
Mains consumption (no load): 85 W
Mains supply: 120 V or 220 V A. C., 50 c/s
Fuses: mains fuse 4 A — for 220 V
H. T. fuse 600 mA
Dimensions: vidth 490 mm
height 230 mm
depth 340 mm
Weight: 36 kg

ELECTRICAL COMPONENT LIST


No Type		Type Value Max. load W		Tole- rance ± '/ _n	Standard ČSR
R 8 R 9 R 10 R 11 R 12 R 13	Carbon layer resistor	100 kΩ 100 kΩ 100 kΩ 100 kΩ 100 kΩ 100 kΩ	1 1 1 1	10 10 10 10 10 10	TR 103 M 1/A


R1 — R7 are delivered with the measuring instrument 1 AP 780 02 and their values are chosen according to the used instrument.

Rp is delivered with the measuring instrument 1 AP 780 03 and its value is chosen according to the used instrument.

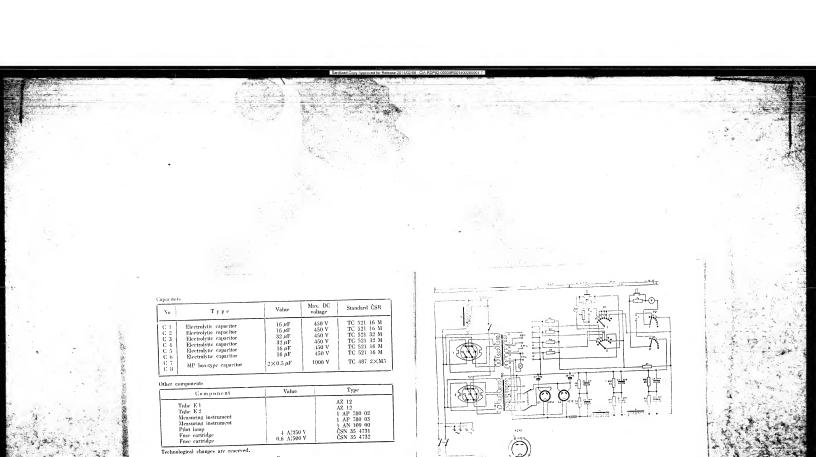

معد الرا

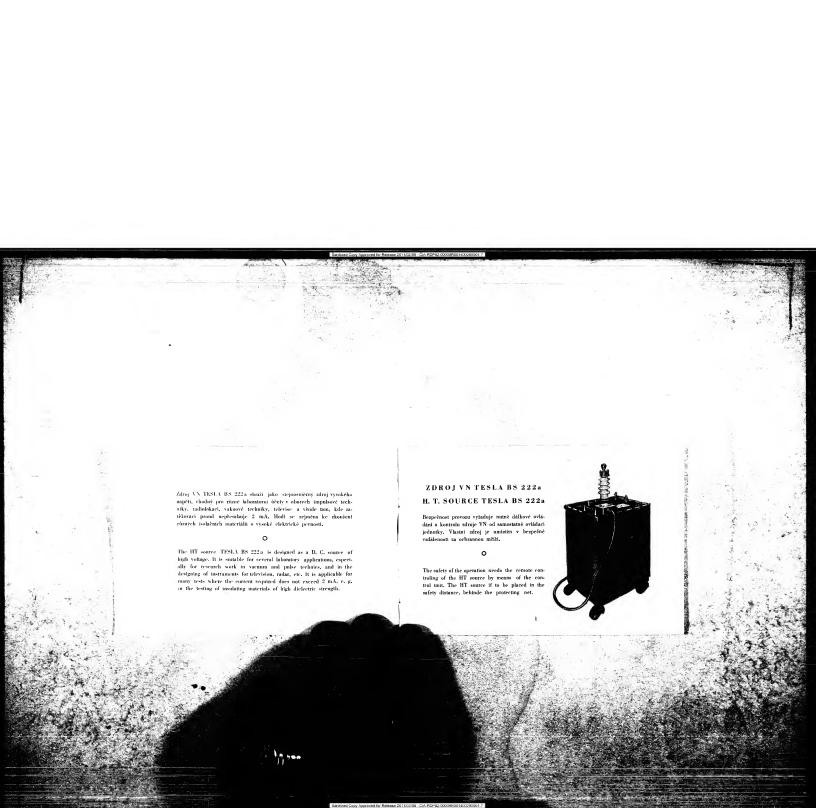

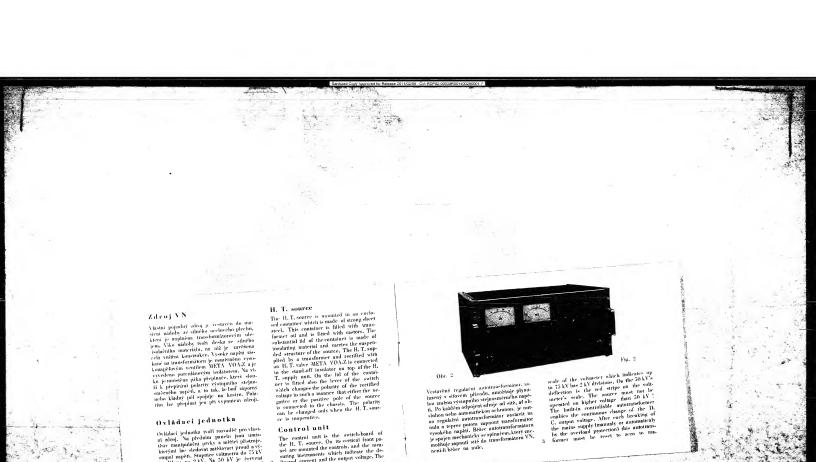

Control unit
The control unit is the switch-board of
the H. T. source, On its vertical front panel are mounted the controls, and the measuring instruments which indicate the delivered current and the output voltage. The

Ovládací jednotka

Ovlándaci Jednotka

Ovlándaci jednotka troři rozvadbě pro vlastni zdroj. Na přednim paneth jsou mnisteav manipulační prvky a měřicí přistopic kterými lez šelovat zaděbozat prout svě-sumjal napětí. Stupnice volimenta ovlá-ty dělena po 2 kV. Na 50 KV je streba-rsska. Zdroj se nesmí napětově předžovatí.



Proti přetížení při zkratech je zarizení jiště-no maximálním relé a stykačem.

Technické údaje

Stejnosměrné napěti :

regulovatelně od cea 115 V do 50 kV při zatížení je regula-ční rozsuh od 0-50 kV menší než 1 ⁰/₀

Zvlučni; Přesnost měření mapětí; proudu; Zatěžovací proud; Osazení;

eca 3 %/o cca 3 %/o cca 2 mA tryale 1 x ventil META VOA - Z 220 V, 50 c/s max, 350 W Napájeni : Příkon ;

ke possible the switching on of the H. T. transformer. The slider of the autotransformer is connected mechanically to a circuit breaker which prevents the connection of the mains to the H. T. transformer when the slider is not in the zero possition.

An overload relay and a circuit breaker protect the apparatus against damage when a short circuit occurs across the output.

Technical data

Technical data
D. G. output voltage: continuously control lable from approx. 115 V to 50 kV. Under look the range is 0-30 kV. less than 1½ less than

2 mains fuses 1 A and a built-in automo-tic circuit breaker.

Rozmèry a váha Dimensions and Weight	výška Height	šířka Width	hloubka Depth	vāha kg
zdroj H. T. source 50 kV	910+	460	1-10	eca 140 approx.
ovládací jednotka Control unit	230	190	110	eca 20 approx.


+) vėctnė isolatoru — including stand off insulator


Příslušenství

Jako přislušenství se dodává s přistrojem přívodní sífová šňúra "Flevo", sáček s ná-hradními pojistkami a návod k obsluze.


Accessories


Supplied with each apparatus are: a mains cable, a bag with spare fuses, and an instructions booklet.

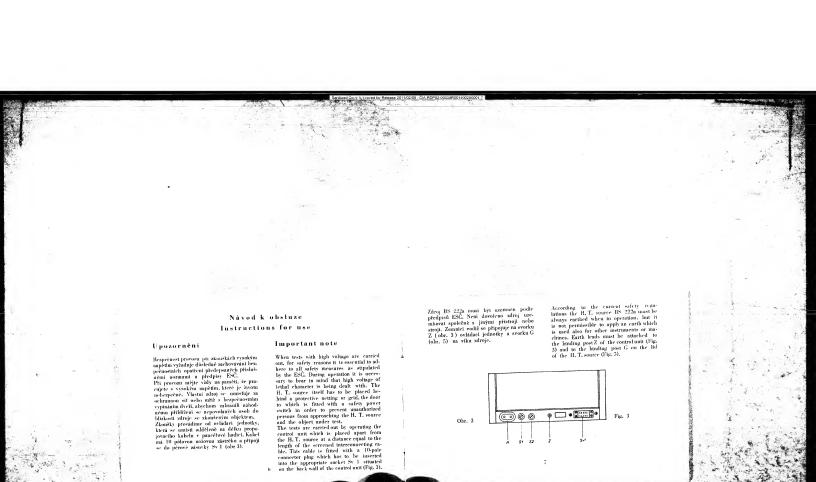

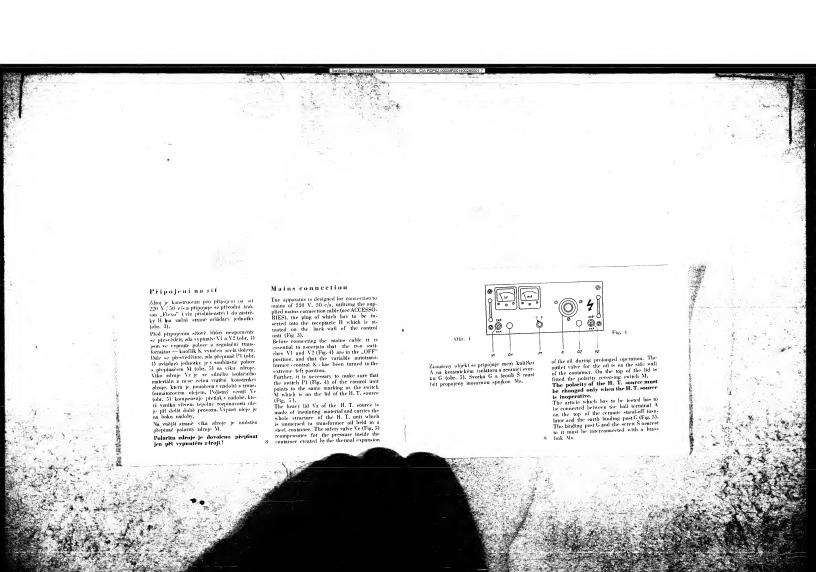



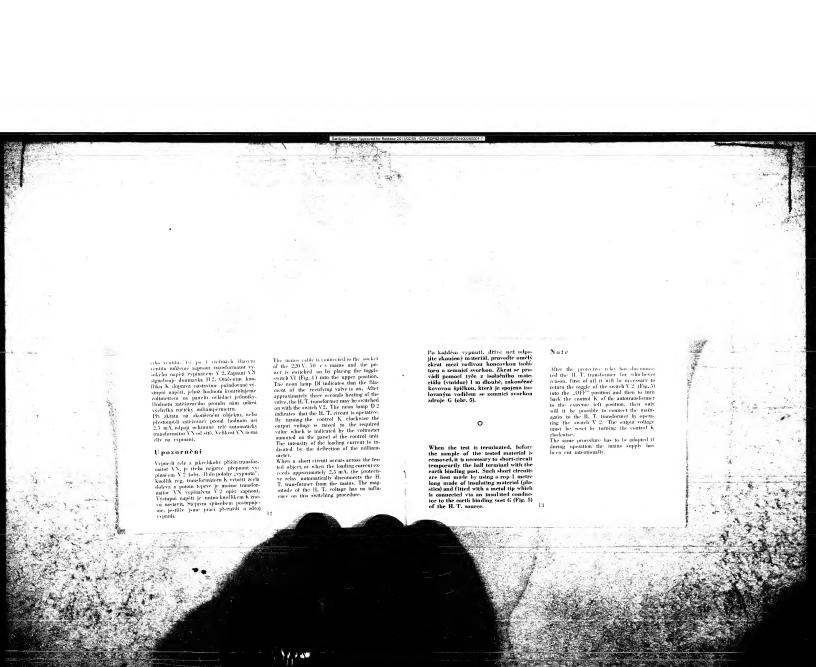

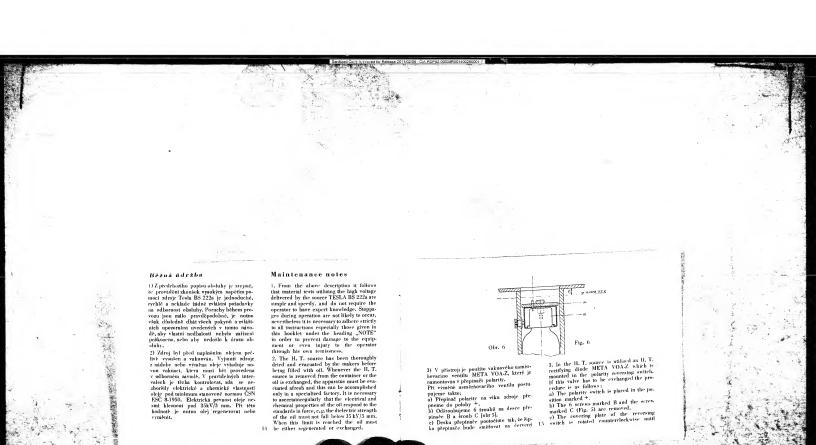

Ŧ

3) V přistorij je poulite vakuorého usměrhovatím ventlu META VOAZ, který je province poulite přepinačí polatry. Při výměně usměrhovacího ventilu postupieme takto:

a) Přepinač polatry na víku zdroje přepnemé do poloty * nuhř na desce přepinačí politické přepinačí politické politické přepinače politické tak, že šipka přepinače bude směřovat na červení 15.

3. In the H. T. source is utilized an H. T. rectifying diode META VOA-Z, which is mounted in the polarity reversing switch. If this valve has to be exchanged the procedure is as follows:

3) The polarity switch is placed in the position marked †.

b) The 6 servess marked B and the screw marked C (Fig. 5) are removed.

c) The covering plate of the reversing switch is rotated counterclockwise until

bod O na viku zdroje a rukojeť 1 s deskou vytahneme směrem nahoru.

O Rokuo všeté gumové rukavci nahmatá-nue pod hladinou oleje kolik F [obr 6] a vytahneme je,

e) Tim jeme odjistili protikoronový kryt Kr, který vytombujeme odšením doleva.

O Po výšouhování krytu se uvodnil pří-stup k lakektové hlavici ventili H1, za niž ventil uchopime a vytáhneme.

the lever of the switch points towards the red dot (see in Fig. 5) on the lid of the H. T. source. The covering plate is re-moved by moving it upwards. (b) With clean rubber gloves on the hands the wedge F (Fig. 6) is found under the oil level and is removed. (c) The corona ring Kr thus loosened is re-moved by unscreening it counter-clockwise. (f) The bakelite ferrule H] of the rectify-ing valve is now accessible. The valve can now be withdrawn.

LIST OF ELECTRICAL COMPONENTS

Resistors:


No	Art	Value	Max. load	Tolerance	Standard ČSR
R1	Carbon layer resistor	20 kΩ	1 W	± 5 %	TR 103 20k B
R 2	Carbon layer resistor	500	1 W		TR 103 M5
R 3	Wire-wound resistor	50 Ω	2 W	± 5 %	TR 503 50/B
R 4	Wire-wound resistor	50 n	4 W	± 5 %	TR 611 50/B
R 5	Wire-wound resistor	50	2 W	± 5%	TR 503 50/B
R 6	Wire-wound resistor	50 "	2 W	± 5%	TR 503 50/B
R 7	Wire-wound resistor	50	2 W	± 5 %	TR 503 50/B
R 8	Carbon layer resistor	500 kΩ	1 W		TR 103 M5
R9-28	Carbon layer resistor	10 ,,	1 W	± 10 %	TR 103 10k/A
R30-156	Carbon layer resistor	1 MΩ	1 W	±5%	TR 103 1M/B





			M DCIv	Telemone	Standard ČSR
No	Art	Value	Max. DC voltage	Tolerance	Standard Con
C 1	Box-type capacitor	64 µF	160 V	- 1	TC 653 64 M
C 2	capacitor	18,000 pF	65 kV	-	1AK 717 08


Other electrical components:

Tube El (VOA - Z)	LAN 110 96	
Glow lamp D1, D2	1 AN 109 13	
Relay RL I	1 AN 599 05	
Relay RL 2	1 AN 599 07	
Relay RL3	1 AN 599 06	
Selenium rectifier V1	LAN 744 15	
Cartridge P1, P2 4A/250 V	ČSN 35 4731	
V-meter M I	1 AP 780 36	
mA-meter M 2	1 AP 780 37	

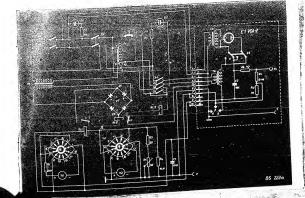

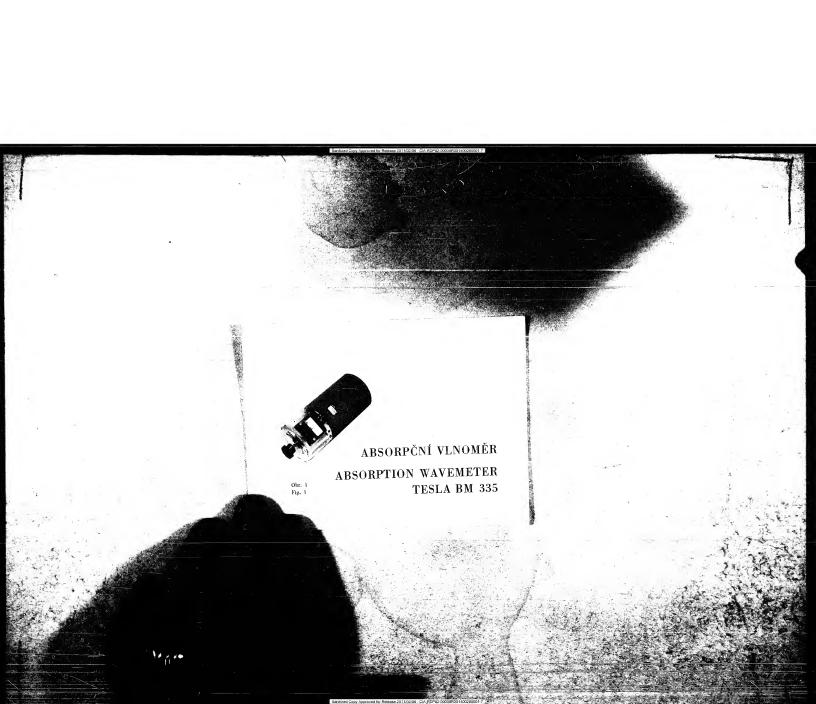

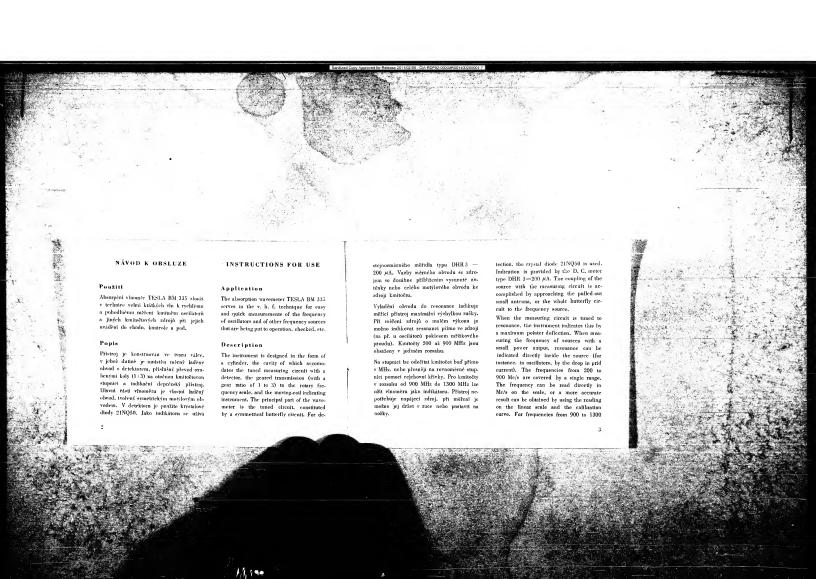

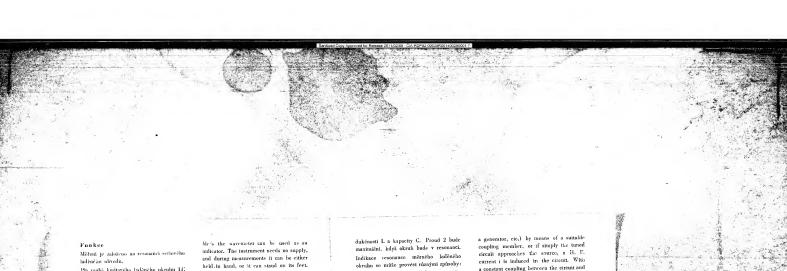

Měření je založeno na resonanci seriového laděněho obvodu.

ladřačío obvodu.

Při vazbě kmitavého laděného okruliu LC
se zdrojem kmitočiu (oscilátor, generátor
a pod.) pomoci vlodného vazebnito členn
nebo jen přiližením ladřačho okruliu ke
zdroji ludukuje se v okruau vf proud ti

Operation

Velikost tohoto proudu závisí při konstautní vazbě okruhu se zdrojem na velikosti in-

When the tuned oscillating LC circuit is coupled to a frequency source (an oscillator,

The measurement is based on the resonance of a tuned series circuit.


dukčnosti L a kapacity C. Froud 2 bude maximálni, když okruh bude v resonanci. Indikace resonance měrného laděného okruhu se míže provést různými zpásoby: a) Vazebni smyžkou S cdebříme z měr-ného okruhu část vť energie. Abychon: proud v této smyčee mohli měřti stejno-směrným měřdílem, musime jej usměr-nit diodou. Resonance se pak projeví maximálni výchylkou měřídla (viz obr. 3)





a generator, etc.) by means of a suitable coupling member, or if simply the tuned circuit approaches the source, a H. F. current is induced in the circuit. With a constant coupling between the circuit and the source the magnitude of this current depends on the value of the inductance L and of the capacterine C. The current will reach its maximum, when the circuit is in resonance.

The indication of resonance of the tuned circuit can be obtained by various methods:


a) With the aid of the coupling loop S op part of the H. F. energy is taken from the measuring circuit. To enable current measurement on this loop by a D. C. instrument, it has to be rectified by a diode. Thus, resonance is indicated by the maximum deflection of the measuring instrument. (See Fig. 3.)

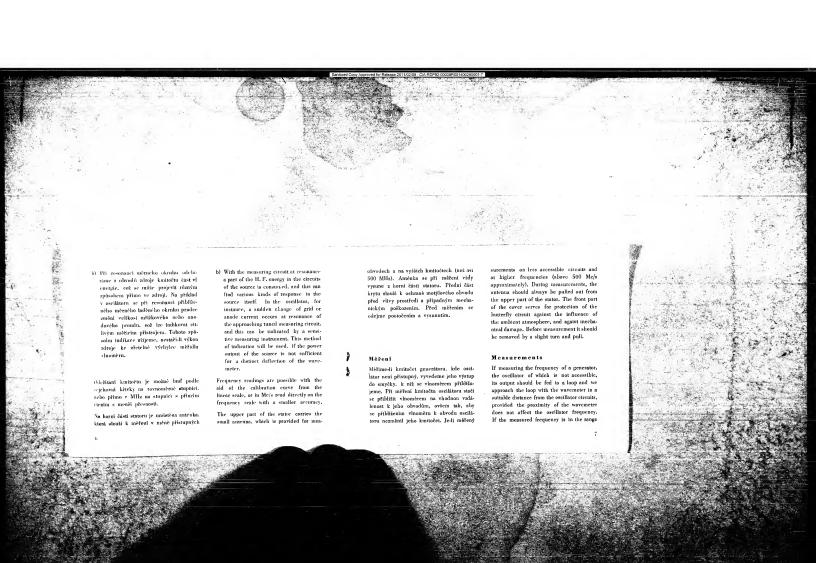

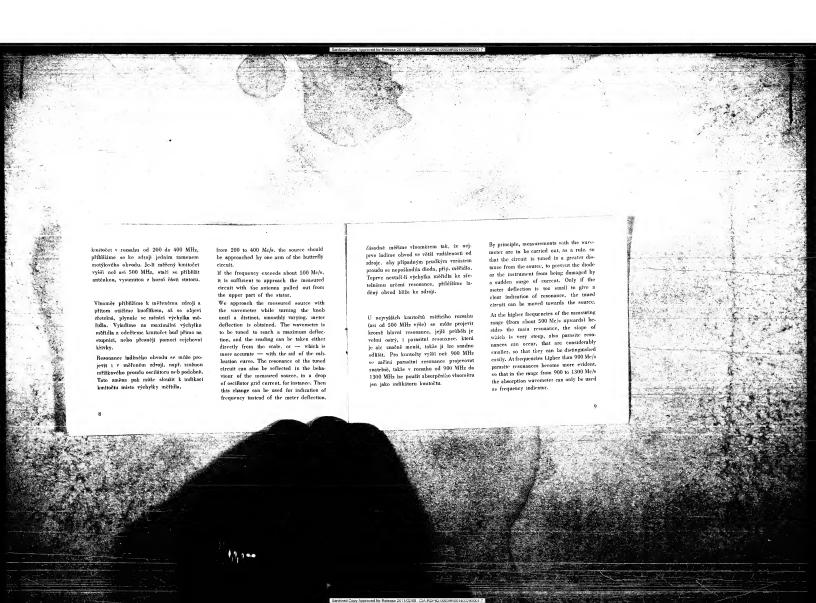

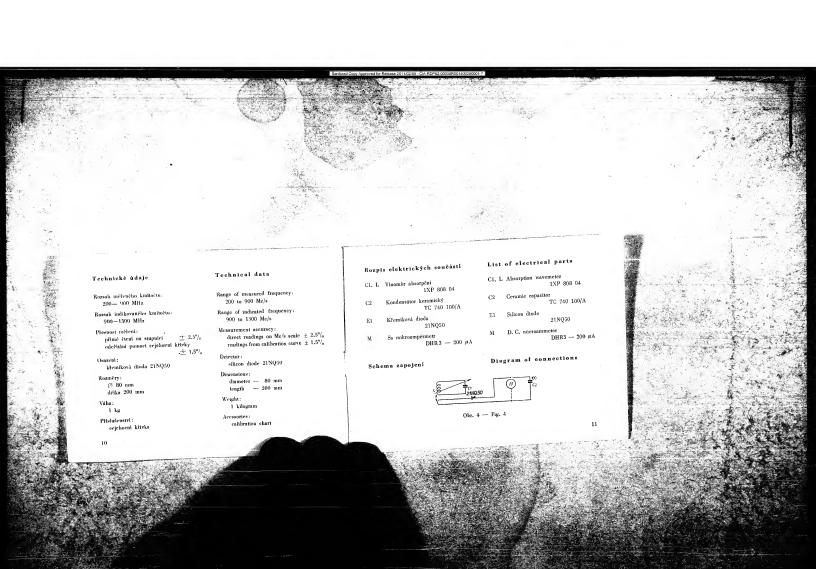



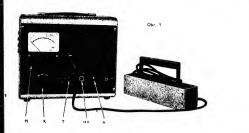

ERROMETER TESLA

NÁVOD K OBSLUZE

ferrometr TESLA TM411 je určen k přiblížněnu,
intrisového čília běšírých transformátorových a
retrisového čília běšírých transformátorových a
ryamových pleštv ce velých bablích. Poulým
přitademí ple telektromasneu na tabulí zkoupřitademí ple telektromasneu na tabulí zkoupřitademí ple telektromasneu na tabulí zkoupřitademí ple telektromasneu na tabulí zkounaktí zetřesý výslon ve W na 1 kg plechu při
trenometr je aložínen a vzebů mez tyrácevý m
čislem a permeabilicou běžírých transformátorpřitademí velktromátorčíslem a permeabilicou běžírých transformátorpřitademí velktromátormasneus sáržalem a z majúsích o cejchovního
magneus sáržalem a z majúsích o cejchovního
magneus sáržalem a z majúsích o cejchovního
magneus síržalem a z majúsích o cejchovního
čísti se mezi sabou spojují kabálem

PŘÍPOJENÍ NA SÍT
Před připojením přítroje na síť je
nutno přepnout jej na správné napři sítě přepovačem umitedným
při sítě přepovačem umitedným
při sítě přepovačem umitedným
přovodem na zasunovím přeplaku, vyražením a zasunovím přeplaku, prizačením a zasunovím přeplaku, prizačením a zasunovím přezavano pře napřel sítě býto potezvano pře napřel sítě býto potezvano pře napřel sítě býto potezvano pře napřel sítě býto poposlen na ZEOV.

Nave od voličě je sítřová pojitka
vlave od voličě je sítřová pojitka

INSTRUCTIONS FOR USE
The for rometer TSSLA TM 411 is designed for the account of the power loss of standard transformer or dynamo sheets. The loss factor of the power loss of standard transformer or dynamo sheets. The loss factor onto a whole heet of the material which has to be tested. The needle instrument indicates losses in waters per 1 kg of the cased sheet-iron at a saturation of 10,000 gasts. Is based on the relation between the loss factor and the permeability of standard transformer and dynamo-ability of standard transformer and the property of the standard transformer and
MAINS CONNECTING

MÉRENÍ
Z prosaceru sa zedná admou skříně vyjmenne jilo slektromagnetu a jeho kabeř nasoneme do 12. tercký na předním panelu přístvojí (vís doc. 1). Přístvoj sapneme výpinačem HV a chálickovým krecký na předně se vojetně vystavaní praku se konstruktu se vedná se vojetně na při vyratení chálicka O, smr. Knolik K (obr. 1) vratení spřitov stratení spřitov su vojetně se vojetně na při vyratení chálicka O, smr. Knolik K (obr. 1) ukazovala na červenou rysku stupnice při nestáčené rekujecije. Dn. Tini je foromet přípravení selžené rekujecije. Dn. Tini je foromet přípravení se vedice se vojetně se vedice v dovadení v vedice v dovadení v vedice v dovadení v vedice v vojetně se vedice v vojetně se v po ovivovoval Zkoušenou skubil jedenů polodne na vredou rovnou podložku z magnetický nevodvého rovnou podložku z magnetický nevodvého v vojetně se výpistvěne na plech sejnémě 10 čmr. od kráje tabule a rukujecí jha dobře stělěne. Podlože se v supnice příme od akraje tabule a rukujecí jha dobře stělěne. Podlože předně se v se vedice v vojetně se vedou předně se v douje přistvová se usunicí příma od kráje tabule a rukujecí jha dobře stělěne. Podlože předně se vedice v vojetně se v supnicí příma od kráje tabule v se vedice v vydování podch se vedice v výdování podch se vedice v výdování podch se vedice v výdování podch se výdování podch se výdování podch se výdování podch se výdování vydování podch se výdování se výdování podch se výdování podch se výdování podch se výdování pod

placed after voltage switching. Each newly delivered apparatus is set by the makers to 220 V. The mains fuse and the receptacle for mains connection are to the left of the voltage selector. The power can be switched on (off) with the switch HV (Fig. 1). The position of this switch is indicated by a pitol Jamp.

OPERATION

Remove the decercomagner from the stora space inside she cabinet and connect it to disparation with the cable, insecring its play sometime of the source of the



TH 411 - XCA - 200/59

TECHNICKE ÜDAJE

Rozsah médeni zrricového Gils:

1 ai 4 W/kg

Petanous intensi:
15 ao

Toutfut měreného
plochuToutfut měreného
0,33 a,0,5 mm

Stabiliza: Cepthorni safrení čini přištroj nesiavislym na selevjskich utového napětí
0 - 1000,

Napaleni ze střídavě
sitě:

120 V nebo 220 V; 50 c/s
Jiříčeni: tavnou pojistkou 0,5 A pro obě napěti
Pošredba.

8 V / 0,3 A
Roměřy;
Jiříčeni:
Moubla 225 mm
Vaha:


7,2 kg


***Turety**

Yang: 7, 4 Kg

PŘÍSLUŠENSTYÍ

K přístrojí dodáváne sídovu šlávu, nátradní
pojistku a magnecické jňo, které je umístěno
v prostoru sa odnimatelnou zadní stěnou skříně,
TESLA BRNO — BRNO, ČECHYŇSKÁ 16

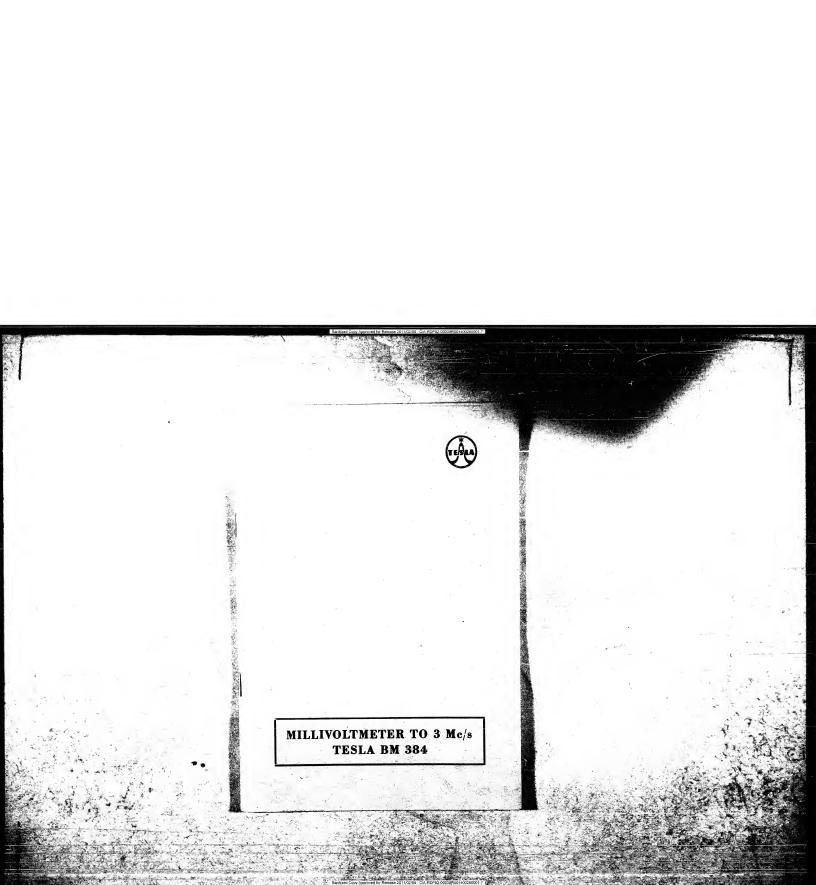

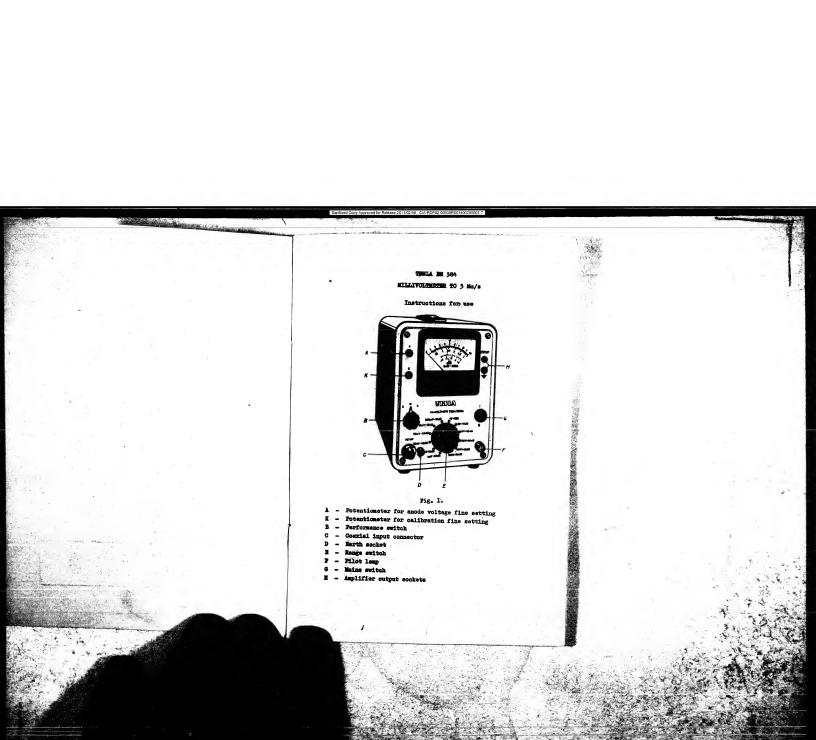

APPLICATION

121

This instrument is designed for the measurement of AC voltages * from Col mV to 300 V within the frequency range 20 c/s to 3 Mc/s. It can be applied, for example, for amplification and frequency response measurements, etc. The meter of the instrument is calibrated also in terms of dB, so that it can be applied as a level meter - dB meter.

The advantage of this instrument is its high input resistance which enables the measurement also of sources of high internal resistance.

As an amplifier, the instrument can be applied for the amplifica-tion of AC voltages up to a maximum frequency of approximately 6 Mc/s.

The TESIA BW 384 millivoltmeter consists basically of a cathode follower and a four-stage wide-band amplifier, to the output of which is connected an AC voltmeter, the microsumeter of which opefollows and a four-stage which can experient, to the budyet which is connected an Af voltaster, the microsmeter of which operates in connection with germanium diodes in incomplete bridge connection. The voltage to be measured is brought over an isolating capacitor to the grid of the cathode followsr (within the ranges I to 300 mV, directly; within the particular capacitor is rated to within the not sensed this value. Behind the cathode follower is a cix-stage low-resistance civider stepped-up in 10 dB steps, from which the voltage is fed to the imput of the four-stage amplifier. The first three stages operate as a conventional voltage amplifier, the fourth stage, which has no shunds careen grid and cathods, operates as a current amplifier for the meter of the instrument. From the cathods of the fourth stage the voltage is fed to the output societie, as that the instrument can be amplied also as a measuring amplifier. In the three-stage voltage amplifier periodes are smoloyed in a conventional circuitry with partial correction of the frequency response curve by chokes. For raising the stability and for equalizing the frequency response, a frequency-dependent inverse feedback which controls also the meter circuit is applied from the anode of the final amplifier stage to the cathode of the first amplifier stage. The amplification of low frequencies is suppressed approximately 4 x by the inverse

In the range of higher frequencies, the inverse feedback becomes frequency-dependent and its effect is reduced, thus compensating for the amplification drop at these frequencies. For the calibration of the amplification, an incandescent lamp stabiliser is employed which is powered by the mains transformer. The output voltage is approximately 0.9 V AC and is connected over a divider to the input of the cathode follower. To improve the stability, the anode voltage is stabilized electronically and the heater voltage by barretters.

BLOCK SCHEMATTC DTAGRAM



Fig. 2.

- Input - Divider

3 - Cathode follower 4 - Divider

3-stage voltage amplifier Current amplifier

- Divider

Powering unit

amplifier

TECHNICAL DATA

Measuring ranges:

1, 3, 10, 30, 100, 500 mV, 1, 3, 10, 30, 100, 300 V.

Frequency coverage:

20 c/s to 3 Mc/s

Accuracy of measurements: Basic error: ± 1 % of the full-scale

± 2 % of the measured value

Frequency

± 3 % of the measured value within the range 40 c/s to 1 Mc/s; ± 4 % of the measured value within the range 20 c/s to 3 Mc/s

Deflection fluctuations caused by mains voltage changes: At mains voltage changes by ± 10 % the

deflection fluctuates up to ± 3 %

deflection fluctuates up to (without recalibration). If the instrument has been recalibrated, then the additional error caused by sains voltage changes in less than 1.5 and is included in the data given the state of the fluctuation of meain the previous item "Acouracy of measurements".

2 8 Mohas for voltages at frequencies from 20 c/s to 1.5 Mo/s; > 0.2 Moha (negativ) for voltages at frequencies from 1.5 Mo/s to 3 Mo/s.

<75 pF within the range

with, 1 to 300 mV; <62 pF within the range coaxial cable 1 to 300 V.

Applications of the instrument:

Frequency range: 20 c/s to 3 Mc/s Wide-band amplifier:

Amplification: 500 x Output resistance: Approx. 650 ohms Frequency dependence: With the output terminals loaded with a capacitance of approximately 40 pF, the drop is less than 2 dB at 3 Mc/s.

Level meter (dB meter): Range: -70 to + 50 dB.
O dB is determined as a power of 1 mW

across a resistor of 600 ohms.

The instrument can be used as an indicator or as an auxiliary amplifier up to 6 Mc/s. Further applications:

Complement: Tubes:

6 x 6F32, 1 x 6I41, 1 x 14TA31,

1 x AZ11

2 x V255 - 12 - 18 V Barretters: 2 x 3NN41

2 x 2.5 V/0.075 A, 1 x 6 V/0.05 A

Powering: 220 V or 120 V ± 10 %, 50 c/s

Power consumptions

Frotective devices:

Puse: 0.4 A for 220 V. or

0.8 A for 120 V

Overall dimensions:

350 x 260 x 195 mm

Weight:

9 kg

Before carrying out a measurement, it is essential to allow the instrument to heat up for 15 minutes. The instrument measures the mean value of the voltage fed to the input.

CONNECTION TO THE MAINS

Before connecting it to the mains it is necessary to make sure that the instrument has been set to the correct mains voltage.
The setting is carried out by turn-

ing the disc of the switch which is on the back panel of the instrument. After the screw in the centre of the disc of this selector has been loosened, the disc has to be pulled out and turned so that the number indi-



cating the correct mains voltage is below the triangular mark. Then the screw has to be tightened again, thus securing the disc. If the screw has to be tightened again, thus securing the disc. If the disc is in the position shown in Fig. 3, then the instrument is connected to 220 V. Next to the mains voltage selector are the mains ruse and receptacle. When changing the voltage setting of the instrument, the mains ruse has to be exchanged also. The ruse values for 120 V and 220 V are given in the section "FEGH-NICLE TA".

set in operation with the switch G which is li switching on is indicated by the pilot lamp F

After switching on the instrument, approximately 15 minutes must elapse to allow for amplification stabilization, in order to ensure accuracy of measurements as listed.

sure accuracy of measurements as listed.

The measuring voltage is connected to the input connector C either
by a coartial cable (included in the accessories), or by independent leads terminating in banana pluge.

If leads with banana pluge are employed, then the one connected
to the chassis of the measured object has to be connected to the
earthing terminal D, and the other lead to the centre socket of
the jumit connector C. the input connector C.

It is essential, especially at higher frequencies, to consider carefully which method of connection is the more advantageous with regard to the errors which could be caused. Connection by a cosrial cable is advantageous if its relatively high capacitance is irrelevant, e.g. for measurements at lower frequencies or of sources of low internal resistances. If the capacitance of the conces of low internal resistances. If the capacitance of the con-necting leads at a certain frequency is no longer negligible with regard to the internal resistance of the measured object, then an additional error gecurs. The diagrams in Figs. 9, 10, 11 and 12 give information about the frequencies and source resistances at which an error of 1 % occurs.

Example: The voltage across a resistive divider is measured in the following setup:

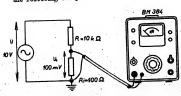


Fig. 4.

The internal resistance Ri of the measured source is approximately 100 ohms. From the diagram (Fig. 10) it can be seen that within the voltage range 1 to 300 mV the connection of the millivoltmeter causes an additional error of 1 % at f = approximately No/s (point I). A similar error occurs also when independent leads are employed, of course at frequencies where the input os-pacitance of the millivoltmeter itself begins to have influence. pacitance of the millivoltmeter itself begins to ave influence.
Also in this case can be determined from the diagram in Fig.9
the frequency at which an additional error of 1 % occurs. (In
this example f = approximately 7.5 Mc/s, i.e. far beyond the limiting frequency of the millivoltmeter (point 2). At higher frequencies, the error increases according to the following informative table:

1 % for X_c = 7R 2 % for X_c = 5R 5 % for X_c = 3R 10 % for X_c = 2R

where $X_C = \frac{1}{4\sqrt{C}}$ —is the reactance of the input capacitance C of the millivoltmeter (with coaxial cable) at the considered frequency, and R is the internal resistance of the source, the voltage of which is being measured, when measurements are carried out across an inductance which is practically undamped by the circuitry of the source (e.g. if it is powered over a high resistance), then the impedance across which the voltage is being measured grows, owing to the parallel connection of the input capacitance, according to the relations

If the reactance of the input capacitance of the millivoltmeter falls at a certain frequency to a hundredth multiple of the reactance of the inductance, then an additional error of 1 % of the seasured voltage is caused. In this case also can be determined from the diagram the frequency at which (at the given inductance) the additional error is 1 %.

Example: Measurement of a voltage across an inductance L = 50 µH. (The setup is given in Fig. 5).

in error of 1% occurs when a coaxiel cable is employed at a frequency of 250 kc/s - point 1, or when independent leads are used at a frequency of 400 kc/s - point 2 (Fig. 9).

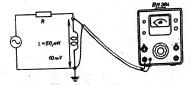


Fig. 5.

The advantage of applying independent leads is in the reduction me advantage or applying independent leads is in the reduction of the input capacitance; however, it can cause certain other errors during the measurement, e.f. it can cause capacitive (or inductive) coupling with the circuit which powers the measured object, as the powering voltage can be many times higher than the measured or

Example: Measurement of a voltage over the output of a divider at f = 3 Mc/s.

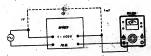


Fig. 6.


Sanitzed Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-7

A strey capacitance Op = 0.1 pF is sufficient to raise the output voltage of the divider by 1 %. When the measurement is carried out across large resistances, and when independent leads are employed also it is essential to take into account the effect of hum which is and interfering AC voltage prolaced in the leads usually by induction from the mains, and is combined with the measured voltage. The interference caused by hum is most trouble-some at the lowest voltages measured.

From the given example it is obvious that the application of independent leads is advantageous at higher frequencies, provided they are kept as short as possible.

When setting up a measuring assembly, great care must be taken to prevent the introduction of hum into the input circuit of the millivoltmeter by incorrect connection of the earth leads, Hum can be caused, for example, by the equalizing current between the zero conductor (connected in the mains receptacle to the chassis of the instruments) and the actual zero potential of a separate earth connection which is unsuitably employed,

An example of unsuitable connection (for the measurement of the output voltage of a generator) is indicated in Fig. 7.

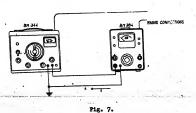

Between the chassis of the millivoltmeter and warth flows an equalizing current i. It causes a voltage drop in the lead "a" which interconnects the earthing sockets of the two instruments. This drop is superimposed on the measured voltage when the active sockets of the instruments are interconnected.

For example, a current of 10 mA at a resistance of 0.1 ohm of the lead "a" produces a voltage drop of 1 mV, i.e. a full-scale deflection of the meter when the most sensitive measuring range is employed. In this case it is advantageous to connect a separate earth to the zero conductors directly in the mains receptacles.

It is also essential to ensure that the active and earthing leads do not form large loops in which external magnetic fields could produce induced voltages. It is recommended to place the active and earthing leads in parallel close to each other.

Setting the minimum of the interfering signal:
The tubes of the amplifier are heated by AC. With regard to the high sensitivity of the amplifier, it is impossible to prevent completely the penetration of interfering AC voltage (hum) lifto the grid circuits of the tubes. This interference is caused either by the heating, or by the stray field of the mains transformer. In addition, also the inherent noise of the large resistors in the input circuit of the instruments becomes active. These two factors (hum and noise) produce an interfering signal which appears as a deflection of the meter, even when there is no voltage connected to the input of the millivoltameter. On the back panel of the instrument is a control marked E59 (see Fig. 8) for setting the minimum of the interfering signal.

- 11 -

- 10 -



Fig. 8.

The setting has to be carried out with the input connector me severing has to be carried out with the instrument set to the range screened by a metal cap and with the instrument

When exchanging the tube El or E2, it is essential to select it carefully, as all tubes of this type are not suitable for the achievement of the lowest possible interfering signal.

Application as an amplifier:

The output sockets H of the amplifier are on the front panel. The The output sockets H of the amplifier are on the front panel. The employed leads have to terminate in benama plugs, as them such a plug is inserted into the active socket, the circuit of the meter is automatically disconnected. The frequency response of the amplifier is essentially flat from 20 c/s to 3 Mo/s within 12 dB, provided the capacitance which is connected to the output sockets is not larger than 40 pt. With a smaller degree of accuracy, the amplifier can be used for the amplification of AC voltages at frequencies on to 6 Mo/s. voltages at frequencies up to 6 Mc/s.

Application as a level meter (dB meter):

instrument is provided with a dB scale which enables the

zero level is determined as a power of 1 mW scross a resistance of 600 ohms, i.e. 0.774 V. Of course "O dB" can be get in survived and during the measurement employed for comparison. The range and during the measurement employed for comparison. The setting "O dB" is carried out by changing the voltage on the measured object.

Calibration of the instrument:

The millivoltmeter is calibrated by the makers by the use of precise laboratory instruments. Transitory and long-term stability is achieved by the application of inverse feedback, and by the is achieved by the application of inverse feedback and by the use of stabilized powering voltages. However, it is impossible to prevent completely the effect of tube againg, and from time to time it is necessary to check the accuracy of the millivolt-

meter.

The calibration is carried out with the built-in calibrating voltage source of 50 c/s by setting the performance switch B to the position "K" whilst the input connector is screened, position "K" whilst the input connector must swing to the red calibration mark, otherwise it will be necessary to adjust the natural calibration mark, otherwise it will be necessary to adjust the natural calibration will be incompared to adjust the front panel of the instrument. calibration mark, otherwise it will be necessary to adjust the potentiometer K which is on the front panel of the instrument. The calibration can be carried out with the instrument set to any of the ranges 1 v to 300 v.

of the ranges 1 V to 300 V.

Also when the mains voltage setting of the instrument is changed it is recommended to recalibrate the instrument, so as to eliminate an additional error which is maximum ± 3 % at ± 10 % mains voltage changes.

Frequency dependence of the deflection.


The germanium diodes are frequency-dependent. This dependence changes according to the magnitude of the rectified voltage. Equalization of this dependence can be carried out only for carried out only for the relative terms of the relative ter equalitation of this dependence can be carried out only for the carried out for the tain yoltages - in the millivoltmeter this is carried out for tain voltages - in the millivoltaeter this is carried out for full-scale deflection of the meter. For smaller deflections, therefore, the frequency dependence of the serminum diodes, because fore, the frequency dependence of the serminum diodes, becauses parent and for more accurate according to the diagram in Pig. 13.


- 13


Checking of the anode voltage.

The stabilisation of the anode voltage is set so that at mains voltage changes by \pm 10 % the anode voltage fluctuates by maximum \pm 0.5%. As in time againg of the tubes can cause greater changes (and

As in time againg of the tubes can cause greater changes (and these can adversely influence the accuracy at higher frequencies), it is recommended to check the anode voltage from 'ime 'o time and if necessary adjust it. The checking is carries out by setting the performance system B to the position "A" (with any measuring range selected without disconnecting the measured voltage). The needle of the meter must swing to the red calibration mark - otherwise the deflection will have to be adjusted with the potentiometer A.

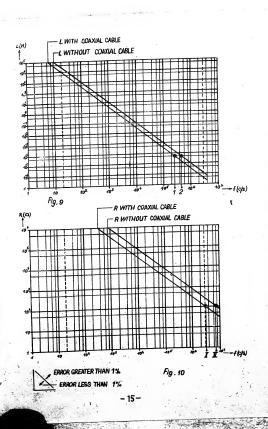

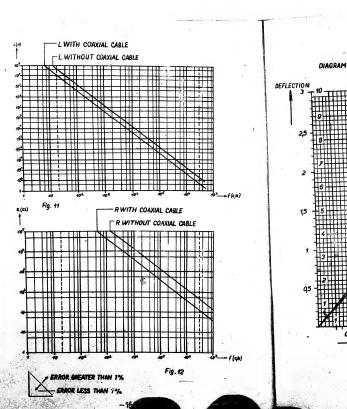

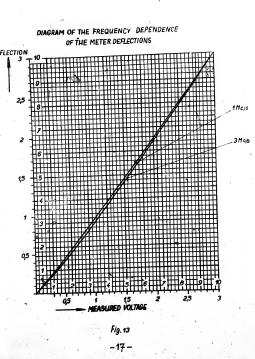

LIST OF ELECTRICAL COMPONENTS

No.	Туре	Value	Max,load	Tolerance	Standard CSR
Rl	carbon layer	10 10	0.1 W	22%	WK 681 01 10M/0
R2	carbon layer	9,7 10	0.1 W	118	WK 681 01 9k7/1
R3	carbon layer	10 0	0.05 W		TR 110 10
R4	wire-wound	16 0	0.5 W .	-	TR 501, 16
R5	carbon layer	100 ♀	0.1 W	•	TR 111 100
R6	carbon layer	10 MQ	0.1 W .	± 2 %	WK 681 01 10M/
R7	carbon layer	500 €	0.25 W	-	TR 101 500
R8	carbon layer	3.2 KQ	0.25 W	•	TR 101 342
R9		20,23 ♀	-	25%	1AF 679 28
	resistance strip	4374.7 ₽	-	± 5 %	1AF 679 24
	l carbon layer	8 140	0.25 W	•	TR 101 8k
	2 carbon layer	20 Q	0.25 W	١ 🕳	TR 101 20
	3 cerbon layer	10 10	0.25 W	-	TR 111 10k
	4 carbon layer	2 MO	0.25 W	-	TR 101 2M
	5 carbon layer	100 0	0.25 W	-	TR 101 100
	6 carbon layer	10 0	0.25 W	-	TR 101 10
	7 carbon layer	6.4 kQ	0.5 W	-	TR 102 6k4
	18 carbon layer	25 kQ	0.25 W	_	TR 101 25k
	19 carbon layer	500 kQ	0.25 W	-	TR 101 M5
	20 carbon layer	4 kQ	1 16	-	TR 103 4k
	21 carbon layer	100 0	0.05 W	-	TR 110 100
	22 carbon layer	4 kQ	0.5 W	-	TR 102 4k
	23 carbon layer	100,0	0.25 W	-	TR 101 100
	24 carbon layer	25 kQ	0.25 W	-	TR 101 25k
	25 carbon layer	500 10	0.25 W	- '	TR 101 M5
	26 carbon layer	1 HO	1 W	-	TR 103 1k
	27 carbon layer	100 €	0.05 W		TR 110 100
	26 carbon layer	100 ₽	0.25 W		TR 101 100
	29 cerbon layer	2.5 kg	0.5 W	-	TR 102 2k5
	30 carbon layer	25 10	0.25 W	· · · · · ·	TR 101 25k
	31 carbon layer	500 kg	0.25 W		TR 101 M5
	32 carbon layer	100 €	0.05 W	, - .	TR 110 100
	833 carbon layer	6.4 10	0.5 W	- '	TR 102 6k4

	Type	Value	Max.load	Toleran: a	Standard COR
334	carbon layer	25 kQ	0.25 W	-	TR 101 25k
135	carbon layer	250 ₽	0.25 W	-	TR 101 250
135 136	carbon layer	500 ₽	0.25 W	-	TR 101 500
337	wire-wound	64 0	4 7	-	TR 611 64
227 R38	wire-wound	200 ₽	4 17	-	TR 611 200
R39	potentiometer	64 Ω	0.5 W	-	WN 690 01 64
R29	carbon layer	1 140	0.25 W		TR 101 1k
R41	carbon layer	200 kQ	0.5 W	-	TR 162 M2
R42	carbon layer	200 kQ	0.5 W	-	TR 102 M2
R43	carbon layer	1 kQ	0.25 W	-	TR 101 1k
R44	carbon layer	200 kQ	0.5 77	-	TR 10, 42
R45	carbon layer	100 kg	0.5 7	-	TR 102 141
R46	carbon layer	50 kQ	0.25 7	-	TR 101 SCk
R47	carbon layer	200 kQ	0.5 🖫	-	TR 102 M2
R48	wire-wound	64 Q	4 W		TR 611 62
R49	wire-wound	32 Q	1 W	± 5 %	TR 502 32/B
R50	carbon layer	12.5 kQ	1 W	-	TR 103 1. %
R51	wire-wound	32 Q	1 W	± 5 %	TR 502 32/5
R52	carbon layer	100 kQ	0.5 W.	-	TR 162 K1
R53	potentiometer	100 kQ	0.5 W	-	WN 694 01 11/11
R54	•	40 kQ	0.5 W	-	TR 102 40 k
R55		1 kQ	0.5 ₩	-	WN 694 01 1k/%
R56	•	6.4 kQ	2 W	± 2 %	TR 503 61/4/0
R57		16 Q	0.5 W	-	TR 501 16
	carbon layer	360 kQ	0.1 W	± 1 %	WK 681 01 1/36/1
R59		250 €	0.25 W	-	TR 101 250
REC		125 ♀	0.25 W	-	TR 101 125
R62		10 Ω	0.25 W	-	TR 101 10
R6a		250 ♀	0.25 W	. 7	TR 101 250
R63		250 ₽	0.25 W	-	TR 101 250
R64		lin.500 Q	0.5 W	-	WN 694 01 500/1
R69		lin.32 Q	'0.5 W	-	WN 690 01 32
R66		32 ♀	0.5 W		WN 690 01 32
R6	carbon layer	10 ♀	0.05 W		TR 110 10
R64		12.5 ♀	0.05 W	-	TR 110 12J5
R6	g carbon layer	10 0	0.05 W	-	TR 110 20
R7	O carbon layer	10 Ω	0.05 W		TR 110

Sanitized Copy Approved for Release 2011/02/08	CIA-RDP82-00038R001400280001-7


No.	Type	Value	Max.load To	lerance	Standard ČSR
R71	resistance strip	1,385.3 €		± 0.5 %	1AF 679 29
	resistance strip		· -	± 0.5 %	1AF 679 25
	resistance strip			± 4,5 %	1AF 679 26
	resistance strip		-	± "0.5 %	1AF 679 27
	potentiometer	680 ₽	0.2 W		WN 790 25 680
	ntiometer	470 ℚ	0.2 W		WN 790 25 470
	wire-wound	500 Q	1 W	± 2 %	TR 502 500/C
	wire-wound	500 Q	1 W	± 2 %	TR 502 500/C
	carbon layer	1 kQ	0.1 W	_	TR 111 1k
	carbon layer	1 kQ	0.1 W	-	TR 111 1k

io.	Туре	Value	Max.DC voltage	Tolerance	Standard ČSF
31	paper	10,000 pF	1,000 ₹	-	TC 155 10k
32	trimmer	6 pJf	-	-	1AK 701 02
03	nica	5,000 pF	250 ₹	5 %	WK 714 31 5k/1
C4	paper	10,000 pF	250 ₹	-	TC 152 10k
C5	MP box-type	4 pP	160 Y	-	TC 455 4M
œ		•	250 T	-	TC 595 50 M
	triumer	6 pF	400 V	-	1AE 701 02
	trimmer	6 pF	400 ₹		1AK 701 02
	electrolytic	-	12 ¥	-	TC 903 100 M
	electrolytic		250 ₹		TO 395 50 M
	paper	0.1 pl	160 V	, -	TC 151 M1
	2 electrolytic		250 V	-	TC 595 50M
	5 electrolytic		12 V	-	TC 903 100M
	electrolytic	V	250 V		TC 595 50M
	5 paper	0.1 pr	160 T	-	TC 151 M1
	6 electrolytic		250 ₹	-	.TO 595 50M
ca	7 electrolytic	100 pF	12 V	-	TC 903 100M
	S electrolytic		250 Y	1-	20 595 50 M
	9 electrolytic		250 V	-	TO 595 50M
	O paper	0.1 10	160 V		20 151 M1

lo. Type	Value	Max. DC	Tolerance	
221 electrolytic 222 electrolytic 223 paper 224 trimmer 225 paper 226 paper 227 electrolytic 228 MP box-type 229 ceramic 230 paper 231 paper 231 paper 232 trimmer 233 trimmer	Value 100 µF 100 µF 100 µF 30 pF 10,000 pF 10,000 pF 25 pF 10,000 pF 1,000 pF 6 pF 6 pF 6 pF	250 V 250 V 160 V 	Tolerance	TC 595 FOOM TC 595 100M TC 120 M4 FN 703 01 WK 723 28 10M WK 723 28 10M TC 903 100M TC 455 4M TC 740 25 TC 120 10M WK 723 29 11 LAK 701 02 1AK 701 02
C34 trimmer C35 trimmer C36 paper C37 paper	50 pF 10,000 pF 0,25 pF 6,4 pF	350 V 160 V 160 V 600 V	*	TC 740 50 TC 120 10k TC 120 M25 TC 307 6J4

Note: Ca = C29 or C35

Other electrical	Value - Type	Drawing No.
Marking Tube E1, E2, E3, E4, E5, E7 Tube E8 Tube E8 Tube E9 berretter E10, E11 germanium diode E12, E13 Pliot lamp Pilot lamp Measuring instrument Fuse cartridge F1 Fuse cartridge F1	6F32 6IA1 14TA31 AZ11 V255-12-18 5MNA1 6V/0.05 A 2.5 V/0.075 A 500 µA DER8 0.4 A/250 V for 220 V for	1AN 110 01 1AN 109 12 1AN 109 18 1AP 780 52 Gen 35 4731 CSE 35 4781

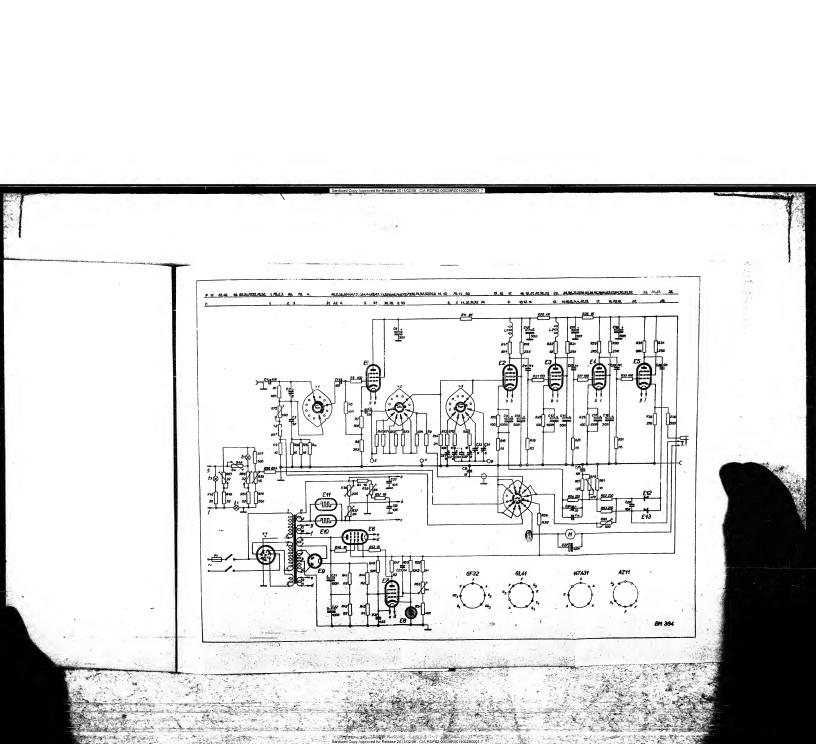



RLC BRIDGE TESLA TM 393

NAVOD K OBSLUZE

INSTRUCTIONS FOR USE

RLC mústek TESLA TM 393 je určen k měření odporů, indukčností a kopocit. Je pro provoz ze střídové sítě a je konstruován jako provozní přistroj, kterého tse použíř [pro měně přesná měření loboratorní, Siroké měřicí rostohy umožínúj jeho použíř i jeho použíř silno odpovátní odboratorní, Siroké měřicí rostohy umožínúj jeho použíř silno- i slobopraudé elektrotechnice k měření jednotlivých částí nízko: i vysokofrakvenčních obvodů.

Konstrukčně náleží do řady provozních přístrojů TESLA, konstruvěně náleží nále

POPIS

Přístraj sestáva z vlastního můstru, ze zesilovaće s usměrňovačem, z nizkofrekvenčního oscilátoru, z napájecího zároje a galvano-metru. Veškeré tyto části jsou vestavěny do soalečné skříně

Rado normalních odporů a cejchoroný potencametr troli vlastní můstek, šterý obsáhna ozsach dvou dekáci Pro máření kapacit přepojuje se do jednoho romene měny komo možení 2000 př. potenciometr pro vyrovnávání dlejektrických ztrol. Při měná potenciometr pro vyrovnávání dlejektrických ztrol. Při měná uktrostí se do tahoto zmema zapojuje kapocitní normála ní se sent. druhý odpor pro vyrovnávání strálového úhlu pordelně se sent. druhý odpor pro vyrovnávání strálového úhlu pordelně k měnámu kondensátoru. Z hotot d úhvodu jsou pro měření dukteostí na přepínačí K 4 dvě polohy pro měření indukčností.

Vestověný zesilovač je v provozu vidy při měření kapacit a in-dučností a při měření odporů pouze tehdy, měřich is estitidorům nopětím. Zesilovač je droustupnový a zopojuje sa do digoro-mostu přepřinačem K 3. je-li tento přepřinač v poloze ... První stu-fiti I. C. v přem ne elektronk te F 2. v jejím onodovém okrutivá fili I. C. v přem ne polenciomaty, kterým se nostovuje cit-livost zesilovačb. Dizený přem ne polenciomaty, kterým se nostovuje cit-livost zesilovačb. Dizený přem teto elektronk EBI. 21, zopojené joko trádový sesilovač. Dizený zýstem této elektronky usměrňuje získaný slgndí pro golvanometí.

kofrekvenční oscilátor je tvořen obvadem LC v obvyklém zapo-a jako oscilační elektronky je použito EF 22: Oscilátor slouží popápení mástu při měření střídavým napětím a jeho kmitočet Afibilizně 400 Hz.

The instrument consists of the bridge proper, an amplifier with rectifier, an A. F. oscillator, an appropriate power source and an indicating galvonometer. All these parts are fitted into a common case.

Bridge
Bridge of the bridge covers two decodes. The bridge consists of stondard resistors and a collinated potentiameter. For the greecy control of stondard resistors and a collinated potentiameter. For the greecy control of 20,000 principle of 2

Amplitier
During the measurement of capacitances and inductances, the built-in amplitier is in operation, whereas during resistance measurements it operates only if the measuring current is A; C. The complete has bus stages and it can be connected into the diameter of the connected into the connected into the diameter of the connected into the co

or the prosper for supporting the maximum garden.

A. F. socilities.

The A. F. oscilitors operates with an LC circuit which is connected in the usual manage to the tube EF 22. This oscilitor feeds the bridge whenever. A. C. is used for operation, and supplies a measuring current of approximately 400 c/s.

suring current of approximately 400 c/s.

Power supply unit

The built-in power supply unit contains the mains transformer, the reactifying value AZ 1, and a smoothing network made up of resistors and cappocitions. This power unit supplies the anode value and filament current for the tubes and also feeds the selenium



Dodává anadové napětí pro zesílavač, žhavící napětí pro clek-tronky a střídavé napětí pro suchý usměrňovač, ze kterého se pa-pájí můstek při měření stejnasměrným napětím.

Galvanametr je narmální sučkový přistroj s nulau uprastřed, kakře při měření odparů stejnosměrným napětím indikuje i směr razla-dění mostu. Při měření střídovým napětím se vychyluje ručka ouze jedním směrem.

Přistyslenství Joko přístušenství je k přistrojí dodávána síťavá šňůro "Fiezo" o soček s nahradními pojistkomi pra sť 220 i 120 V.

Připojení na síť

Před připojením na síť je nutné přistroj přepnout na jmenovité napětí sítě pře-pojavačem napětí, umístěným na zadní strané přistroje. Přepnutí pravedeme po uvalnění zajisťavacího kovového pásku, vylažením o zasunutím přepinocího ko-taučku tak, oby číslo udávojící napětí bylo postaveno proti trojúhelníčkové bylo postaveno proti trojúnelnickove značce (obr. 2). Zajišťovací pásek opět připevníme. Vlevo vedle voliče napětí je sířovó pojistka P a dále síťovó zástčka. Vpravo od valiče je onodavá pojistko Po (obr. 3).

Siť zapináme knoflikem K 2 povytaže nim nebo pootočením daprava), přičemž se rozsvití slgnální, žáravko Z.

Kryt přístroje je zopojen no ochranný

rectifier which supplies the bridge, whenever D, C, measuring current is required.

current is required.

Golvanometre

The bolonce indicator of the bridge is a measuring instrument with azera in the middle of the scale. It indicates during measurements with D. C. also the direction of unbalance. In A. C. measurements the deflection is in one direction only.

A mains cable with plug and connectar, and a fabric bag with spare fuse cartridges for 120 V and 220 V are supplied with the bridge as standard accessories.

Mains cannection

bridge as standard accessories.

Mains cannection

Before the bridge is switched on it is necessary to ascertain that its power supply unit is adopted to the available mains voltage.

The mains voltage selector is on the back of the instrument. If necessary the voltage can be changed (after the securing metal strip has been removed temporarily) by pulling out the disc of the selector, turning it and then inserting it in such a way that the required valtage (Fig. 2). Then the securing strip must be replaced. Next to the voltage selector are the mains fuse "P" and the power receptacle "A. C". The anada fuse "P" (Fig. 3) is on the right-hand side of the mains voltage selector. It is switch on the bridge, the knob K 2 is operated (pulled out or turned clockwise) and simultaneously the pilot lamp Z lights up.

Fig. 3. The framework of the instrument is connected to the protective conductor of the mains cable.

MÉRENI

Měření odporů stejnosměrným napětím (obr. 4)

Stejnosmerným nopětím Ize měřit vetkeré ohmické odpory, baz ohledu no jalovou slat. kv. Měřený odpor připojime no svotky XIC. co vyfožením (pootočením) knofiku K 2 uvedene přístraj do provouz. Přepinoč K 3 přepneme da polohy = a přepinoč K 4 zapneme do polohy R.

polohy R.

Knoflikem K 2 nastovime citiliosi tak, oby ružka galvonometru nebylo vychileno oš na daroz, Mémy polenciometr pastovime priblizità
do sitedni polohy a piepinačem K 5 niepneme
do 14 polohy, ve které je výchylka golvonometru nejmenší. Podle potřeby zvýžime citilivost
netru nejmenší. Podle potřeby zvýžime citilivost
neoflikem K 2. Nastovením potenciometru K 1 (hrubě velkým knoflikem a jemné malým knoflikem) vyvážime most tok, až ručko
goli na stumokuje na nulu. Při tokta vyváčeném mosté odcéteme
doji na stumokuje na nulu. Při tokta vyváčeném mosté odcéteme
doji na stumokuje na nulu. Při tokta vyváčeném mosté odcéteme
vádoj na stumokuje na nulu. Při tokta vyváčeném mosté odcéteme
vádoj na stumokuje na nulu. Při tokta vyváčeném mosté odcéteme
vádoj na stumokuje na nulu. Při tokta vyváčeném mosté odcéteme
vádoj na stumokuje na nulu. Při tokta vyváčeném mosté odcéteme

Při měření stejnosměrným nopětím jsou funkce knoflíků K 6 o K 7 vyřazeny a nezáleží na tom, jak jsou knoflíky nastaveny.

Při měření velmí molých odporů je nutné dbát, aby byl vyloučen Při měření velmí molých odporů je nutné dbát, aby byl vyloučen viv přechodových odporů. Veškeré tyto odpory měřime tok, že provedeme dvoje "neření. Za prvé změřime přechodové odpory tok, že přepincé K 5 postovíme do polohy 0, 10 a svorty Kuct sopime nakrotko silným drátem. Nyní vyvážime most a no stupnici K 1 odečteme přechodový odpor Rp. Přepinců přistorje dóle nemani-pulujeme, zkracovací drót odpojíme ze svorek Xtc a na jeha misto Připojime molý odpor, který mě být změřen. Knolitem K 1 most znovu vyvážime a odečteme noměřenou hodnotu Rs. Sprovno hodnota měřeného odporu je pak rozdíl obou naměřených hodnot, tedy



ent of resistors with D. C. (Fig. 4)

Resistances con be measured with D. C. regordless to the reactive components. The resistor which has to be measured in commended to the binding posts morked "Arc.-The binding posts morked "Arc.-The binding is switched on by pulling for rotating the knob K 2. Then the switch K 3 is set to the position marked "D. C. ond the switch K 4 to the position marked "D. C.

K 4 to the position morked 'R'.

With the knob K 2 use to sensitivity is selected that the golvonometer does not indicate soil is scale effection. The measuring diol K 1 is set opproximately in the middle position and such that the deflection of the range switch K 5 is selected by increasing the sensitivity, if necessory, and by balonicing the bridge by opening the sensitivity, if necessory, and by balonicing the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the confidence of the golvonometer is 1, (operating both knobs), the confidence of the golvonometer is 1, (operating both knobs), the confidence of the golvonometer is 1, (operating both knobs), the confidence of the golvonometer is 1, (operating both knobs), the confidence of the golvonometer is 1, (operating both knobs), the confidence of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the deflection of the golvonometer is 1, (operating both knobs), the golvonometer is 1, (operating

Measurement of very small resistors

During the measurement of very smell resistors it is important to eliminate the influence of the resistonce of the connections. All smell resiston must be measured in two operations. First the resistonce of old connections must be accertained by setting the maje switch K 5 to the position "0.1 Q", interconnecting the binder of the position of the p

3

ø

Měření odporů střidavým napětím

Střídovým napětím lze mrí t pouze odpory čístě ohmické nebo od pory s velmi molou složkiju kapacitni nebo induktivni. Měřený odpor připojujeme rovněř na svorky Xelic, přepinoč K 4 zůstone v poloze R, piepinać K 3 prepneme do polohy ~. Potenciametrem K 2 nastavime menši citlivost tok, aby ručka galvanometru nebyla vychylena ai na doroz Přepínačem K 5 najdeme polohu, při které je vychylka ručky nejmenší o knoffikem K 1 vyvážíme pak můstek na nalu. Knoflikem K 2 zvýšíme citlivost a opětným dostavením potenciometru K 1 můstek znovu vyvážíme. Jestlíže je potenciametrem K 2 nastavena velká citlivost zesilovače, nevrátí se ručka galvanametru na nulu coi je zpisobena vlastnim šumem zesilavoče, a pok vyvdžujeme mast na nejmenši výchylku, bez ahledu na to, že ručka neukazuje na nulu. I v tomta připadě jsou patenciametry K 6 a K 7 mimo provaz a nezáleží na jejich pastavení. Naměřenou hadnotu odečítáme jíž známým způsobem

Méreni kapacit (abr. 5)

Kapocity se měří pouze střídovým napětím a přepinač K 3 musí být proto v poloze -. Přepínač K 4 přepneme do polohy C a měřený kondensátor připojime no svarky XRLC. Potenciometrem K 2 nastovime zprvu molou citlivost, aby ručko golvanometru nebyla vychýleno až na dotaz. Přepinačem rozsahů K 5 přepneme do poohy nejmenší výchylky indikátoru o most vyvážíme potenciometrem K 1. Citlivost zesilovače zvýšíme o opětným dostavením knofliku K 1 vyvážíme most. Protote mětený kondensátor má určité ztráty v dielektriku, je do serie s měrným kondensátorem zapojen pro-měnný odpor K 7, kterým je mošno most přesně fázové vyvážit.

Measurement of resistors with A. C.

Measurement of resistors with A. C.

Only resistors with very low ar proctically no inductive or capacitive components can be measured with A. C. The resistance to be measured must be connected to the binding posts "Ret." and the measured must be connected to the binding posts "Ret." and to low sensitivity is selected (with K. 2) in order to obtain a small deflection of the gol-vanometer. After the position of K. 5 has been lound at which the deflection decreases to the lowest possible value, the sensitivity is increased and the bridge is balanced by aperating the dial K. 1 is finally the maximum sensitivity is set and the setting of K. 1 is finally the maximum sensitivity is set and the setting of K. 1 is is increased and the bridge is balanced by aperating the dial K 1. Finally the maximum sensitivity is set and the setting of K 1 is corrected if necessary. At maximum sensitivity the pointer of the galvanometer does not return to zero when the bridge is completely balanced, awing to the internal naise level of the amplifier, therefore the bridge must be balanced to achieve the lowest possible deflection. The positions of the knobs, K 6 and K 7 are irrelevant, as both these controls are inoperative during the measurement of resistors. The result of the measurement must be ascertained as described in the previous section.

Measurement of capacitors (Fig. 5):

Measurement of capacitors (Fig. 5):

The measurement of capacitors can be carried out with A. C., only, therefore the switch K.3 must be set to the position marked "A. C.. The switch K.4 is in the position "C" and the capacitor which has to be measured is cannected to the binding posts "XRIC." First a low sensitivity is selected with K.2 in order to prevent overloading of the galvanameter. Then such a position of the range switch K.5 is found at which the deflection decreases to the lowest possible value. After increasing the sensitivity with K.2, the bridge is bolanced by operating the diol K.1. As the capacitor which is being measured has always a certain amount of losses coused by its dielectricum, a variable resistor K.7, is connected in series with the standard capacitor. This resistor is suitable for balancing the phase relations of the bridge.

Je tedy nutné po vyvážení mostu timta proměnným odporem, aznačeným na panelu "tg ó", paatočit tak, aby se výchylka snižila. Opětovným dastovením puteuciometru K 1 a K 7 vyvážíme mast. Naměřenou kapacitu čteme na stupnici knafliku K 1 a násabíme ji číslem, proti kterému je postoven přepinač rozsahů K 5.

Údaj knaflíku K 7 není cejchován, lze však podle jeho palahy posuzovat jakost dielektrika.

Měření malých kapocit

mereni malých kapacit je nutré brát v úvahu i vlastní kapa-čitu svarék přístraje, která je asi 2 př., a přívadů, není-li konden-sátor připajován příma na svotku přístraje. Měříme-li molau kapa-citu s přívadními dráty, musíme předem změřit kapacitu téchto drátů, při čem má být jejich polaba stejná při připajeném i ad-pojeném kondensátaru. Druhé měření pak provedeme s připaje-ným kondensátaru. Druhé měření pak provedeme s připaje-ným kondensátaru a výsledná kapacita měřenéha kondensátaru je dána razdílem abou naměřených kapacit.

Měření indukčností (abr. 6 a 7)

Při měření induktnastí je natné přepinat přepinač K 3 do polohy "" přepinač K 4 do polohy Lp a měřenou induktnast připajit na svorty X14.C. Počenicametrem K 2 nostovíme menší citlívost, aby vyvatování můstku bylo snazší. Přepínačem K 3 přepneme da tě pody, ve tkeřé je výchyka golvonometru nejmenší, a knoflikem K 1 vyvážíme most.

K 1 yváříme most.

Proměnným opprem K 7 pro ztrátovau složku, adpovídajícím polaze přepinače K 4 oráčíme tak, aby se výchylka galvanometru
dde snřížía. Nebe-si ořáčením potencímentu dosáhnout míníma
výchylky, musíme přepinač K 4 přepinaut do polohy ls a vyrovnat
rátořava složku proměnným odporem K 6. Po dosciení niži výchylky galvanometru musíme mástek knolitkem K i znavu vyvářít a
do za zyvšení cilitivatsí knolitkem K 2 tenno postup podkoval, ad
do odnaheme nejníží výchylky obsúhou knolitku K 1 a přístušného



Obr. 5. F.g. 5.

After the bridge hos been balanced it is necessary to reduce the remaining deflection of the globronometer by operating the knob K 7. To reduce the deflection to the lowest possible degree, it will be necessary to repeat the regulation of K 1 and K 7. The result of the measurement is the product of the setting of the ronge switch K 3 and the reading an the main died. main dial.

The knab K 7 is not calibrated, nevertheless its position allows the judging of the quality of the dielectricum.

Measurement of small capacitors

Measurement of small capacitors are being measured, the influence of the connections must not be neglected. The binding pasts have a capacitons of 2 pf. II, the capacitor which is being measured is not connected directly to the binding posts, then the capacitor wide connected mirectly to the binding posts, then the capacitor of the connection wires must be measured before the capacitor under test is connected. The position of the wires must remain unaltered, from the result of the measurement the capacitonce of the connections must be deducted.

Measurement of inductances (Figs. 6 and 7)

Measurement of inductances (Figs. 6 and 7).

For inductance measurements the switch K.3 must be set to the position marked "A. C.", the switch K.4 to the position "Lo" and the coll to be measured must be connected to the binding posts.

"Xetc. With the volume contro K.2 the lowest sensitivity is set in order to facilitate the baddering of the bridge. Then the switch K.5 is set to such a position in which the deflection of the indicinu-golvanometer is the smallest, and the bridge is balanced by caretaing the knob K.1.

The variable resistance K.2, which compensates for losses in the bridge circuitry when the knob K.4 is in position" [Lo", is then operated until a further reduction of the golvanometer deflection is achieved. If no minimum can be arrived at by the operation of the resistor, then the position of the switch K.4 must be changed in "Ls" and the losses compensated for by operating the knob K.6.

polenciametru pro ztrotovou slažku. Po tokovem vyvošeni mústku čteme pak zaměřenou indukčnost na stupnou knaliku K 1 o nasokome pak zaměřenou indukčnost na stupnou knaliku K 1 o nasokome se pod vedno v jednotvách, které aznačuje
sipka přepinače K 3. mál nebo v N. Vyvotovaní je nutno
prověst duštedně, jinak při mál nebo v N. Vyvotovaní je nutno
prověst duštedně, jinak při mál nebo v N. Vyvotovaní je nutno
provést duštedně, jinak při mál nebo v N. Vyvotovaní je nutno
provést duštedně, jinak při nutno
jeni stolicena hrubau chybou
v prosi premi často vyskytují cvky, teř moří při kraticku 400 Hz
malau hadnotu činitle jakostí O. Ijto cívky je nutno měřit s přepinacem k 4 natioveným do polohy to Naměřeno hadnotu
proměným odporem K 7. Naměřeno hadnoty
proměným odporem K 7. Naměřeno
hadnoty činitele jakostí O. je nutno natostuj řepoinač do polohy
kš a výrovnával trítaty praměnným odporem K 7. Naměřeno
hadnoty činitele jakostí O. je nutno natostuj řepoinač do polohy
kš a výrovnával trítaty praměnným odporem K 7. Naměřeno
hadnoty činitele jakostí O. je nutno natostuj řepoinač do polohy
kš a výrovnával trítaty praměnným odporem K 7. Naměřeno
hadnoty činitele jakostí O. je nutno natostují řepoinač do polohy
kš a výrovnával trítaty praměnným odporem K 7. Naměřeno
hadnoty činitele jakostí O. je nutno natostují řepoinač do polohy
kš a výrovnával trítaty praměnným odporem K 7. Naměřeno
hadnotnosti votatoromorů, u nicht převořují trítaty v šetelení nahrodním schemotu se
liší od hadnoty v seriovém nahrodním schemotu podle
liší od hadnoty v seriovém nahrodním schemotu podle
liší od hadnoty v seriovém nahrodním schemotu podle v zorce



$$Lp = Ls \left(1 + \frac{1}{Q^2} \right)$$

V případě, že měříme cívku o malém Q v nevhodné poloze přepi-nače K 4 (L1), naměříme tedy vyšší hodnotu indukčnosti. Pokud je mažno přesně vrovnat most v obou polohách přepinače K 4, je obvytle vhodnější poulít hodnoty naměřené v poloze Lp.

After setting the smollest possible deflection, the balance must be readjusted with K 1 and the pracedure repeated of increased sensible state of the smollest possible deflection and the best possible believed by operating the knob K 1 and the resistor pertaining the state of the smollest possible state of the state of the smollest possible state of the smollest possible state of the smollest possible polarity of the switch K 5. I and the resistor pertaining the state of the smollest possible state of the smollest possibl

$$tp = Ls \left(1 + \frac{1}{Q^2} \right)$$

If a cail of low Q value is being measured with the switch K 4 set ta the unsuitable position "Ls", always an inductance value is orrived at which is higher than the correct one.

TECHNICKÉ ÚDAJE

0,01 Ω — 10 M Ω , rozdělena do osmi rozsohů; možnost měření buď stejnosměrným nebo střídovým nopětím. Rozsah adparů:

Pozsah indukčnosti: 0,01 mH — 1000 H; rozdělena do sedmi rozsahů.

Rozsah kapocit: 1 pF --- 100 _MF, rozdělený da sedmi roz-sahů. pro R a C ± 2%, při měření elektraly-tických kandensátorů je přesnost horší; pra L ± 3%, Presnost měření:

Vlastní kapacita svarek: cco 2 pF. Měrný kmitočet: cca 400 c/s.

Galvonometr: ± 100 μA s mechanickou nulou upro stred, Elektranky:

FF 22 — první stupeň zesilovače, EBL 21 — druhý stupeň zesilovače, EF 22 — nf. osčilátar, AZ 1 — usměřňovač, žáravko 6,3 V/0,3 A. sifava (P) pra 220 V ... 0,4 A, pro 120 V ... 1 A, anodavó (Po) ... 0,1 A. Pajistky (abr. 3):

Napájení: střídavé nopětí 120 nebo 220 V. 50 c/s. Příkon: cca 30 W.

šířka výško hloubka Razměry: 9.4 kg.

As for os it is possible to bolonce the bridge exactly with the switch K 4 in both positions ("Lp" as well as "Ls"), is is usual to complete the meaurement in the position marked "Lp".

TECHNICAL DATA:

Fuses (Fig. 3):

Power supply:

0,01 Ω — 10 M $\Omega_{\rm c}$ divided into 8 ranges. The measurements can be carried out with A. C. or D. C.

Inductance ronge: 0.01 mH -- 1000 H, divided into 7 ranges. 1 pF — 100 μF, divided into 7 ranges.

± 2 %, for R and C measurements; (results of measurements of electrolytic capacitors are less accurate).
± 3 % for L measurements. Accuracy:

2 pF opprox. Measuring frequency: 400 c/s opprox.

± 100 µA with zero in the middle of the scole.

EF 22 — first omplifier stage.
EBL 21 — second omplifier stage.
EF 22 — A. F. oscillator.
AZ 1 — rectifier.
Pilot lomp 6.3 V, 0.3 A.

P: mains — 0.4 A for 220 V, 1 A for 120 V., Po: H. T. — 0.1 A. Power consumption

A. C. from the mains 220 V or 120 V. 50 c/s. 30 W approx.
Width 320 mm,
height 265 mm,
depth 225 mm.
9.4 kg.

LIST OF ELECTRICAL COMPONENTS

Resistors

	Art	Value	Max, load	Tolerance	Standard CSR
R1 R2 R3 R4 R5 R6 R7 R8 R9 R11 R11 R11 R11 R15 R15 R16 R17 R18 R17 R18 R17 R18 R18 R18 R19 R19 R22 R23 R23 R23 R23 R23 R23 R23 R23 R30 R30 R30 R30 R30 R30 R30 R30 R30 R3	resistance cord potentionmeter resistance cord potentionmeter resistance cord potentionmeter resistance cord resistance resis	1 9 10 12 100 12	0.4 W 0.4 W 0.5 W 0.5 W 1 W 0.5 W 1 W 0.5 W 1 W 0.5 W 0.5 W 0.5 W 0.5 W 0.5 W	0.5 % 0.5 % 0.5 % 0.5 % 0.5 % 0.5 % 1 % 1 % 1 % 1 % 1 % 1 % 1 % 1 % 1 % 1	XF 681 00 XF 681 00 XF 681 00 XF 681 00 XF 681 02 XF 103 XF 681 02 XF 781 02 XF 781 03


No.	Art	Value	Max. load	Tolerance	Standard ČSR
Rc	carbon resistor	320 kΩ or 500 kΩ or 800 kΩ or 100 kΩ or	1 W 1 W 1 W		TR 103 M32 TR 103 M5 TR 103 M8 TR 103 M1
Rd '	precise resistor	125 kΩ 1.6 MΩ ar 2.5 MΩ or 4 MΩ or 5 MΩ or 6.4 MΩ or	0.4 W 0.4 W 0.4 W 0.4 W 0.4 W 0.4 W	10 ° •	TR 103 1M25/A WK 681 03 1M6 WK 681 03 2M5 WK 681 03 4M WK 681 03 5M WK 681 03 6M4
Re	precise resistor	8 MΩ or 10 MΩ 1.6 MΩ or 2.5 MΩ or 4 MΩ or	0.4 W 0.4 W 0.4 W 0.4 W 0.4 W	2 %	WK 681 03 8M WK 681 03 10M/C WK 681 03 1M6 WK 681 03 2M5 WK 681 03 4M
	· .	5 MΩ or 6.4 MΩ or 8 MΩ or 10 MΩ	0.4 W 0.4 W 0.4 W 0.4 W	2 %	WK 681 03 5M WK 681 03 6M4 WK 681 03 8M WK 681 03 10M/C


No.	Art	Volue	Max. DC voltage	Tolerance	Standord CSR
CI	mica capacitor styrofiex, capacitor electralytic capac.	5000 pF 0.1 μF 25 μF	500 V 250 V 12 V	1 %	WK 714 08/5k/D CK 724 21/M1/D TC 500 25M
C4 C5 +C8	paper capacitor electrolytic capoc.	0.5 µF 16+16 µF	400 V 450 V	10 * *	TC 103 M5/A TC 521 16/16M
C6 C7	paper capacitor paper capacitor	1000 pF 1000 pF	600 V	10 * 4	TC 104 1k/A TC 104 1k/A

No.	Art	Value	Max. DC voltage	Tolerance	Standard CSR
C9 C10 C11 C12	paper capacitor paper capacitor electrolytic cap, paper capacitor	50,000 pF 40,000 pF 25 μF 0.1 μF	400 V 400 V 12 V 400 V	5 % 5 %	TC 103 50k/B TC 103 40k/B TC 500 25M TC 103 M1/A
C13+C14 C15 C16 C17 C25	electrolytic cap. mica capacitor paper capacitor paper capacitor mica capacitor	16+16 µF 4,000 pF 5,000 pF 5,000 pF 4,000 pF	450 V 500 V 1000 V 1000 V 590 V	5% 5%	TC 321 16/16M TC 212 4k/B TC 106 5k TC 106 5k TC 212 4k/B


Adjustable capacitor


No.	Art	Value	Max. DC voltage	Tolerance	Standard CSR
Cb Cc	mico capacitor mico capacitor paper capacitor	1000 pF or 2000 pF or 5000 pF 1000 pF 16,000 pF or 5000 pF or 10,000 pF	500 V 500 V 500 V 500 V 400 V 400 V	. 5% 5%	WK 714 08/1k WK 714 08/2k WK 714 08/5k/B WK 714 08/1k TC 103 16k TC 103 5 k TC 103 10k/B

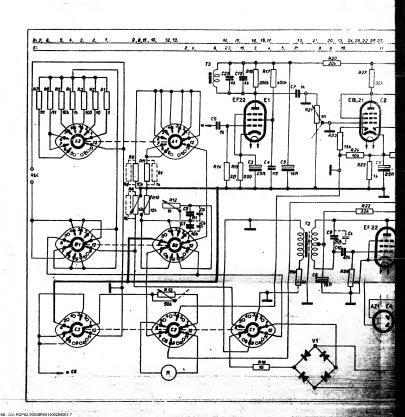

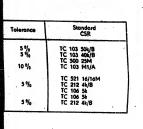


Tolerance	Standard CSR
5 %	WK 714 08/1k WK 714 08/2k WK 714 08/5k/B WK 714 08/1k TC 103 16k
5%	TC 103 16k TC 103 5k .TC 103 10k/B

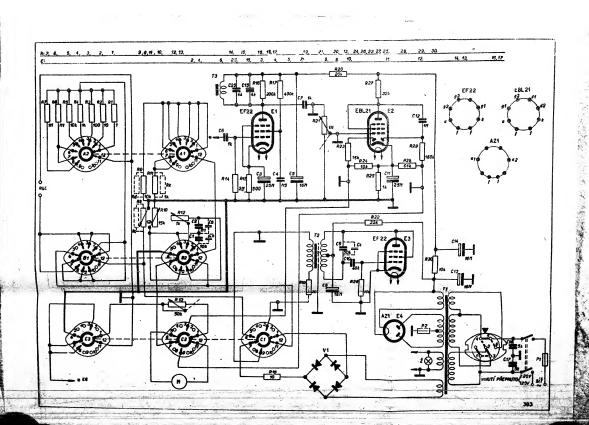

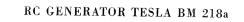

INSTRUCTIONS FOR USE

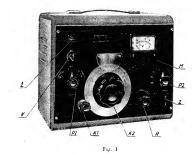

- 2 Pilot lamp
 V Mains switch
 P1 Range selector switch
 K1 Frequency fine setting
 K2 Prequency coarse setting
 R Continuous output control (R = 26)
 Z Output terminals
 P2 Output control in steps (divider)
 M Output voltage indicator

The RC generator TESLA BM 218a is designed for wide applications as a test apparatus. It can be used wherever a stable source of A. C. from 20 c/s to 1.2 Mc/s is required and where essentially undistorted waveforms of relatively high voltages are required.

The generator is suitable for response control, sensitivity measurements, distortion control, etc. It is applied usually in connection with an A. F. vacuum tube voltmeter and an oscilloscope. The great advantage of this apparatus is the permanent control of the output voltage by means of the built-in V. T. voltmeter.

DESCRIPTION

The oscillator applies double feedback. The frequency-independent positive feedback is connected to the cathode of the first tube to provide automatic control of the oscillating voltage by incandescent lamp stabilization. The produced frequency is determined by the components of the bridged-over T-network which applies a strong negative feedback to the grid of the first tube for all frequencies except the one to which the oscillator has been tuned. The ranges of the oscillator are selected by switching the T-network. Continuous frequency control is provided by the ganged variable capacitor.

CONNECTION TO THE MAINS

Before the generator is connected to the mains, it is necessary to make sure that the setting of the mains voltage selector is correct. This selector is on the back wall of the apparatus and must be set so that the marking of the available mains voltage is below the triangular mark. Each newly delivered generator has been set by the makers to 220 V.

Should it become necessary to change the voltage setting to 120 V, the securing strip of the selector must be removed, the selector withdrawn, turned and then replaced so that the triangular mark indicates 120 V. Then the securing strip must

be replaced.

he replaced.

Next to the mains voltage selector are the mains receptacle and the fuses. One fuse is in the supply lead, the other is in the anode circuit of the power rectifying valve. The mains fines must be exchanged whenever the mains voltage of the appearatus is changed (see TECHNICAL DATA). When the power is switched on (off) with the switch V, the pilot lamp Z lights up (goes out) (Fig. 1).



OPERATION

Usually it is not necessary to earth the instrument, as its framework is connected to the third (earthed) conductor of the mains cord.

The overall frequency range of the generator is divided into 5 bands. For the bands I to IV. i. e. for frequencies up to 200 ke/s. a common scale — the outer one — is provided

on the dial. Band V has a separate scale of smaller diameter. The required band can be set with the switch PI.

The knob K2 serves for the coarse setting of the required frequency, the knob K1 enables the fine setting of the dial. The output terminals of the generator are marked "Z" in Fig. 1.

"Z" in Fig. 1.

The output voltage of 10 V can be reduced in steps down to 0.003 V with the switch P2. Each step can be controlled continuously with the control R. Exact setting of the required voltage is made possible by the application of the built-in V. T. voltmeter, the instrument (M) of which indicates the output on two separate scales for 10 V and 3 V. On the back wall of the apparatus are openings to make accessible further controls: the spindle of the positive feedback regulator "1" which enables the setting of a maximum output voltage of approximately 15 V, and the spindle of the hum suppressor "2" (see Fig. 3). ("1" = R14, "2" = R42, see dlagram).



Standard accessories of the generator are: a mains cord with fitted power plug and connector, and a bag with spare main fuse cartridges for 220 V and 120 V and a spare H. T. fuse.

TECHNICAL DATA

Frequency range:

Calibration accuracy after hour of operation

Band I. $\pm 3\%_o$ Bands II. to IV. $\pm 2^o/_o$ Band V. $\pm 5\%_o$

Dependent on the setting of the dial. In the bands I. to IV.. between 20 and 100, it is $\leq 1.5^{\circ}/_{\circ}$. between 100 and 200 it is slightly higher

Output voltage:

Continuously controllable between 0 and 10 V (if necessary up to 15 V can be set with the positive feedback control — but higher distortion and mistuning of range V will be encountered).



Output control in steps: Output voltage:

Output Impedance (approx.):

Frequency response:

 $\pm~1.5~\mathrm{dB}$ over the whole range

Tube complement:

AZ12, 3×EBL21, 6B32 (6AL5), STV280/40 (11TF25)

Power supply:

A. C. mains 220 V or 120 V, 50 c/s

Mains fuse (S 1) 1 A for 220 V 1.6 A for 120 V


H. T. fusc (S 2) - 0.16 A approx. 80 W

Power consumption:

width 320 mm height 265 mm depth 225 mm

Weight:

FUNCTIONAL DIAGRAM

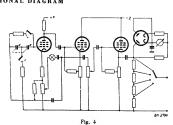

EXAMPLES OF APPLICATION

1. Tracing of the frequency respo

Instruments applied: 1. A. F. millivoltmeter BM 210
2. RC generator BM 218a

The RC generator is connected to the primary of the transformer under test via a resistor R_1 . The secondary is connected to the input of the A. F. millivoltmeter and bridged over with a resistor R_1 (see Fig. 5). The magnitude of $R_1 = R_2 - R_1$, where R_2 is the loading impedance of the tabe for which the output transformer is designed. $R_{\rm v}$ is the output impedance of the RC generator. The magnitude of \mathbf{R}_{z} can be determined from the formula:

$$R_z = \frac{R_e \cdot R_k}{R_e - Rk}$$

where $R_{\bf e}$ is the input impedance of the A. F. millivoltmeter and $R_{\bf k}$ is the load for which the transformer is designed (usually 5 ohms). It can be assumed that R_z equals approximately $R_{\bf k_z}$ as $R_{\bf k}$ is much smaller than $R_{\bf e}$.

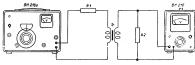


Fig. 5

During measurement the frequency is altered and the output voltage of the RG generator is kept constant. The results of measurement can be recorded in a diagram on paper with mm divisions to obtain the frequency response curve of the tested transformer, with the ratio of the transformer is unknown, it can be assertained by using the same measuring setup as described above, but now the resistors R, and R, are deleted. The transformer ratio equals the voltage ratio between the voltage induced in the secondary and the voltage impressed upon the primary.

A push-pull transformer is tested in such a way that the frequency response of each half of it is measured separately.


2. Tracing of the frequency response of an A. F. amplifier

Instruments applied: 1. A. F. millivoltmeter BM 210
2. RC generator BM 218a
3. Measured amplifier


The setup ts connected according to Fig. 6 The magnitude of the resistor $\mathbf{R}_{\mathbf{x}}$ is given by the formula:

$$R_{x} = \frac{R_{e} \cdot R_{z}}{R_{e} - R_{z}}$$

where $R_{\rm e}$ is the input impedance of the A. F. millivoltmeter and $R_{\rm z}$ is the loading impedance of the amplifier. As long as $R_{\rm z}$ is smaller than 100 ohms, $R_{\rm X}$ may be chosen to be equal to $R_{\rm z}$ as a sufficient approximation.

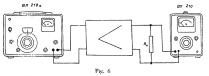

A suitable voltage is on set the RC generator and is kept constant during the measurement. The frequency is altered and the output voltage of the amplifier under test is recorded. The results can be plotted in a diagram utilizing the customary logarithmic scale. (See Fig. 7.)

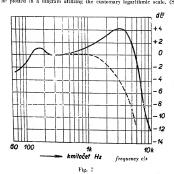

3. Amplifier sensitivity measurements

The instruments applied and the setup remain as before. The sensitivity of an amplifier is defined by the A. F. voltage which has to be connected to the input of the amplifier

which delivers the rated output. To achieve the rated output it is necessary to obtain an output voltage as follows:

$$E_{out} = \sqrt{R_z \cdot N_s}$$

where $R_{\mathbf{z}}$ is the loading resistance of the amplifier and N is the rated power. The amplification is given by the relation:

wen by the relation:
$$A = \frac{E_{out}}{E_g},$$


where $\mathbf{E}_{\mathbf{g}}$ is the voltage connected to the input, i. e. the output voltage of the RC generator.

generator.

For exact measurements it is essential that the input impedance of the amplifier under test should be larger than the output impedance of the RC generator. Only then is the reading of the built-in V. T. voltmeter correct. If the above condition is not fulfilled, it is necessary to measure continuously the input voltage of the amplifier by the application of a millivoltmeter which is permanently connected.

4. Inductance measurements

- Instruments applied: 1. A. F. millivoltmeter BM 210
 2. RC generator BM 218a
 3. Calibrated variable resistor 200 ohms (an uncalibrated one is applitable also if the adjusted resistance can be ascertained additionally by measuring with an ohmmeter)

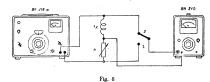

With the setup according to Fig. 8, inductances up to 1 mH can be measu sufficient accuracy.

A suitable frequency is selected on the RC generator. The switch P is set to the first position and the deflection of the A. F. millivoltmeter is recorded. Then the switch is changed to the second position and the variable resistor R is adjusted until the same deflection is achieved. By switching back to the first position of P then again to the second position, the deflection is checked and the magnitude of R is ascertained.

The inductance is given by the formula:
$$\dot{L_x} \ = \ \frac{R}{\omega} \ . \label{eq:Lx}$$

where $\omega=2$ πf and f is the frequency delivered by the RC generator.

Note: The switching can be accomplished by changing the connecting wires. In the first position the leads to the RC generator must be interchanged, as the earth terminals of the RC generator and of the Λ . F, millivoltmeter are connected to the third (earthed) conductors of the mains cords.

5. Capacitance measurements

The instruments applied and the setup remain as before, only instead of the inductor $L_{\rm X}$ under test the capacitor $C_{\rm X}$ which has to be measured is connected. With this setup only capacitance above 50 000 pF are measurable. The produce is the same as that described above. The result can be computed from the formula:

$$c_x = -\tfrac{1}{\omega\,R}$$

Note: If the frequency 15.9 kc/s is utilized for both measurements, then the calculations are greatly simplified. L_X and C_X are given by the following simplified formulae:


$$L_{\rm x} = R.10-5$$

$$C_{\chi} = \frac{1}{R}$$
 , 10-5

6. Frequency measurements

Instruments applied: 1. RC generator BM 218a 2. Service oscilloscope TM 694

sured frequency.

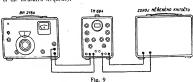


The RC generator BM 218a is applied as an external source of horizontal sweep voltage for the oscilloscope. If the generator frequency tailine exactly with the frequency being measured, a stationary figure appears on the screen of the C. R.T., escilloscope. If the measured frequency is of sinusoidal waveform, then the depicted figure is a circle, an

dippe or a straight line. With other waveforms (square waves, sawtooth oscillations, etc.) the figures are distorted, if one of the frequencies which are being compared is a whole mature of the property of the control of the phase shifts. In Fig. 10 are given Lissajous figures for frequency ratios of 2:1 and 5:1. If one of the frequencies is given by a mixed untiliple of the other batterior termina given by the ratio of whole unmbers, then more complicated figures are distinct. Examples are given in Fig. 11 for the ratios 5:4 and 3:2. A ratio can be executated by counting the peaks of the curve forming the figure on the vertical and fortiontal sides. The following formula is applicable for the frequency relations:

$$f_v = \frac{m}{n} \cdot f_h$$

where f_{∇} is the frequency applied to the vertical amplifier (or the vertical deflection plates) of the C, R. T. oscilloscope and f_h is the frequency applied to the horizontal amplifier (or the horizontal deflection plates). The number of peaks of the figure curve is m—horizontally and n—vertically (see Fig. 11).

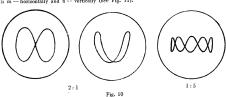

The accuracy of measurement is given by the calibration of the test generator — in this case by the RC generator TESLA BM 218a.



5:4

Fig. 11


LIST OF ELECTRICAL COMPONENTS

No.	Туре	Value	Max. load	Tole- rance	Standard ČSSR
RI	earbon layer	10 ΜΩ	0.2 W	+ 2°/o	WK 681 02 10M/C
R2	earbon layer	$3.2~\mathrm{M}\Omega$	0.1 W	± 1°/0	WK 681 01 3M2/D
R3	carbon layer	320 kΩ	0.1 W	± 1° 0	WK 681 01 M32/D
R4	carbon layer	32 kΩ	0.1 W	± 1°′0	WK 681 01 32k/D
R5	carbon layer	3 kΩ	0.1 W	± 1º/o	WK 681 01 3k/D
R6	carbon layer	$7.4~\mathrm{M}\dot{\Omega}$	0.1 W	± 2°/0	WK 681 01 7M4/C
R7	carbon layer	740 kΩ	0.1 W	± 1°/0	WK 681 01 M74/D
R8	carbon layer	74 kΩ	0.1 W	± 1°/,	WK 681 01 74k/D
R9	carbon layer	7.4 kΩ	0.1 W	± 1° ;	WK 681 01 7k4/D
R10	carbon layer	660 Ω	0.1 W	+ 1º/o	WK 681 01 660/D
RII	earbon layer	ιмΩ	0.25 W	_	TR 101 1M
R12	earbon layer	6.4 kΩ	1 W	+ 5°/e	TR 103 6k4/B
R 13	carbon layer	1 kΩ	0.5 W	+ 5"/0	TR 102 1k/B
R14	potentiometer	2 kΩ	0.5 W		WN 694 01 2k/N
R 15	earbon layer	1 kΩ	0.5 W	± 5°;₀	TR 102 1k/B
R 16	earbon layer	2.5 kΩ	0.5 W	+ 10°/ ₀	TR 102 2k5/A
R 17	earbon-layer	10 kΩ	0.5 W		TR 102 10k
R 18	carbon layer	400 Ω	0.25 W	_	TR 101 400
R 10	carbon layer	1 ΜΩ	0.25 W	_	TR 101 1M
R 20	earbon layer	125 Ω	0.5 W	$+ 10^{\circ}/_{\circ}$	TR 102 125/A
R 21	carbon layer	6.4 kΩ	2 W	+ 10°/ ₀	TR 104 6k4/A
R 22	wire-wound	LkΩ	4 W		TR 504 1k
R 23	wire-wound	4 kΩ	6 W		TR 612 4k
R 24	earbon layer	320 kΩ	0.25 W	-	TR 101 M32
R 25	carbon layer	320 kΩ	0,25 W	-	TR 101 M32
R 26	potentiometer	5 kΩ	0.5 W	-	WN 694 02 5k/N
R 27	carbon layer	400 Ω	0.25 W		TR 101 400
R 28	carbon layer	1 ΜΩ	0.25 W		TR 101 1M
R 29	carbon layer	125 Ω	0.5 W	± 10%	TR 102 125/A
R 30	earbon layer	6.1 kΩ	2 W	± 10°/ _o	TR 104 6k4/A
R31	carbon layer	100 kΩ	0,25 W	± 10°/ ₀	TR 101 M3/A
R 32	wire-wound	32 kΩ	12 W	_	TR 613 32k
15.33	earlion layer	61 kΩ	0.25 W	-	TR 101 64k

No.	Туре	Value	Max. load	Tole- rance	Standard ČSSR
R 3-1	potentiometer	160 kΩ	0.5 W	_	WN 694 01 M16/N
R 35	carbon layer	$2.22 \text{ k}\Omega$	0.1 W	± 1°/ _e	WK 681 01 2k22/D
R 36	carbon layer	5.2 kΩ	0.1 W	± 1°/0	WK 681 01 5k2/D
R 37	carbon layer	2 kΩ	0.1 W	± 1°/o	WK 681 01 2k/D
R 38	carbon layer	200Ω	0.1 W	± 1%	WK 681 01 200/D
R 39	carbon layer	24.4 Ω	0.1 W	+ 1°/ ₀	WK 681 01 24j4/D
R40	carbon layer	$220~\Omega$	0.1 W	± 1%	WK 681 01 220/D
R41	carbon layer	24.4 Ω	0.1 W	+ 1º/o	WK 681 01 24j4/D
R 42	potentiometer	50 Ω	0.5 W		WN 690 01 50
R 43	carbon layer	8 kΩ	0.5 W	± 5°/0	TR 102 8k/B
R 44	carbon layer	6.4 kΩ	2 W	+ 10°/ _e	TR 104 6k4/A
R45	carbon layer	6.4 kΩ	2 W	+ 10°/ ₀	TR 104 6k4/A
R46	carbon layer	10 MΩ	0.2 W	+ 2°/ ₀	WK 681 02 10M/C
R47	carbon layer	$12 M\Omega$	0.5 W	+ 5°/ ₀	WK 681 04 12M/B
R 48	carbon layer	400 Ω	0.5 W	± 5°/ ₀	TR 102 400/B

Ra = R13 + R43	in	parallel
Rb = R1 + R46 + R47	in	series
Re = R21 + R44	in	parallel
Rd = R30 + R45	in	parallel

Capacitors:					
No.	Туре	Value	Max, D. C. voltage	Tole- rance	Staudard ČSSR
C1	varia ble	2×500 pF	_	_	1AN 705 06
C2	trimmer	30 pF		_	PN 703 01
C3	trimmer	30 pF		_	PN 703 01
C4	trimmer	30 pF		-	PN 703 01
C5	trimmer	30 pF			PN 703 01
C6	trimmer	30 pF	_		PN 703 01
C7	mica	16 pF	500 V	± 10°/ ₀	TC 200 16/A
C8	mica	80 pF	500 V	± 10°/ ₀	TC 200 80/A
C9	paper	2,500 pF	600 V		TC 104 2k5
C10	electrolytic	16 μF	250 V	_	TC 511 16M
C11	paper	0.25 µF	400 V		TC 122 M25
C12	mica	32 pF	500 V	± 10°/ ₀	TC 200 32/A

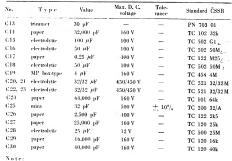


Notes


The state of the s

 $Ca \equiv C14 \, + \, C27$ or C29 or C30

The value of the capacitors C7 and C8 given on diagram is reached by scratching.

Component	Type - Value	Standard ČSSF	
Tube E1, E2, E3	EBI.21		
Tube E4	6B32	www	
Tube E5	AZ12	IAN 110 00	
Tube E6	11TF25	_	
Pilot lamp Ž1, Ž2	60 V/50 mA	1AN 109 07	
Measuring instrument	100 μΑ	IAP 780 13	
Fuse cartridge	1 A/250 V for 220 V	ČSN 35 4731	
Fuse cartridge	1,6 A/250 V for 120 V	ČSN 35 4731	
Fuse cartridge	0.16 A/250 V	ČSN 35 4731	

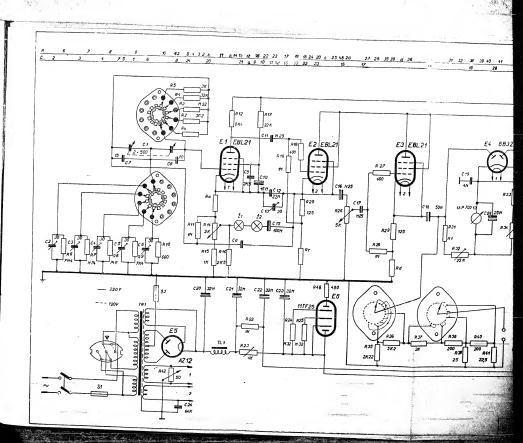

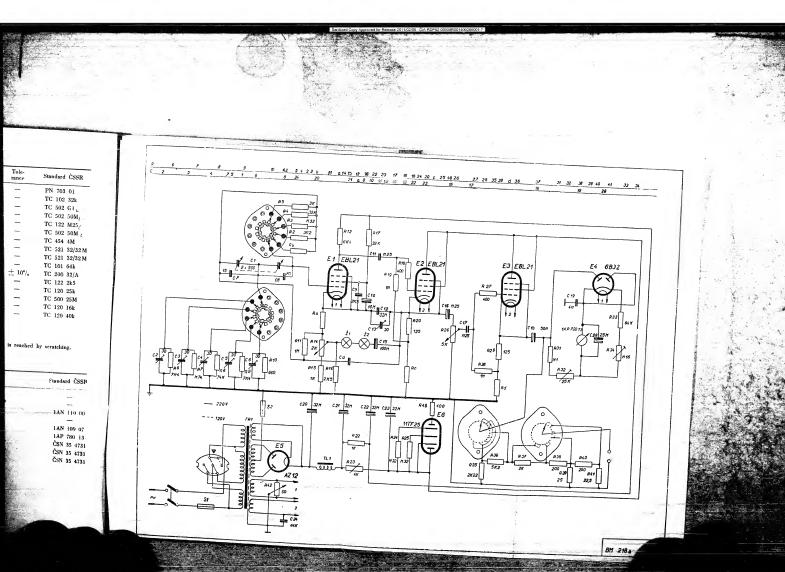

Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-7



SLEDOVAČ SIGNÁLŮ

Sledovoč signólů Teslo BS 367 je určen především pro opravy rozhlasových přijimočů o zařízení zvukové techniky. Lze jím, jok již sóm název udává, sledovot vstupní signól v různých stupních zesilení
o podle okustického výkonu nebo optického indikátoru sledovače lokolisovot funkční závodu zkoušeného přístroje. Malé rozměry přístroje a moló váho umožňují jeho použítí mimo dílnu, což přichází
v úvohu hlavně v těch přípodech, kdy není mažno vodný přístroj nebo aparaturu doprovit do opravny
(velké hudební skříně, zesilovocí souprovy pro kina, rozhlasové ústředny apod.).

(vetke nudební skrine, zesnovotí svoupový pro mír.) Možností širokého využití v dílenské, oprovářské a amatérské praxi představuje tento minioturní přístroj vhodnou a vítonou procovní pomůcku v celém oboru elektroakustiky.

POPIS

Sledovač signálů není čistě jednoúčelový přístroj. Zohrnuje v sobě celkem 3 funkční jednotky:

a) Třístupňový ní zesilovač se vstupní sondou, s optickým indikátorem a reproduktorem. Zesilovač je osazen elektronkami 6CC41, 6L31 o optickým indikátorem EM81. Citlivost je nastavitelná plynulevstupním děličem K2 (R6). Vstupní sondo sledovaće signálů se přepíná otočením hlavíce H (obr. 1) na ní nebo ví. Při přepnutí na akustické kmitočty (poloha označenó jednou tečkou) je na vstup sledovače připojen RC člen, při přepnutí na ví (dvě tečky) je na vstup připojen diodový detektor osazený germoniovou diodou. V poloze ví pracuje vstupní sonda v rozsahu 100 kc/s až 200 Mc/s. Vstupní kopacita sondy je 21 př. Moximální vstupní napětí je 250 Vss nebo 100 Veff. Špičkové napětí střídavé složky superponované na stejnosměrnou složku max. 420 V.

 b) Astobilní multivibrátor pro slaďování souvislým spektrem. Multivibrátor osazený elektronkou 6CC31 je zdrojem napětí obdélníkového průběhu o záklodním kmitočtu asi 1 kc/s. – Výstupní napětí cca

Kostru přijimače propojime na minus pál výstupního konektoru Z (vir vseobecně zásody) a druhym (tývým) vývodem muthvibrálozu kontrolujeme postupně jednoslívé stupně přijimače. Sprovný postup je podle másledujícího obrázku, kde v tamto připadě postupujeme od onody koncové elekronky k ontenní jedice.

Anoda koncové elektronky
 Anoda koncové elektronky
 Bidici mřížka
 Bidici mřížka
 Bidici mřížka

2. Ridici mitika elektronky
3. Anoda nf elektronky
4. Ridici mitika nf elektronky
10. Ridici mitika nf elektronky

5. Katoda díody

11. Antenní zdiřka přijimače

6. Anoda diody

Pril doseku, vývodu multivíbrdioru na naznočených mistech se musí z reproduktoru ozvat tóm, jehoż vykodnou silu můžeme nastovik knofilkem K1. Jestilže se tóm neczve (nebo jen velimi slobě), je závoda vyhodnou silu můžeme nastovik knofilkem K1. Jestilže se tóm neczve (nebo jen velimi slobě), je závoda ozvodátek, a právě dovýkome nebo dostunavkové stovišeky, součátske a může býk stadon nalezeno, event za pomoci žárovkové nebo dostunavkové stovišeky, výstupní napěti multivíbracu a cilihosti sledovcěe nastovuju jen tok, dby nedocházelo k přetižení výstupní napěti multivíbracu a cilihosti sledovcée nastovujue jen tok, dby nedocházelo k přetižení výstupní na zářene toké pozupovat opožně, by skujenova záření nebo sledovcée se stupní alondu. Při hledoní závody postupujeme teletý opět podle obr. 3, od vledovcé, ty, sselovce se stupní alondu. Při hledoní závody postupujeme teletý opět podle obr. 3, od vledovcé na vletní stovák Něppnem spondu no vt. poloho ozno-částí kena okelmu řeštaní. Při dostku na mříčes směšovače výladíme odočným kondensátovem někserou čeno deleno neklaveno měšterou


da.


z blitykis stanie a tim zkontrolujeme činnost vstupnich obvodu směžovače. Neozve-il se žódoná stanice z reproduktoru sledovače, překontrolujeme přišutné ví obvody o jejich součásti. Fřítom
můžeme s výhodou použit siný signal z malitivatoruz, který přiředeme na ontenné vštup přijímoče.
Jest závoda odstraněno, postupujeme dálé (podle obr. 3) měřem ke koncové elektrones, při čemí, hlasitet stadovcem reprodukovaného signalu musi nardstat úměrně počtu zesitujících stupňů přijímače. Neroste-il zesitení, je třeba kontrolovat vždy přislušný oktuh, včetně elektronky, u niž se zdvoda projevuje. Rovněž je nutné překontrolovat vždy dobté propojení "semí" zkoušeného přijímoče

a stedowode.

Fill selectivit signálu můžeme s výhodou používat vestověněho opplického indiktárou lodění. Podle zúřem nebo rozlíření světelné výseče můžeme usuzovat, zda signál je skutečné zesilován. Optický indikator rovněž umožívuje hledat závady i v růšném prosticetí. Jodníne při sledování signálu postoupíme
až k desekcí (kod S), nutno přeprosut vstupní sondu no nf – polohla oznočena gladou tečeou. Při řidoším sedování postupujeme pok opěž po měrných bodech dle obr. 3 až na anadou konzové elektronky Poleyni, is nám v něktorém míst závado, je při dodřávokní uvedeného postupu lokalisovánn
vídy no malý okruh součástí a lze ji snadno objevit a odstronít.

大江 一次

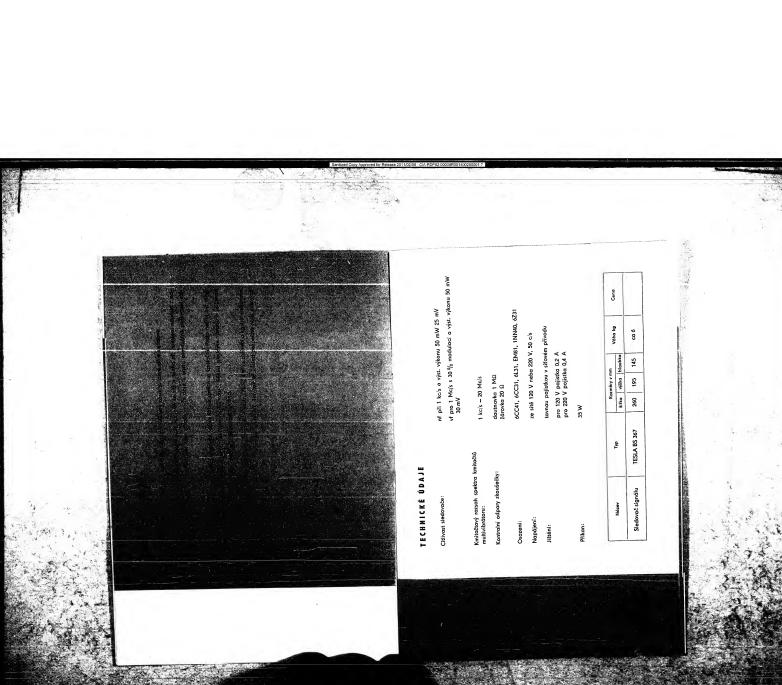


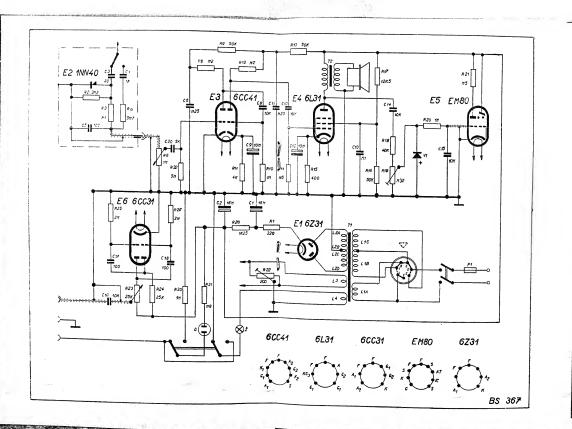

LIST OF ELECTRICAL COMPONENTS

Danistana

Kesi	stors:				
No.	Art	Value	Max. laad	Talerance	
R1	carbon layer	320 Ω	0.5 W		Т
R2	carbon layer	3.2 MΩ	0.25 W	±10%	T
R3		0.1 MΩ	0.25 W	±10%	T
R4	carbon layer		0.25 W	±10%	T
R 5	carbon layer	3.2 MΩ	0.1 W	±10%	TI
	carbon layer	2.5 ΜΩ		± 10%	W
R 6	potentiometer	1 ΜΩ	0.5 W		
R8	carbon layer	0.2 ΜΩ	0.5 W		17
R9	carbon layer	50 kΩ	0.5 W		TF
R 10	carbon layer	1 ΜΩ	0.5 W		TR
R 11	carbon layer	4 kΩ	0.5 W	i	TR
R 12	carbon layer	0.2 ΜΩ	0.5 W		TR
R 13	carbon layer	50 kΩ	0.5 W		TR
R 14	carbon layer	0.5 M Ω	0.5 W		TR
R 15	carbon layer	400 Ω	0.5 W		TR
R 16	carbon layer	50 kΩ	1 W		TR
R 17	carbon layer	12.5 kΩ	1 W	-	TR
R 18	carbon layer	40 kΩ	0.5 W		TR
R 19	potentiometer	0.32 MΩ	0.5 W		W
R 20	carbon layer	1 MΩ	0.5 W	1	TR
R 21	carbon layer	0.5 MΩ	0.5 W		TR
R 22	potentiometer	200 Ω	0.5 W		WN
R 23	potentiometer	25 kΩ	0.5 W		WN
R 24	carbon layer	25 kΩ	1 W	1	TR 1
R 25	carbon layer	2ΜΩ	0.5 W		TR 1
R 26	carbon layer	2 ΜΩ	0.5 W		TR 1
R 27	carbon layer	10 kΩ	1 W	- 1	TR 1
R 28	carbon layer	1.25 kΩ	2 W		TR 1
R 30	carbon layer	1 ΜΩ	0.5 W		TR 1
R 31	carbon layer	.0.8 MΩ	0.5 W		TR 10
R 32	carbon layer	5 MΩ	0.5 W		TR 10
- 1			1411/50	-accessor was	A
				-6	
		- 0		4.00	*: *: Suprement

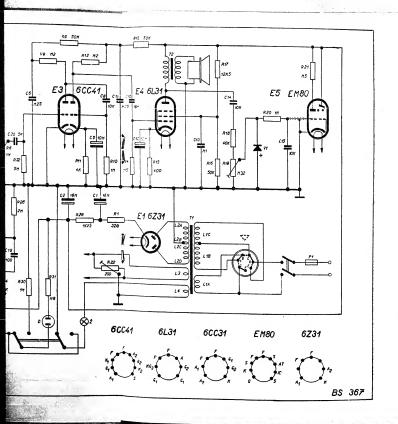

LIST OF ELECTRICAL COMPONENTS

Resistors

No.	Art	Value	Max. load	Tolerance	Standard ČSR
R1	carbon layer	320 Ω	0.5 W		TR 102 320
R2	carbon layer	3.2 MΩ	0.25 W	±10%	TR 101 3M2/A
R3	carbon layer	0.1 ΜΩ	0.25 W	±10%	TR 101 M1/A
R4	carbon layer	3.2 MΩ	0.1 W	±10%	TR 111 3M2/A
R5	carbon layer	2.5 MΩ	0.1 W	±10%	TR 111 2M5/A
R6	potentiometer	1 ΜΩ	0.5 W		WN 694 06 1M
R8	carbon layer	0.2 ΜΩ	0.5 W		TR 102 M2
R9	carbon layer	50 kΩ	0.5 W		TR 102 50k
R 10	carbon layer	1 ΜΩ	0.5 W	1	TR 102 1M
R 11	carbon layer	4 kΩ	0.5 W		TR 102 4k
R 12	carbon layer	0.2 ΜΩ	0.5 W		TR 102 M2
R 13	carbon layer	50 kΩ	0.5 W		TR 102 50k
R 14	carbon layer	0.5 ΜΩ	0.5 W		TR 105 M5
R 15	carbon layer	400 Ω	0.5 W		TR 102 400
R 16	carbon layer	50 kΩ	1 W		TR 103 50k
R 17	carbon layer	12.5 kΩ	1 W		TR 103 12k5
R 18	carbon layer	40 kΩ	0.5 W		TR 102 40k
R 19	potentiometer	0.32 MΩ	0.5 W	į	WN 694 01 M32/N
R 20	carbon layer	1 ΜΩ	0.5 W		TR 102 1M
R 21	carbon layer	0.5 MΩ	0.5 W	1	TR 102 M5
R 22	potentiometer	200 Ω	0.5 W	1	WN 690 01 200
R 23	potentiometer	25 kΩ	0.5 W	l	WN 697 02 25k/N
R 24	carbon layer	25 kΩ	1 W	1	TR 103 25k
R 25	carbon layer	2 ΜΩ	0.5 W	- 1	TR 102 2M
R 26	carbon layer	2 ΜΩ	0.5 W		TR 102 2M
R 27	carbon layer	10 kΩ	1 W		TR 103 10k
R 28	carbon layer	1.25 kΩ	2 W		TR 104 1k25
R 30	carbon layer	1 ΜΩ	0.5 W		TR 102 1M
R 31	carbon layer	. 0.8 MΩ	0.5 W		TR 102 M8
R 32	carbon layer	5 ΜΩ	0.5 W		TR 102 5M

LIST OF ELECTRICAL COMPONENTS

Capacitors:

No.	Art	Value	Max. DC voltage	Tolerance	Stemal
19	electrolytic ceramic mica ceramic paper paper electrolytic paper paper electrolytic paper mica mica electrolytic mica	16/16 μF 20 pF 1,000 pF 100 pF 0.25 μF 10,000 pF 10 μF 10,000 pF	700 V 1,000 V 350 V 400 V 30/35 V 400 V 30/35 V 400 V 400 V 400 V 400 V 400 V	±5 % ±5 %	TC 519 16/16N TC 700 20 WK 714 18 Ik TC 740 100 TC 122 M25 TC 122 10k TC 122 10k TC 122 M25 TC 531 10M TC 122 M25 TC 531 10M TC 122 M25 TC 531 10M TC 122 M1 TC 122 10k TC 121 100/B TC 211 100/B TC 529 8M WK 714 31 5k


Electronic tubes:

Tube E1 Tube E2 Tube E3 Tube E4 Tube E5 Tube E5 Tube E6	6Z31 1NN40 6CC41 6L31 EM81 6CC31	1AN 110 41 1AN 110 19 1AN 110 72 1AN 110 42 1AN 110 70
---	---	--

Further electrical components:

Neon lamp		
Inscandescent lamp	1AN 109 13	
Rectifier V1	1AN 109 13	
Fuse cartridge	1AN 744 14	
Fuse cartridge	ČSN 35 4731 0.2 A/250 V ČSN 35 4731 0.4 A/250 V	
	0.4 A/250 V	24

Supplementary changes of connecting and components are reserved. The tubes marked 1AN 110... are specially selected for use in the signal tracer.

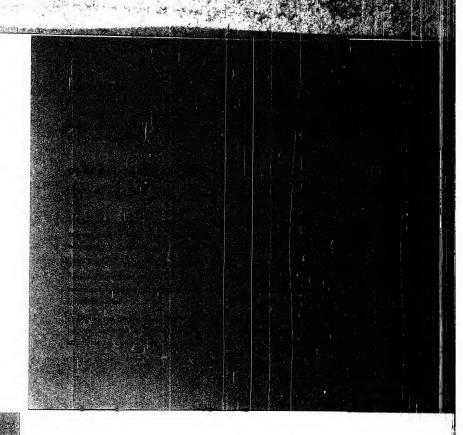

TECHNICAL DATA

Sensitivity of the signal tracer:

A. F. 25 mV at 1 kc/s and 50 mW output power; R. F.

30 mV at 1 Mc/s, 30% modulation and 50 mW output

Frequency coverage of the multivibrator frequency spectrum:

1 kc/s to 20 Mc/s.

Test resistances of the continuity tester:

1 Mohm — neon lamp 20 ohms — incandescent lamp

Tube complement:

6CC41, 6CC31, 6L31, EM81, 1NN40, 6Z31.

Powering:

A. C. mains 120 V or 220 V, 50 c/s


Safety devices:

Fuse in the mains connection

0.2 A for 220 V, or 0.4 A for 120 V.

Power consumption:

35 W.

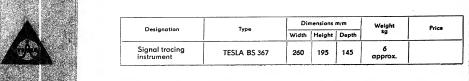

If the receiver is a complete model with a built-in loudspeaker, the multivibrator can be utilized to advantage for testing the stages and circuits.

The chassis of the receiver is connected to the negative pole of the output connector Z (see "General instructions") and using the other pole, the voltage-carrying pole of the connector, all stages of the receiver are tested successively. The correct sequence, as given in Fig. 3, is to proceed from the loudspeaker to the aerial socket.


- 1. Anode of the output tube
- 2. Control grid of this tube
- 3. Anode of the A. F. amplifying tube
- 4. Control grid of this tube
- 5. Cathode of the diode
- 6. Anode of the diode


- 7. Anode of the I. F. tube
- 8. Control grid of this tube
- 9. Anode of the mixer
- 10. Control grid of this tube
- 11. Aerial socket of the receiver

Whenever the output of the multivibrator is connected to one of the above listed points, a tone must become audible in the loudspeaker. The volume of this tone is controllable with the knob K1. Should no tone be audible or should it be very weak, then the defect is between the point which is being touched and the one before it. Thus the defect is located, is limited to a few components and can be found easily, in some cases by the application of the neon lamp or incandescent lamp continuity tester. The output voltage of the multivibrator and the sensitivity of the signal tracer should be adjusted so that the instrument under test or the tracer itself is not overloaded. It is possible also to carry out the test in a reversed sequence, i.e. beginning with the aerial socket of the receiver. In this case the multivibrator is not applied, but the signal tracer itself with the probe connected to its

input utilized. Once more the circuitry is tested according to Fig. 3, but by proceeding from the R. F. stages towards the output stage. First the probe is switched to the R. F. position (marked with two dots). Whilst the grid of the mixer is being touched with the prong of the probe, the receiver is tuned to some nearby transmitter, in order to test the correct functioning of the mixer input circuits. If no transmitter becomes audible in the loudspeaker of the tracer, then the R. F. stages and their components must be tested. For this purpose it is advantageous to apply a strong signal delivered by the multivibrator, which is fed to the aerial socket of the receiver under test. After the defect has been removed, testing may proceed (according to Fig. 3) towards the output tube, whilst the volume of the signal reproduced by the signal tracer loudspeaker must increase gradually in proportion to the number of the receiver stages. If the signal volume does not increase, it is necessary to test always that stage, including the electronic tube applied in it, which appears to be defective. It is essential to maintain a good earth connection of the receiver which is being tested and of the signal tracer.

During signal tracing the built-in visual tuning indicator may be utilized also to advantage. According to the narrowing or widening of its glowing sector, it is possible to judge whether the signal is actually being amplified or not. The visual indicator facilitates the defect location in a noisy environment. As soon as the detector stage (point 5) is reached during the signal tracing, the input probe

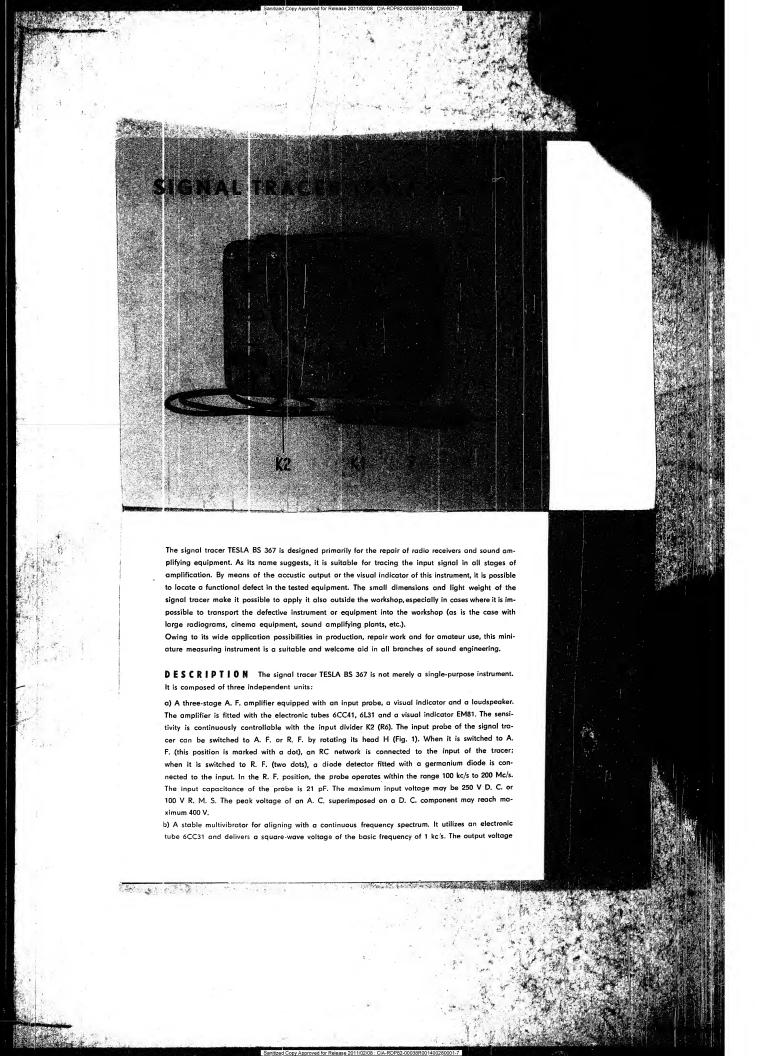

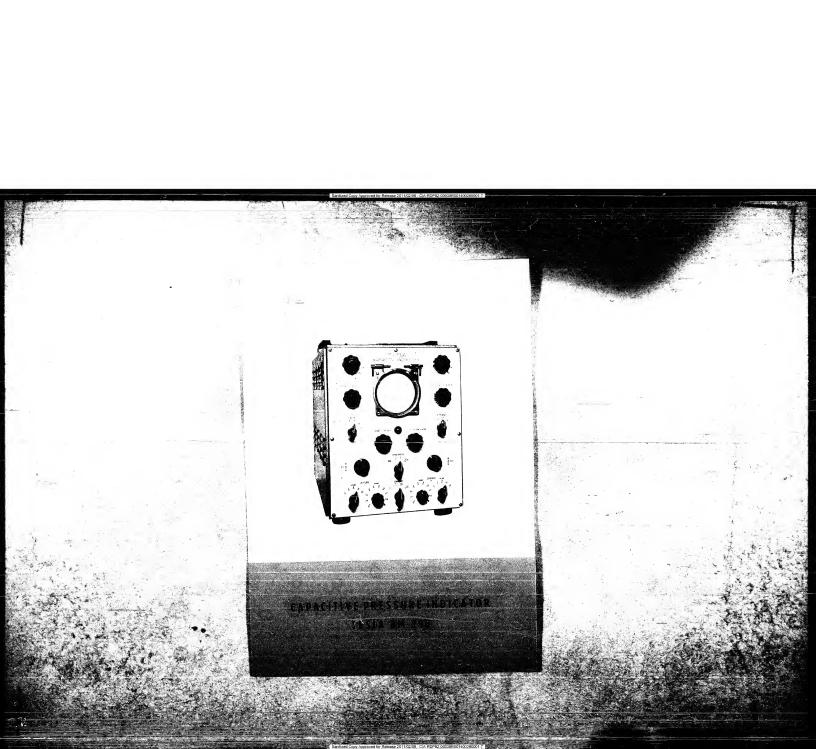

The instrument is designed primarily for displaying quantity variations which can be transformed into capacitance changes.

The variable capacitances is housed in a probe which is situated inside the space in

into variouse copacionaces is noused in a probe which is situated inside the space in which the change to be measured takes place. Primarily, the instrument is designed for displaying pressure variotions spread over magnified periods of time, such as the pressures of compression, suction, power and exhaust strokes inside the cylinders of internal combustion engines, fuel injection pressures in all engines, pressures in suction and exhaust pipes, further, lifts of injection jet needles and lifts of valves. With the aid of suitable pick-ups and opplying convenient methods also vibrations of engine parts can be displayed.

The pick-up of variations is a capacitor, the capacitance of which changes in accordance with the quantity variations to be displayed. Its capacitance changes influence the frequency of the oscillators so that, owing to variations to be displayed, frequency modulation takes place. The carrier frequency — after having been amplified and limited—passes a discriminator stage, and the D.C. and A.F. components of the resulting valtage are connected through a divider to a push-pull output stage which controls the vertical deflection plates of the C.R. tube. All stages, from the discriminator to the C.R. tube, are D.C. coupled, so that even a permonent capacitance change is registered by an alteration of the figure position on the screen. The instrument has two equal channels for the simultaneous displaying of two separate different phenomena by using two transducers. One of the traces of the double-beam C.R. tube can be connected to a source of finling marks. For information and exact ascertaining of the observed phenomenon position with respect to the working cycle of the engine, marks can be displayed in the internals corresponding to the marks. The statianary position of the observed phenomenon on the C.R. tube screen. These are either vertical lines or internut the displayed figure in the internals corresponding to the marks. The statianary position of the observed phenomenon on the C.R. tube screen is adversely influenced by fluctuations in the engine revolutions; therefore, due stabilizing is corried out in the time base triggering circuit. Each instant of starting of the engine operation cycle corresponds to the starting instant of the time base. The instant of starting the time base can be, however, retarded, so that the time base. The instant of starting the starting instant of the time base. The instant of starting the time base can be character operation cycle or one operation cycle sources of the start is shifted by up to 360° in one operation cycle or one operation cycle is enterly left aut and attarting The pick-up of variations is a capacitor, the capacitance of which changes in accord-

delayed starting is not possible.

If the observation has to be quite independent of the engine and if perfect synchronization between the picture and the pracess is not necessary, automatic time bose con be applied, using direct synchronization with the observed pracess. The time bose employs a thyrator and its frequency can be selected in five steps. After the frequency has been roughly selected, it can be adjusted exactly with the old of the appropriate control littled on the instrument pose. been roughly selected, it can be adjusted exactly with the all of the appropriate control fitted on the instrument panel.

The capacitance indicator employs a C. R. tube which displays two phenomena simultaneosly. The brightness and focussing of the two traces is independent. The properties

of the display section, i. e. brightness, focus and synchronization are such that it is possible — with the aid of an adaptor — to photograph the displayed figure without any interference, such as undulation of the trace (spot wobble), R. F. remnants and the like. For the described instruments transducers have been evolved for pressure indications from 0 to 500 kg per sq. cm. The measuring ranges of the transducers depend on the diaphragms stepped up from 0.1 to 1 mm. By suitable adjustment of a transducer, olso very low partial pressure curves of high total values can be displayed by the application of counter-pressures.

ADVANTAGES

The permissible distance of the instrument from the measured place 10 metres or even Ine perimisable distance of the instrument from the measured place 10 metres or even more. With the aid of an adopter and a suitable camera photographs of the displayed figures can be made without difficulty; the accuracy of the calibration curves depends solely on the static pressure indicator employed. Horizontal marking of the displayed figure renders the picture still more accurate and allows also perfect evaluation of the diagram obtained. The wide frequency range renders possible the displaying of very fast phenomena, e. g. of the 30th harmonic frequency of 12,000 R. P. M. The instrument is easily transportable and withstands external influences.

TECHNICAL DATA

0-6 kc/s -3 dB (0.7 of the original value) Frequency response

Sensitivity: min. 0.6 pF/cm approx. max. 0.02 pF/cm approx. of the trace deflection

Vertical deflection linearity: The maximum error at transducer capacitance changes by ± 2 pF $5^0\!/_0$

Time base frequency: in five steps, fine adjustment within 0.3 to 1800 c/s Time hase linearity:

Maximum error 5%

in 4 steps, fine delay adjustment within the limits of 1.4 to 310 msec. compared with the start impulse of the magnetic transducer Time base delayed start:

mavable within the lower third of the screen; adjustable height: from 0 to 5 cm Marks:

adjustable width fram 0 to 2 mm Intensity marks:

1 × 1Y50, 2×ECH81, 5×EF80, 4×6L43, 2×6B32, Valve complement: 4×6F36,2×6CC31, 1×6F31, 2×ECC85, 1×OR2-100/2,

1 × 21TA31, 2 × 11TF25

Mains operation valtage and power consumption:

120/220 V, 50 c/s, 220 W approx.

BLOCK CIRCUIT DIAGRAM

1 2

4 5 6

7

9 10 11

.

1 Capacitance transducer — 2 Capacitance transducer — 3 Magnetic transducer of marks — 4 Oscillator i — 5 Oscillator II — 6 Source at timing marks — 7 Rf amplitier + discriminator — 8 RF amplitier + discriminator — 9 D. C. amplitier — 10. D. C. c. amplitier — 11 Source of storting poiles — 12 C. R. tube —

KOVO PRAHA-CZECHOSLOVAKIA

Grafia 04, Brno - 1383 5

Printed in Czechoslovakia



Sanitized Copy Approved for Release 2011/02/08 . ČIA-RDP82-00038R001400280001

APPLICATION

The absorption wavemeter TESLA BM 387 serves for carrying out speedy measurements of the frequencies of the oscillators and other frequency generators within the range from 47—200 Mc/s; it indicates frequencies up to 270 Mc/s.

DESCRIPTION

The instrument is designed in the form of a cylinder. During the measurement the instrument can be held in the hand or it can stand on its legs.

The measuring circuit of the wavemeter is a tuned LC circuit with variable inductance and capacitance. The simultaneous changing of L and C is rendered possible by a sliding contact fitted onto the rotor of the capacitor, by means of which a part of the circular coil which forms the inductance is connected in parallel with the capacitance. After being rectified by a silicon diode, the voltage across the measuring circuit is indicated by a D. C. microammeter Type DHR $5-400~\mu$ A. The maximum deflection of this meter indicates that the measuring circuit is in resonance with the frequency to be measured.

The rotor of the capacitor is connected with the frequency scale by a double gear 1:5, so that approx. 2.7 scale revolutions cover the whole angle of rotation of the rotor. Three dials are fitted on the disc, mutually overlapping by approx. 25°. A further linear scale is provided for the calibration of the auxiliary calibration chart.

The pointer fitted on the rotor moves over three fields marked on the inductance. The pointer position during the tuning indicates the appropriate scale for reading the result. The tuned circuit is protected by a removable transparent cover against mechanical damage and dust.

ADVANTAGES

Small dimensions and weight, easy manipulation, measurement readiness.

TECHNICAL DATA

Range of measurement:

45—200 Mc/s, facility to indicate frequencies up to 270 Mc/s $\,$

Accuracy:

± 1 % when a calibration chart is used

 \pm 2.5 $^{\rm o'}_{\rm 70}$ when reading directly from the dial of the wavemeter

Valve Complement: Sili

Silicon diode 21 NQ 50 D. C. microammeter Type DHR 5—100 μA

BASIC DIAGRAM


- C - /- /- /	Туре	Dimensions mm			Waight ke	Order Nr.	
ltem		Width	Height	Depth	Treight Ng	-	
Absorption Wavemeter	TESLA BM 387		110×200	mm -	1.15	BM 387	



KOVO PRAHA-CZECHOSLOVAKIA

KO 1758 a - 610

rinted in Czechoslovakia

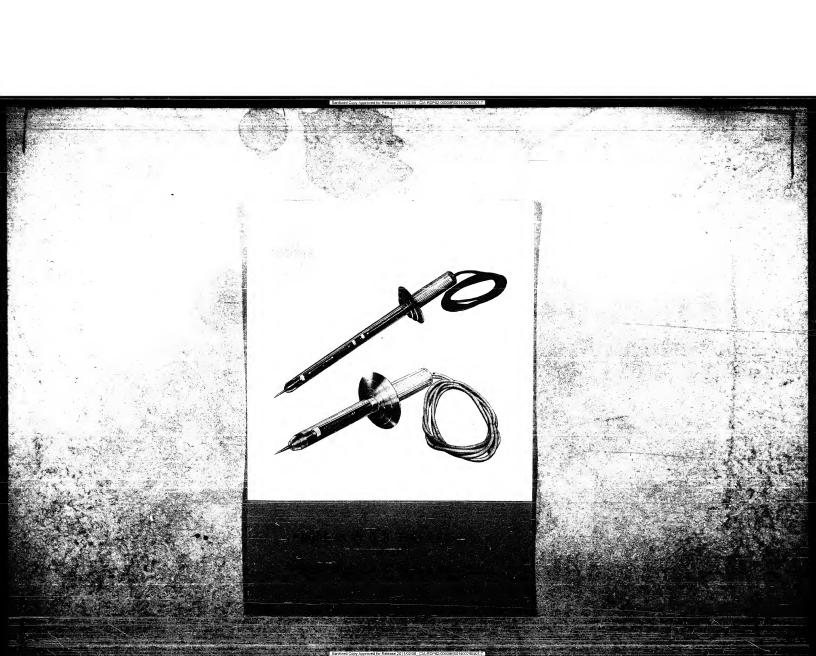

The probes Type BS 375 and 376 are intended to provide supplementary outfit for the voltohmmeters TESLA BM 216 and BM 289 for transitory measurements of D. C. voltages up to 15 and 30 kV.

DESCRIPTION

The probes are designed as resistive dividers moulded into thermoplast tubes. The H. T. source the voltage of which is to be measured, is touched with the terminal of the probe (i. e. its point); the measuring instrument indicates across the resistor R 1 the voltage drop on the terminals of the voltohmmeter 0—300 V. (See illustration.)

During the measurements the grid leak resistor of the voltohmmeter tube is disconnected (by a switch). Three cables are provided for connecting the probe, the cable marked "+" is connected to the positive terminal of the voltohmmeter, the cable "Z" to the negative one. The H. T. is applied to the probe point "K", i. e. the H. T. component the voltage of which is to be measured is touched with the probe point "K". The cable with the terminal $\ensuremath{\mathsf{I}}$ "Zs" forms the negative branch. Moreover, the negative terminals of the measured H. T. source and of the voltohmmeter are connected by a special conductor lest the measuring instrument might be damaged in the case of an accidental interruption of the conductor $\boldsymbol{Z}_{\!\boldsymbol{c}}$

ADVANTAGES

Simple manipulation, versatile applicability, mechanical sturdiness and durability, operation

TECHNICAL DATA

Probe Type BS 375:

Divider 1:50 for voltages up to 15 kV

Probe Type BS 376: Meas. voltage accuracy: Divider 1:100 for voltages up to 30 kV

Measuring instrument BM 289 (BM 216) \pm 3 %Divider 1:50 \pm 3 %

Divider 1:100

BASIC DIAGRAM

κονο

PRAHA-CZECHOSLOVAKIA

KO 1765 a - 6101

Printed in Czechoslovakia



The resonance meter TESLA BM 342 is designed to provide facilities of speedy measurements of the resonant frequency of oscillating or non-oscillating LC circuits within the range from 5 to 250 Mc s. The instrument is also suitable for use as an absorption or beat wavemeter (réceiver), or as an A. M. auxiliary oscillator for the alignment of U. S. W. and TV receivers. As an independent meter it measures the resonance of chokes and in conjunction with an auxiliary inductance or capacitance of known magnitude, it measures capacitors and inductors respectively. Besides, the resonance meter can also be used for checking aerials and aerial feeders.

DESCRIPTION

Basically, the instrument is an oscillator which covers a wide frequency range and in the grid circuit of which a meter is provided for following the grid current. During measurements, the tuned curcuit of the resonance meter is inductively coupled with the circuit to be measured. Mutual alignment of the circuits is indicated by a drop in the grid current.

ADVANTAGES

The instrument proper is of miniature dimensions and small weight. Easily exchangeable coils and simple tuning allow speedy measurements. A microammeter is employed as grid current indicator; thus, accurate resonance determination is attained.

TECHNICAL DATA

5-250 Mc/s, subdivided in eight Frequency range:

continuously tunable bands: 5-- 7 Mc/s 8--- 12 Mc/s 18--- 27 Mc/s 27--- 40 Mc/s 39--- 60 Mc/s 60- 95 Mc/s 95---150 Mc/s

150-250 Mc/s

Frequency calibration accuracy: \pm 2 $\,\%$

220 or 120 V, 50 c/s, the accuracy of measurements is not adversely influenced by voltage fluctuations of Power supply:


 \pm 10 %

5 W Power consumption: $1\times 6\text{F}32$

Valve complement: The right is reserved to modify the instrument if such modifications improve the per-

formance or the appearance.

KOYO PRAHA-CZECHOSLOVAKIA

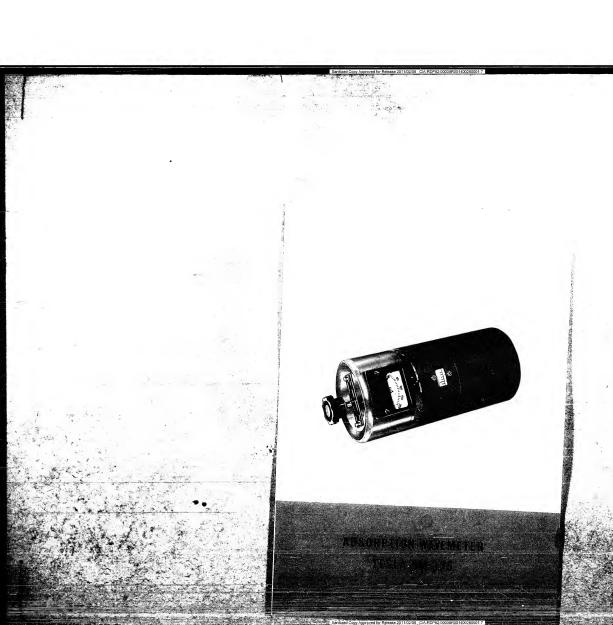

The absorption wavemeter TESLA BM 335 is one of basic meters designed for microwave applications. Its small design and simple operation allows to carry out speedy frequency measurements of oscillators and other frequency generators when their setting in operation and checking is effected.

DESCRIPTION

The instrument is designed in the form of a cylinder, the cavity of which accommodates the tuned measuring circuit with a detector, the drive gear of the rotary frequency scale and a moving coil indicator. The main part of the wavemeter is the tuned measuring circuit itself, formed by a symmetrical butterfly circuit.

The detector employs a crystal diode, A D. C. microammeter Type DHR 3 $-200~\mu\text{A}$ is employed as indicating instrument. The coupling of the measuring circuit with the source is attained by approaching the protruding aerial to the frequency generator.

The maximum deflection of the meter pointer indicates that the tuned measuring circuit is in resonance with the frequency to be measured. When measuring low output generators the resonance can be indicated directly in the source (e.g., by grid current drop in oscillators). The frequencies of 200—900 Mc/s are covered by a single range and can be read either from the dial (calibrated directly in terms of Mc/s) of the wavemeter or — with a higher accuracy — from a linear scale with aid of a calibration chart. The instrument can be handled by holding it in hand, or — if fine tuning is to be carried out — it can be placed on the table. For this purpose it is fitted with two legs. For frequencies 900 Mc/s to 1300 Mc/s to the wavemeter can be used as an indicator. No power supply unit is necessary for the instrument.

ADVANTAGES

Small dimensions and weight. Readiness to carry out speedy measurements and easy servicing. One range covers the whole frequency range.

TECHNICAL DATA

Frequency range:

200-900 Mc/s, facility of indications up to 1300 Mc/s

Measurement accuracy:


 \pm 1.5.% when reading from a calibration chart, \pm 3 % when read directly from the scale

Tube complement:

Crystal diode 21 NQ 50 D. C. meter DHR 3—200 μ A

TESLA BM 335

KOVO

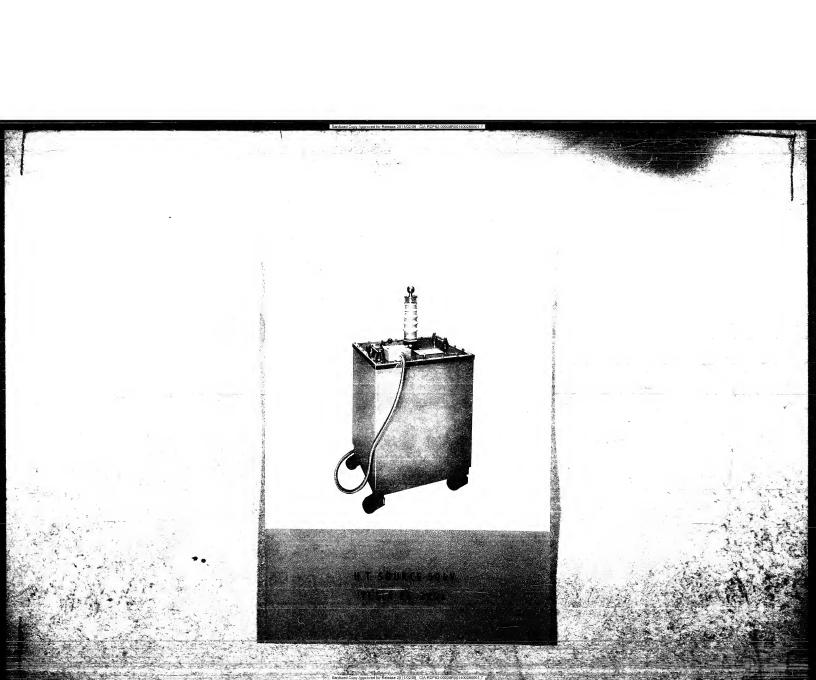

BASIC DIAGRAM KOVO PRAHA-CZECHOSLOVAKIA

APPLICATION The TESLA BS 222a H. T. source is designed for use as a source of D. C. of continuously controllable voltage for laboratary applications in pulse technics, radio lacation, vacuum technics, and generally wherever the current does not exceed 2 mA. It is especially suitable for insulation tests of materials of great dielectric strength.

DESCRIPTION

The apparatus is built as two separate units: the cabinet of the H. F. source is fitted with castors to facilitate transpart; the control unit contains, as well as all necessary control elements, two instruments far permonent indication of the output. This design makes it contains the H. T. course habital a contaction who are tool to each contains. possible to place the H. T. source behind a protective wire net and to apply remote control. The two units are interconnected with a 4 m long screened cable. Thus the greatest possible safety is secured for the operator.

The H. T. source is in a sturdy container made of steel sheet and filled with oil. The $\overline{}$ tine 17. 1. Source is in a sourcy committee induce of sceen sincer and lined with oil. The strong lid of insulating material carries the whole structure. The H. T. produced by the strong lid of insulating material carries the whole structure. The H. T. produced by the transformer is connected to porcelain feed-through insulators. On the lid is the lever of the polarity change switch which connects either the plus ar the minus pole to the chossis. This switch can be operated only when the H. T. source is not in use.

The cantrol unit is the switchboard of the apparatus. On its panel are the controls and The control unit is the switchboard of the apparatus. On its panel are the controls and the measuring instruments which indicate the output current and voltage. Each division of the voltmeter scale represents 500 V, the full scale deflection is 50 kV. The built-in controllable autotransformer enables continuous output control. Whenever the source has been disconnected from the mains—regardless to whether intentionally or output. has been disconnected from the mains — regardless to whether intentionally or auto-motically by the cut-out — this transformer must be set back to minimum before the power is switched an again. The slider of the autotransformer is ganged with the H. T. switch which cannot be operated when the slider is not in the zero position.

The apparatus is fitted with an overload relay and cut-out as protection against short $_{_{\rm J}}$ circuits.

Continuous output control. Polarity selection. Permanent indication of voltage and current by the built-in instruments. The power supply to the H. T. transformer is interrupted automaticolly at accidenal overloads. Easy and safe aperation.

CONTROL UNIT



TECHNICAL DATA

Rated output voltage:

controllable from approx: 115 V to 50 kV. Under laad the control range is 0–50 kV $\,$

less than 1% max. 2 mA cantinuously Permissible load:

one H. T. rectifying valve META VOA-Z Tube complement:

220 V, 50 c/s \pm 10 0 /₀ Mains connection:

 $2 \times 2.5 \, \text{A}$ mains fuse and averland cut-out



TESLA BM 211 CIRCULL MAGNIFICATION METER

		niced Copy Approved to Recode 20 100-00 Grant	SPR 00058001400300017	C	
	median di seri	BASIC DIAGRAM			
	H.F. datastor	Q detector	V. T. volumety for Quad h. F. voltage		
	Osignedas Circuit estall T T subject estall T T	Specific rim Wish Hills 2 LABRAT 11 - SPEC - WS	Weight & Order No.	and the state of t	
••		(wasterna)			
	KOVO (C) 1669 1 - 6906	PRAHA - CZECHOSLO	YAKIA Printed in Czechoslovskia		

The TESLA BM 211 circuit magnification meter is designed for a wide variety of R. F. measurements by the resonance method. It indicates directly the magnification, inductance and capacitance of colls; the power factor, capacitance and inductance of capacitors; the inductance of resistors, etc. The apparatus is suitable also for the exact comparison of coils, capacitors, insulating materials, etc.

DESCRIPTION

The magnification meter is essentially a wide range H. F. oscillator, the output voltage of which is kept constant by H. F. detection. A part of this voltage is injected into a test circuit which is comprised of the coil which has to be measured and of the tuning capacitor of the magnification meter. The voltage developed across this capacitor at resonance is taken to the V. T. voltmeter via an attenuator and a detector stage. The voltmeter registers two rectified voltages: one is delivered by the H. F. detection which maintains the constant oscillator voltage, the second is taken from the test circuit via the \boldsymbol{Q} detector.

Measurement of components other than coils. To the binding posts "Lx" is connected an auxiliary coil which resonates with the built-in tuning capacitor at the required frequency. The measurement is indirect because it is based on the mistuning of the

Measurement of dielectric constants of insulating materials. Dielectric constants are ascertained from the change of capacitance of a test capacitor which consists of two plates of known dimensions. The insulating material which has to be measured

ADVANTAGES

Speedy and simple application. Direct measurement of capacitances and inductances. Wide variety of applications. Good stability, and sufficient accuracy of Q measurements which is independent of even the highest frequencies.

TECHNICAL DATA

Capacitance range:

Magnification range: $Q=0\div 450\,$

Frequency ranges: the whole frequency range 30 kc/s to 30 Mc/s is divided into 6 positions of the selector: $30\div95$ kc/s, $95\div300$ kc/s, $300\div950$ kc/s, 350 kc/s 3Mc/s, $3\div9.5$ Mc/s and $9.5\div30$ Mc/s

Inductance range:

measured directly: 0.5 μ H to 0.5 H; computed from the formula $L = \frac{25350}{f^2C} (f \dots Mc/s, L \dots \mu H, C \dots pF)$: 0.07 #H to 0.7 H, provided that the self-capacitance of the coil is negligibly small in comparison to the tuning capacitance

measured directly: 0.1 pF to 400 pF; computed: 0.1 pF to 0.1 μ F

 $0.05\,\%$ to 10 % for capacitances of up to 400 pF, and for insulating materials applied in a test capacitor of max. Range of capacitor and dielectric losses :

Accuracy:

Frequency: \pm 1 %; (\pm 1.5 % above 3 Mc/s)

Q factor: ± 5 % over the whole range, provided that the self-capacitance of the coil which is being measured has been compensated

Inductance: $\pm~3~\%$ over tha whole range, provided that the self-capacitance of the coil which is being tested is negligible in comparison with the tuning capacitance

 \pm 10 % over the whole range

Capacitance: \pm 1 % or \pm 2 pF (whichever is the larger) in direct measurements

Stability: mains voltage fluctuations of \pm 10 % do not affect the accuracy of measurement which is independent also of ambient temperature variations of + 10 °C to + 30 °C

Mains connection: 220 or 120 V, 50 c/s

Power consumption: 55 W

Tube complement: UBL 21, 2×ECH 21, 6 AL 5, 2×AZ 11, 2×12 TA 31

DESIGN

Loss angle:

Self-contained panel unit with all connections on the front panel.



TESTA BM 220 H. F. CIRCUIT MAGNIFIDATION METER Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-7

BASIC DIAGRAM

KOVO PRAHA-CZECHOSLOVAKIA

KO 1644 a - 6006

Printed in Czechoslovakia

The TESLA BM 220 H. F. circuit magnification meter is a precision laboratory instrument designed for quality factor measurements within the frequency range 30 to 200 Mc/s. It may be applied widely in several branches of electronics, especially in radio location, television, radar, etc. It is designed as a panel instrument and can be combined with other similar laboratory appliances.

DESCRIPTION

The apparatus consists of an H. F. generator, the range of which is 30—200 Mc/s, a voltage dividing H. F. line, and two diode voltmeters. The voltage produced by the generator is registered by the low impedance diode voltmeter which enables the setting of its constant magnitude. The H. F. voltage, which is controlled by changing the oscillator anode potential, is taken via the H. F. dividing line to a tuned circuit which is formed by the coil, the properties of which are being tested, and a calibrated tuning capacitor. The voltage produced at resonance in this test circuit is directly proportional to its Q factor. A diode voltmeter of high input Impedance and calibrated directly in values of Q is connected in parallel to the tuning capacitor. The change of the Q ranges is accomplished by changing the sensitivity of this second diode voltmeter.

ADVANTAGES

Simple and speedy operation. Direct reading of capacitance, inductance and Q. Accuracy and

TECHNICAL DATA

Q=0 to 1,200, divided into 4 settings of the selector: Magnification range:

0-- 100 0- 300 0--- 600 0-1,200

30 Mc/s - 200 Mc/s divided into 2 settings of the range Frequency range:

selector: 30-75-200 Mc/s

Accuracy:

Tuning capacitance:


 \pm 15 % within the frequency range 30—100 Mc/s Q factors: \pm 1 % or \pm 0.5 pF (whichever is the larger)


 $\pm\,1\,\%$

4imes6j6, 2 imes RD12Ga, 6AL5, AZ11, UY1N, STV280/40 Tube complement:

Mains connection:

fuse in the mains connection Fuse:

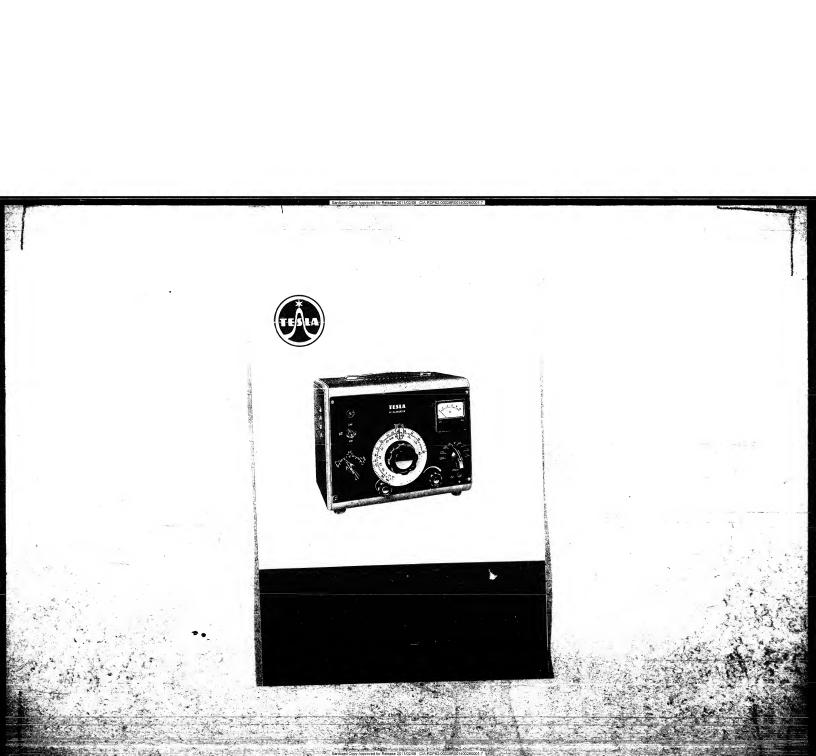

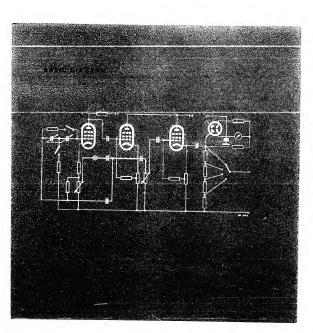



KOVO PRAHA-CZECHOSLOVAKIA

Grafia 04, Brno – 1383 59

APPLICATION

The TESLA BM 2180 RC signal generator is designed far wide applications as a test apparatus. It is suitable for use in sensitivity measurements, distortion and response contral, etc. It is usually applied in cannection with an A. F. vacuum tube valtmeter and an oscilloscope.

DESCRIPTION

The generator opplies double coupling. The frequency independent positive feed-back is connected to the cathode of the first oscillator tube and operates with automatic control of the oscillating voltage, using an incandescent lamp stabilizer. The frequency is determined by the components of a bridged-over T-filter which applies a strong negative feed-back to the grid of the first tube for all frequencies except the one which has to be produced by the oscillator. The ranges of the oscillator are selected by switching the filter. The frequency is controlled continuously by two ganged variable capacitors.

ADVANTAGES

Low distortion. Stable frequency. High output voltage over the whole range, permanently controlled by the built-in V. T. voltméter. Continuous and decadic control of the output voltage. Low output resistance. Frequency independent output attenuator.

TECHNICAL DATA

20 c/s to 1.2 Mc/s, divided into 5 settings of the range Frequency range:

selector: 1. 20-200 c/s

II. 200-2,000 c/s III. 2-20 kc/s IV. 20-200 kc/s

V: 02-1-2 Mc/s

Accuracy of the frequency scales: range I: \pm 30%

ranges II–IV: ± 2°/₀ range V: ± 5°/₀

Frequency deviation owing

max. 3º/₀ ta warming-up:

dependent on the setting of the frequency dial. Within the ranges I–IV between 20 and 100 it is $\le 1.50\%$;

between 100 and 200 it is larger

continuously controllable between 0 and 10 V, (if necessary up to 15 V can be set with the positive feed-back control, but larger distortion and frequency deviation will be met with within the range V)

Output control in steps:

Output valtage:

Fuses:

10; 3; 1; 0.3; output voltage:

0,1; 0,03; 0,01; 0,003 V 150 Ω 2 kΩ 20**0** Ω


output impedance approx. ≠ 1 dB over the whole range Frequency response:

AZ 12, 3×EBL 21, 6 B 32 (6 AL 5), STV 280/40 Tube complement:


220 or 120 V, 50 c/s

mains fuse 1 A for 220 V, mains fuse 1.6 A for 120 V.

H. T. fuse 0.16 A

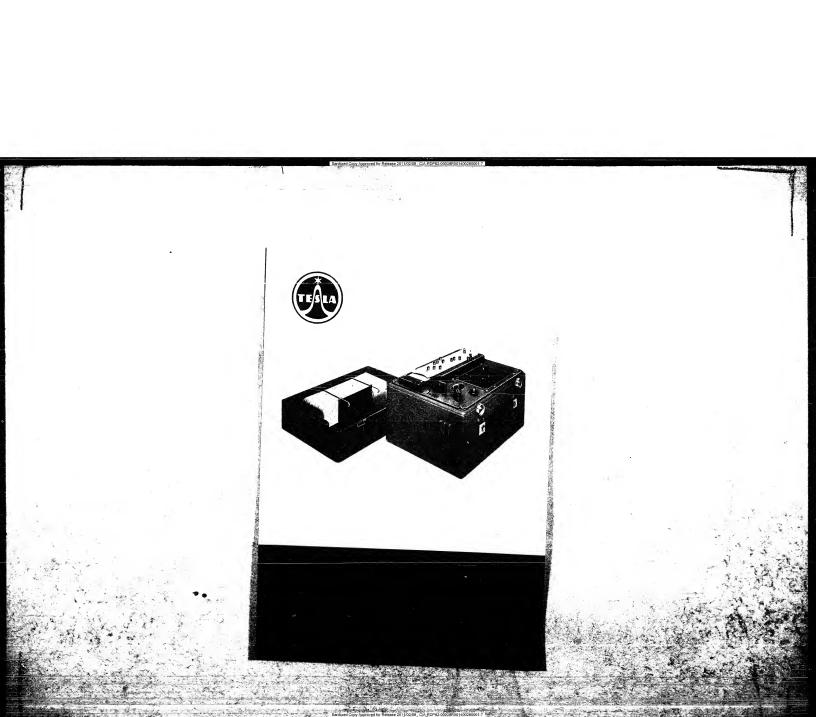

Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-7

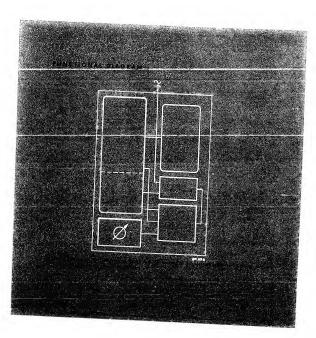



KOVO PRAHA - CZECHOSLOVAKIA

Grafia 04, Brna - 1383 59

APPLICATION

The electronic tube tester type BM 215 A is designed for recognition of electronic tube auglity by ascertaining the emission capacity of the cathode, continuity of the filament, inter-electrode short circuits as well as mutual conductance and vacuum. The instrument is primarily intended for repair-workshops and can be used for testing of all known tube types. On the front panel are fitted 15 different sockets for all standard types of tube bases. The tests of tubes of special design (i. e. with unusual type of the base) can be effected by connecting the electrodes with special cords to the marked sockets. The apparatus is of standard service design; it is easily transportable and can be employed for various other applications, e. g. as short-circuit tester, circuit continuity tester, etc.

DESCRIPTION

The instrument consists of a power unit, connecting board, two performance selector switches and a switch for mains voltage equalizing. Special sockets on the panel serve for connection of electronic tubes which are not of standard design. The filament continuity is checked by a measurement in bridge connection, the anode and grid current is tested by applying the voltage to the respective electrodes and by connecting a meter into their circuit; mutual conductonce is ascertained by the change of Ug1 by, 1 Volt. Correct vacuum is oscertained by unchanging deflection of the meter when the position of the switch is changed from to VAC (vacuum). During this operation a resistor of 200 kohms is inserted in the connection to G1. The short circuits are ascertained by

The measuring method is direct and semi-automotic for all standard types of electronic tubes. Facility to test also such types of tubes the socket for which is not built-in in the instrument. Facility to widen the applicability of the tester - e. g. by employing a regulating potentiometer for continuous control of the G1 bias; the instrument can be employed for ascertaining short circuits and for checking the circuit-continuity; easy and speedy servicing, facility of checking and adjustment of the supply valtage.

TECHNICAL DATA

Types of sockets:

Side contact, ten-pin socket, European octal, American octal, five-side-contact, miniature, Rimlock, Noval, socket of the type 6L50 and EF50, five-pin socket, seven-pin socket, American seven and four-pin sockets.

0-300 V in six steps Anode voltage:

The highest anode and screening grid voltage is:

0; 20; 50; 100; 150; 250; 300 V

 $_{\pm}5\%$ at mains voltage 220 V (120 V) and load up to Voltage accuracy:

0.1 A

The maximum first grid bias:

0; 1.5; 3; 6; 12; 24; 48 V $\pm 3\%_0$ at mains voltage 220 V (120 V) without the load

The maximum current range of the meter:

500 mA, in five steps:

1.5; 5; 15; 150; 500 mA

Filament voltage:

Voltage accurocy:

from the voltage an the sockets of the Uf connecting switch 0, 0.5, 1, 9.3, 20, 40, 60 V and 0.7, 1.45, 3, 5.2, 7, 15, 50 V filament voltage for almost all types of tu-bes can be derived with accuracy ±5%. Maximum bescon be derived with accuracy $\pm 5\%$. Maximum odmissible load for voltages up to 25 V is 2 A, for voltages higher than 25 V 0.3 A.

Power supply:

220 V or 120 V, 50 c/s

Power consumption:

10 W opprox. + consumption of the heated tube

Protection:

fuses and cut-outs

6Z31

Valve camplement:

The right is reserved to carry aut modifications in order to improve the performance of t or the appearance of the instrument.



TESTA BM 211 CIRCUIT MAGNIFICATION METER

BASIC DIAGRAM

H. F. oscillator

Q detector

H. F. detector

V. T. voltmeter for Q and H. F. voltage

Designation	Туре	Dimensions mm				
		Width	Height	Depth	Weight kg	Order No.
Circuit magnifi- cation meter	TESLA BM 211	490	275	340	15 👓	BM 211

KOVO PRAHA-CZECHOSLOVAKIA

KO 1660 a - 6006



The TESLA BM 211 circuit magnification meter is designed for a wide variety of R. F. measurements by the resonance method. It indicates directly the magnification, inductance and capacitance of coils; the power factor, capacitance and inductance of capacitors; the inductance of resistors, etc. The apparatus is suitable also for the exact comparison of coils, capacitors, insulating materials, etc.

DESCRIPTION

The magnification meter is essentially a wide range H. F. oscillator, the output voltage of which is kept constant by H. F. detection. A part of this voltage is injected into a test circuit which is comprised of the coil which has to be measured and of the tuning capacitor of the magnification meter. The voltage developed across this capacitor at resonance is taken to the V. T. voltmeter via an attenuator and a detector stage. The voltmeter registers two rectified voltages: one is delivered by the H. F. detection which maintains the constant oscillator voltage, the second is taken from the test circuit via the Q detector.

Measurement of components other than coils. To the binding posts "Lx" is connected an auxiliary coil which resonates with the built-in tuning capacitor at the required frequency. The measurement is indirect because it is based on the mistuning of the

Measurement of dielectric constants of insulating materials. Dielectric constants are ascertained from the change of capacitance of a test capacitor which consists of two plates of known dimensions. The insulating material which has to be measured is placed between these places.

ADVANTAGES

Speedy and simple application. Direct measurement of capaci variety of applications. Good stability, and sufficient accuracy of Q measurements which is independent of even the highest frequencies.

TECHNICAL DATA

Magnification range: $O = 0 \div 450$

the whole frequency range 30 kc/s to 30 Mc/s is divided into 6 positions of the selector: $30\div95$ kc/s, $95\div300$ kc/s, $300\div950$ kc/s, 950 kc/s $\div3$ Mc/s, $3\div9.5$ Mc/s and $9.5\div30$ Frequency ranges:

measured directly: 0.5 μH to 0.5 H; computed from the Inductance range:

 $\mbox{formula L} = \frac{25350}{f^2 \mbox{C}} \left(\mbox{f} \ldots \mbox{Mc/s}, \mbox{L} \ldots \mu \mbox{H, C} \ldots \mbox{pF} \right) : 0.07$ $\mu \rm H$ to 0.7 H, provided that the self-capacitance of the coil is negligibly small in comparison to the tuning capacitance

measured directly: 0.1 pF to 400 pF; computed: 0.1 pF to 0.1 μ F Capacitance range:

 $0.5\,\%$ to 10 % for capacitances of up to 400 pF, and for insulating materials applied in a test capacitor of max. 400 pF Range of capacitor and dielectric losses:

Accuracy:

 \pm 1 %; (± 1.5 % above 3 Mc/s)

Frequency: O factor:

 \pm 5 % over the whole range, provided that the self-capacitance of the coil which is being measured has been compensated Inductance:

 \pm 3 % over the whole range, provided that the self-capacitance of the coll which is being tested is negligible in comparison with the tuning capacitance

 \pm 10 % over the whole range Loss angle:

 \pm 1 % or \pm 2 pF (whichever is the larger) in direct measurements Capacitance:

mains voltage fluctuations of \pm 10 % do not affect the accuracy of measurement which is independent also of ambient temperature variations of \pm 10 °C to \pm 30 °C Stability:

Mains connection:

Power consumption: UBL 21, 2×ECH 21, 6 AL 5, 2×AZ 11, 2×12 TA 31 Tube complement:

DESIGN



Oscilloscope, system K i i i i, type T 565 – a versatile instrument for the viewing of wave-forms of voltages from the lowest frequencies (D. C. voltages) up to 2 MGs. The voltages of the periodical or aperiodical (transient) phenomena which can be studied with the T 565 oscilloscope may range from 10 mV to 500 V.

The wide frequency range of the built-in amplifiers and of the time base make the T 565 oscilloscope an instrument universally applicable in many branches of science and industry (electronics, telecommunications, power engineering, physics, chemistry, biology, etc.). With any of the foregoing kinds in use there exists the possibility of measuring the voltages under observation.

DESCRIPTION.

The oscilloscope is built into a lacquered steel cabinet which protects the circuitry of the instrument from damage and from interfering influences. All controls are on the front panel of the instrument and their functions are clearly marked with engravings. The screen of the C.R. tube is fitted with a graduated transparent shield and with a protective shade to prevent the penetration of light from the sides. The built-in calibrating equipment enables the values of the wave-forms observed to be measured. The procedure of measurement is very simple. The calibrating voltage the image is led to the input terminals. By means of the calibrating voltage the image on the screen is shifted as required (e. g. from peak to peak), the built-in voltmeter indicating the voltage which has caused this image shift and which – consequently – corresponds to the magnitude of the voltage under observation.

Detailed instructions for use are supplied with each instrument.

BASIC PROPERTIES OF THE OSCILLOSCOPE.

The vertical deflection amplifier operates linearly from 0 to 1 Mc/s. It is applicable for frequencies up to 2 Mc/s. In connection with the four-step frequency independent input voltage divider, it makes possible the studying and measurement of voltages from 10 mV to 500 V of different frequencies hoving D. C. components and of switching and other single-stroke phenomena, biological voltages, etc. The colibrating equipment enables measurements within the full range to be effected.

range to be errected.

The horizontal deflection amplifier operates linearly from 0 to 0.5 Mc/s. It is applicable for frequencies up to 1 Mc/s.

The continuously controllable time bose makes possible photographic recordings at the lowest frequencies and of the slowest phenomena.

TECHNICAL DATA:

Rated mains voltage 220 V A. C. Rated mains frequency 50 c/s.

Input voltage range from 200 V to 240 V A. C. C. R. tube*) type B 10 S 1 Screen diameter 100 mm

Anode voltage

Sensitivity without amplifiers vertically 12 V per cm of figure height horizantally 14 V per cm of figure height

VERTICAL AMPLIFIER:

Max. sensitivity 30 mV D. C./cm; 10 mV R. M. S./cm

1 - 10

1300 V

Amplification continuously controllable within the range

controllable in steps with an attenuator 1:1, 1:10, 1:100, 1:1000

Frequency range fram 0 to 1 Mc/s.

linear; max. error — 3 dB; operates up to 2 Mc/s. Amplification Linear phase response from 0 to 100 kc/s.

Input impedance 2 MΩ, 30 pF

Inputs:

1 pole earthed or symmetrical to earth; direct connection of D. C. and A. C.; indirect connection via capacitors 0.25 µF (for A. C. only) max. 500 V A. C.

7) For the studying of higher frequencies than those for which the amplifiers are designed, the deflection plotes of the C. R. tube are connected to terminals on the back wall of the ascillascope $\dot{\nu}$ a capacitors Q25 $_{\mu}F$.



Calibrating circuit

Calibrating voltage D. C., positive

Ranges of the calibrating voltage 0 to 100 mV, 0 to 1, 0 to 10, 0 to 100 V Ranges of the meter ditto

Minimum voltage which can be measured on the screen

10 mV; read off the 100 mV scale

Calibrating voltage control

by a potentiometer continuously from 0 up to the voltage limit value determined by the measuring range

Accuracy of the calibrating voltage \pm 2%

Total calibrating accuracy of the instrument, i. e. including the divider deflections \pm linearities of the screen, etc.

± 5% .

HORIZONTAL AMPLIFIER:

Max. sensitivity 300 mV D. C./cm; 100 mV R. M. S./cm

2 MΩ, 30 pF

Amplification:

continuously controllable within the 1:10

with an attenuator 1:10

Frequency range from 0 to 0.5 Mc/s.

Amplification

linear, max. error -3 dB; operates up to 1 Mc/s. Linear phase response from 0 to 70 kc/s.

Inputs:

Input impedance

1 pole earthed or symmetrical to earth; direct connection of D. C. and A. C.; indirect connection vio capacitors

0.25 μF (for A. C. only) Input voltage mox. 500 V A. C.

TIME BASE:

Triggering

from 1.5 c/s to 30,000 c/s*)

either by the studied voltage, or by the mains frequency, or by an external voltage


speed equivalent to the speed of the time base

by a positive pulse of approx. 30 V or by the short-circuiting of two terminals with an auxiliary switch

1 x B 10 S 1 RFT Leipzig

8 x EF 42 TUNGSRAM 2 x 6 F 32 TESLA


3 x 6 L 31 TESLA 3 x UY 1 TESLA

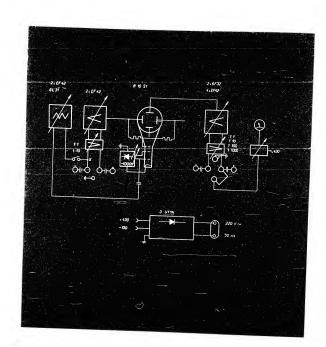




KOVO PRAHA-CZECHOSLOVAKIA

%. 1328 a € 8428 ← \$G 3 543628

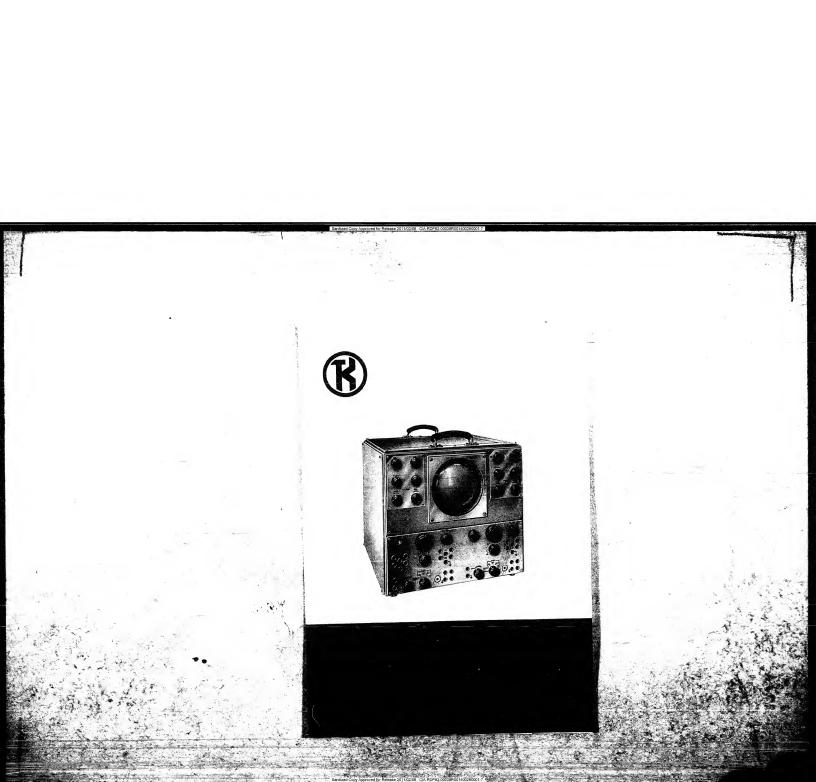

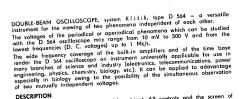

of two mutually independent vallages.

DESCRIPTION

The instrument is built into a portable cobinet. All controls and the screen of the C. R. tube are situated on the front vertical panel and their functions are clearly marked will engrowed inscriptions. The screen of the C. R. tube is fitted with a graduate transparent shield and with a protective shade to prevent the shield to the prevent the screen of the C. R. tube is fitted to the comparent shield and with a protective shade to prevent the screen of the control of the screen of the control of the screen of the scre

ADVANTAGES

The C.R. tube of large screen diameter (160 mm) with two independent beam systems produces large and clear images.

The vertical deflection amplifies operate linearly from 0 to 1 Mc/s., the errors to not exceed +0.5 db - 1.8 per ore applicable up to 2 Mc/s. In connection with title studying and measurement of voltages from 10 mV to 500 V applicable trequencies having D. C. components (switching and other single-trope transport of the studying and baseline studying and ensurement of voltages from 10 mV to 500 V application of the studying and beautiful studying and ensurement of voltages from 10 mV to 500 V application of the studying and beautiful studying and characteristic for the voltage from 10 mV to 500 V application frequencies having D. C. components (switching and other single-trope have to figures on the Day 10 meteors of the transport of the viewing of irregular voltage waveforms.

The horizontal deflection amplifiers operate linearly from 0 to 0.4 Mc/s., the error does not exceed +0.3 db - 3 db; they are applicable for frequencies up to 1 Mc/s.

The time bases (of linear characteristics even at the lowest frequencies) make possible photographic recordings even of the slowest phenomena. One common time base may be utilized also far both deflection systems of the oscilloscope.

TECHNICAL DATA

Rated mains voltage: Rated mains frequency: C. R. tube:

Screen: Anode voltage:

220 V A. C. 50 to 60 c/s.

Diameter 160 mm 1400 V*)

Vertical amplifier:**)
Max. sensitivity:
Amplification:

Frequency coverage:

Lineor phase response: Input impedance: Inputs:

Input voltage: Harizantal amplifier:**)
Max. sensitivity:
Amplification:

Frequency range:

Linear phase response: Input impedance: Inputs:

input voltage: Time base:**) Frequency: Synchronization:

Single-stroke operation:

Tube complement:


30 mV D. C./cm; 10 mV R. M. S./cm controllable continuously 1:10 and with an attenuator in steps 1:10, 1:100, 1:100 mt.
1:100, 1:1000
1:1000 to 12. Mc/s., lineor amplification; max. error up to -3 dB; operates up to 2 Mc/s. from 0 to 100 kc/s. 2 Mc/s. 2 Mc/s. 30 pF
1 pole earthed or symmetrical to earth; direct connection of D. C. and A. C.; indirect connection wia capacitors: 0.25 µf (for A. C. only) max. 500 V

300 mV D. C/cm; 100 mV R. M. S/cm controllable continuously within the most of the controllable continuously within the most of the controllable continuously in the controllable controlla

time base


1 x B 16 S 2, RFT Leipzig
16 x EF 42, TUNGSRAM
4 x 6F 32, TESLA
6 x 6L 31, TESLA
6 x UY 1N, TESLA


*) On request a C. R. tube may be supplied which applied 2000 V ousiliary of the control of on extention of the control of

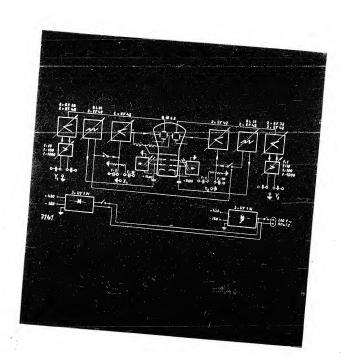



 $\tau_{e^{-1}33^{+}4^{-1}}^{-142^{+}} = 5G \ 3.50 \ 56^{+} \ .$

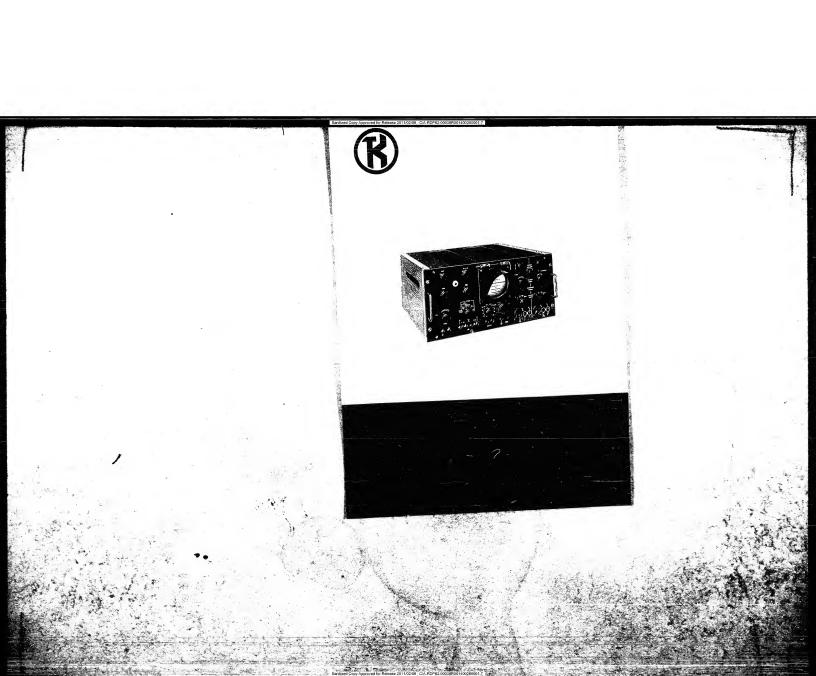

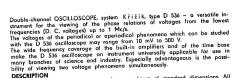

make the D 536 oscilloscope on instrument universally applicable for use in many branches of science and industry. Expecially advantageous is the possibility of viewing two voltoge phenomeno simultaneously.

DESCRIPTION

The instrument is built into a panel type cobinet of standard dimensions. All International Control of the instrument and their international control of the instrument and the international control of the instrument and the international control of the instrument and the international control of the international control of the instrument and the international control of the instrument and the international control of the international control of the instrument and the international control of the internatio

possible photographic re TECHNICAL DATA Rated mains voltage: Rated mains frequency: C. R. tube: Screen:
Vertical amplifiers:*)
Max. sensitivity:
30 mV =/cm; 10 mV-1/cm

Diameter 100 mm - Sharp trace,

30 mV D. C./cm; 10 mV R. M. S./cm, controllable continuously 1 : 10 and in steps with an attenuator 1 : 10, 1 : 100, 1 : 1000
Overall control range: 1 : 10,000

Frequency range:

Linear phase response: Input impedance: Inputs:

Input voltage: Horizontal amplifier: Max. sensitivity: Amplification:

Lineor phase response: Input impedance: Inputs:

Input voltage: Time base: Frequency: Synchronization:

Triggering:

from 0 to 1 Mc/s., lineor amplification; max. error +0.5 dB, -3 dB; operates up to 2 Mc/s. from 0 to 100 kc/s 2 M2, 50 pF 1 pple earthed or symmetrical to earth; direct connection of D. C. and A. C.; indirect connection via capacitors: 0.25 µF (for A. C. only) max. 500 V

max. 500 V


1.5 mV =/cm; 0.5 V_{ell}/cm
controllable continuously within the
range 1:10 and with an attenuator
1:10; owerful control range 1:100
from 0 to 0.4 Mc/s, linear amplificato 1 Mc/s, so 50 kc/s.
2 M0, 50 from 10
from 1.5 c/s. to 30,000 c/s.**)
by the studied voltage, by the mains
frequency, or by an external voltage
spead equivalent to the speed of the
time base
by a positive pulse of 30 V or by the
short-circuiting of two terminals with
an auxiliary switch

120 kc/s. (square-wave voltage) ***)
1 x B 10 S1, RFT Leipzig
10 x EF 42, TUNGSRAM
6 x 6 F 32, TESLA
4 x UY 1N, TESLA
3 x 6L 31, TESLA
1 x 6CC 31, TESLA

7) The two amplifiers (vertical) have absolutely identical phase characteristics and sensitivity.


**) By the connection of a larger copacitor the time base frequency can be lowered as required; an electrolytic capacitor is applicable claics.

***Ouries settlified as cathode of the C. R. tube obtains a positive blanking putse which makes the settledge procedure invisible. A negative blanking putse derived from a operationate is also available for fading one or other of the figures at the required

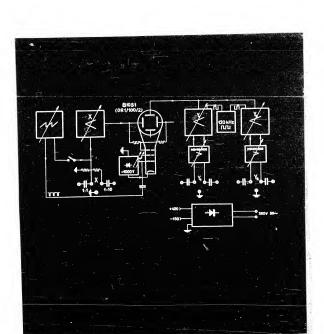



KOVO PRAHA - CZECHOSLOVAKIA

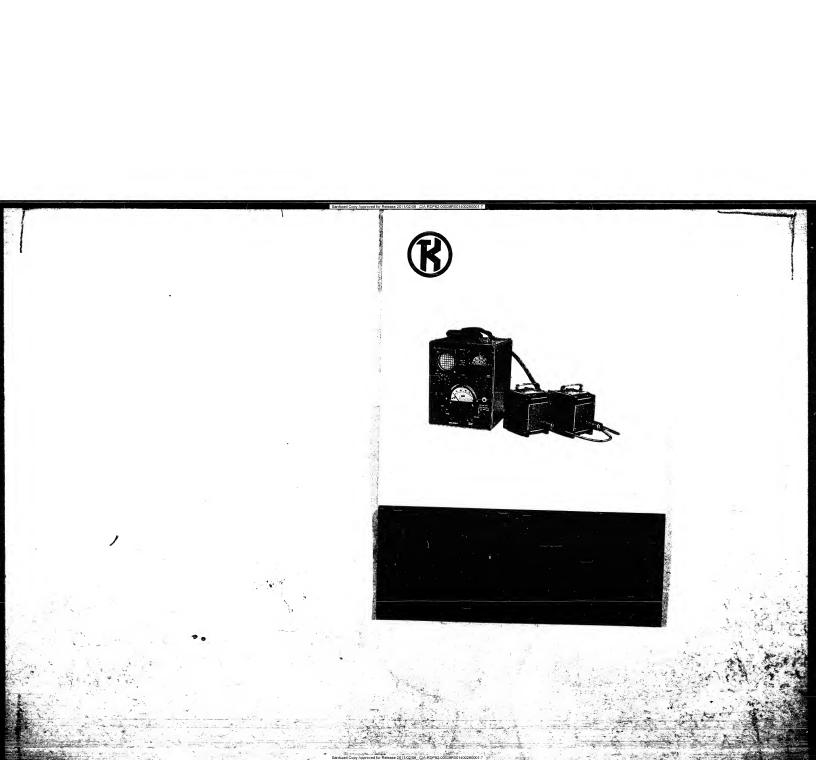

FERROSCOPE, system K i i i k, type F 563 – an instrument for material testing; designed for use in mechanical engineering and in allied branches of industry, for material classification and for the checking of the results of heat treatment, etc.

etc.

The ferroscope utilizes magnetic induction for its operation; consequently, it is suitable for the testing of magnetic materials, especially iron and steel. The properties of non-ferrous materials cannot be tested with it. However, if the material which has to be tested contains some ferromagnetic components, such as iron, nickel or cobalt, then the instrument becomes applicable.

The F 563 ferroscope is suitable for the measurement of the magnetic properties of soft magnetic materials (such as transformer stampings, cores for relays, permalloy articles, etc.).

DESCRIPTION

The Kfižik F 563 ferrescope is built into a firm steel cabinet which protects its circultry from damage and from external interfering influences. All controls, the screen of the CR tube and the measuring instruments are fitted on the vertical front panel of the instrument and their functions are clearly marked with engraved inscriptions. The screen of the C. R. tube is fitted with a graduated transparent shield and with a shade which prevents light from the sides from reaching the screen. The front panel of the instrument is recessed approximately. 30 mm, the frame thus gained protects the controls and the measuring instruments from damage.

The Instrument operates by comparison, A piece of material, the properties of which are known to be satisfactory, is used as a standard. With this material, the quality of which has been measured by some obsolute method, the magnetic properties of the samples which have to be tested are compared by the ferroscope.

The ferroscope is basically a combination of an oscilloscope and a V. T. volt-meter built into a common cobinet together with the power supplies which fed the test cols. The magnetizing current is controlled by switching the taps of a transformer and is indicated by a built-in instrument.

o transformer and is indicated by a built-in instrument.

The standard is inserted into one coil, the article under test into the other. Through the primary windings of both coils flows the same magnetizing current. Valtages induced in the secondary coils are equivalent to the magnetic properties of the inserted samples. These voltages are connected to the oscillatage and to the V. T. voltmeter so that both these instruments indicate temples sequely of the difference between them. As far as the two samples sequely of the difference between them. As far as the two samples under test differs from the standard, this value of the difference between them. As far os the two samples under test differs from the standard, this value of the difference between the difference between them. As far as the two samples under test differs from the standard, this office the difference of the figure on the C. R. tube screen and by the deflection of the V. T. voltmeter. In some cases the oscillaccope will prove to be the more sensitive indicator, in others the V. T. voltmeter.

Instruments, the operation of which is based on the described principle, are well proved in actual practice. They indicate differences between samples which differ only in the content of carbon by 0.19_{0} , in the applied heat treatment, the cemented surface layer, etc. It is a disadvantage that this method is sensitive also to differences in the cross section area of the samples. When rods are being compared, the diameter is important, but the length is irrelevant as long as it exceeds 0.5 metre.

TECHNICAL DATA

Rated mains voltage: Rated mains frequency: Tube complement:

220 V A. C. 50 c/s. 1 x 7 QR 20 3 x EBL 21

1 x 11 TA 31 1 x 6 F 32 2 x UY1N


1 pair of coils Ø 65 mm, 2 connection cables for the coils, 1 rubber insulated mains cord

With the coils supplied with this instrument, soft steel articles of \emptyset 3 mm and hard steel articles of \emptyset 15 mm can be tested. For articles of other dimensions (smaller or larger), special coils must be applied which can be supplied with internal diameters of 5, 10, 20, 35, 65, 100 and 150 mm. All larger coils are manufactured on special order according to the customer's reguirements.

The instrument classifies materials and objects without damaging their surfaces, so that articles which have been tested remain quite intact. The two coils supplied with the ferroscope are identical. They are connected so that no compensating device is required.


The operation of the instrument is quite easy; ony person may operate it ofter short training.

Each instrument is accompanied with detailed instructions and examples of use Articles which may be tested with the ferroscope can be of dimensions ranging from a few mm in diameter to large costings of up to 100 kg or more in weight.

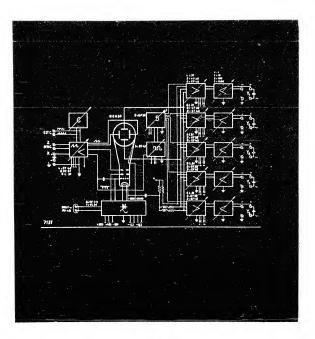



Ku 1333 + 1540" - SG 3:50 3623

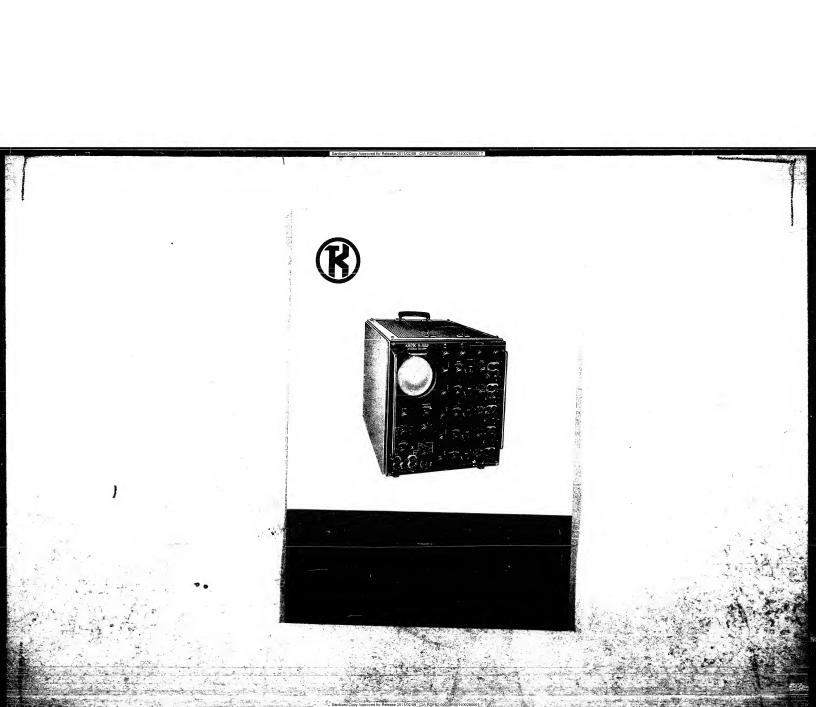

1

APPLICATION

The Kiiii we-chonnel oscilloscope, type K 552, is a universally applicable instrument for the simultaneous viewing and studying of the mutual phase instrument for the voltage of up to five phenomena, the trequency of which is relation of the voltage of up to five phenomena, the trequency of which is a considerable property of the phenomena of 10 mV to 500 V.

The wide frequency range of the built-in amplifiers and of the time base enables many applications of the oscilloscope K 552 in several branches of possible many applications of the oscilloscope K 552 in several branches of possible many applications.

science and industry.

DESCRIPTION

The instrumen is mounted in a portable steel cabinet. All controls and the screen of the C.R. tube are on the front ponel on which is clearly indicated the purpose of each control. The purpose of each control, the purpose of each control to the purpose of each control to the purpose of each control and the purpose of each control and the purpose of each control to the purpose of each control and the purpose of each control and purpose of each control and control and purpose of each control and control and posterior in push-bull connection. All outputs are interconnected and operate in the common mode resistors.

The built-in multivity produces of each control the purpose of each control the purpose of each control the purpose of each control tubes accessively. The purpose of each control tubes and control the control tubes and control tubes and control tubes and control tubes of each control tubes and control tubes are control tubes. Successively one successively the output stages of the five amplifiers switching date the control tubes are control tubes and control tubes are control tubes and the purpose of the purpose

ADVANTAGES
Simultoneous viewing of up to five independent voltage waveforms. Owing to Simultoneous viewing of up to five independent voltage waveforms. Owing to the utilization of a single-beam C. R. tube, the traces on the screen are interfected with the time bose, enabling the exact depiction of the mutual phase relations of all the studied voltage phenomena.

TECHNICAL DATA: Cathode ray tube

Type TESLA 12 QR 50 with 125 mm Ø screen, sharp trace and green phosphor five independent amplifiers with mothed characteristics and equal sensitivity

Sensitivity (max.): Gain:

Frequency response:

Linear phase response: Input impedance: Inputs:

Input voltage: Horizontal amplifier: Sensitivity (max.):

Gain:

Frequency response:

Linear phase response: Input impedance: Input:

Input voltage: Time base: Frequency range: Synchronization:

Single sweep operation: Trace switching:

Tube complement:


30 mV D. C. per cm,
10 mV R. M. S. per cm
controllable continuously 1:10 and in
steps with an attenuator 10 x, 100 x,
1000 x; the whole control range is theerefore 1:10,000 assentially flat from 0 to 1 Mc/s.
max. deviation +10.3 dB, -3 dB;
operates up to 2 Mc/s.
from 0 to 100 kc/s.
2 mC/l 50 pF
one pole earthed or symmetrical to
earth:
direct connection of D. C. and A. C.
or vio a 0.25 µF capacitor (for A. C.
only) only) max. 500 V

max. 300 V

1.5 to 3,000 kc/s.*) either by the observed voltage or by the mains frequency, external sync. voltage is opplicable of the property of the will be seen as the property of the pull-time base.") by the built-in multiwibrator of approximately 100 kc/s. or by the time base. 200 TESLA 17 kF 42 TUNGSRAM 7. x 6.1 31 TESLA 12 x 6 F 32 TESLA 1. x 6 C 31 TESLA 8. VUY 1. N TESLA 220 VA. C., 50 c/s.

by connecting an external capacitor this frequency can be reduced assessingly bytic capacitor may be applied also, the capacitor may be applied also.

17 Triggering with a positive pulse of 30 V or by shorting the sockets marked "syn" the capacitor of the capac , the cathade is supplied with a blanking pulse, trace does not appear on the screen.

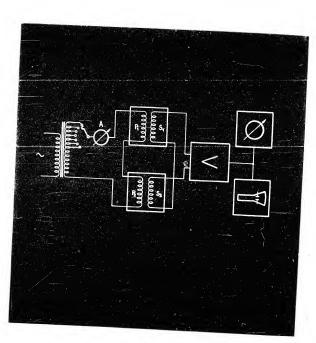




Ko 1332 . 5907 — SG 3.50.3623

)

Printed in Creek-

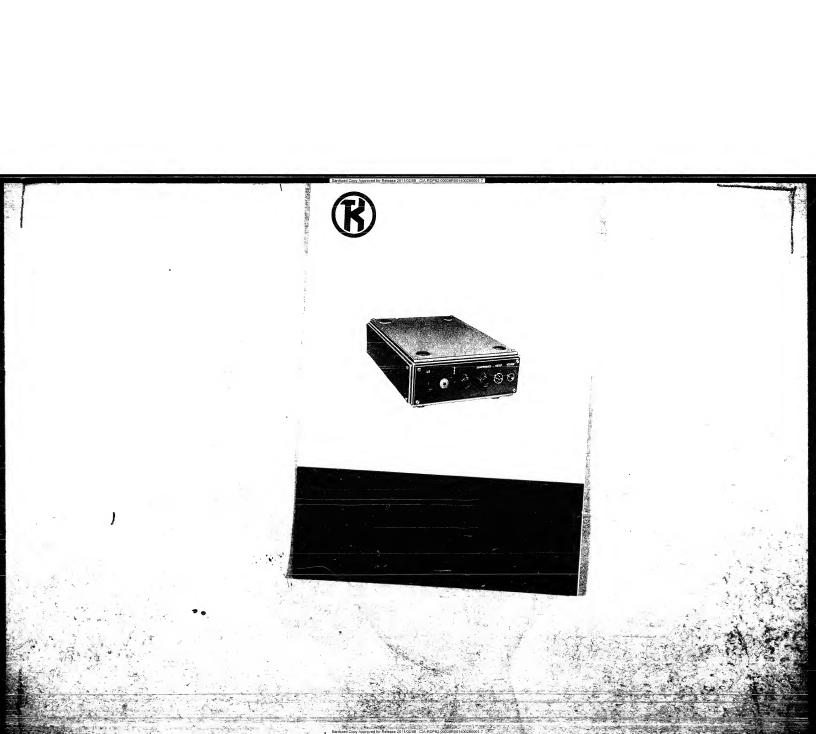

Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-

APPLICATION

The Křižik Type "Z 562" Pre-amplifier has been designed for a larger than $10\,\mathrm{x}$ increase of sensitivity of conventional-type oscilloscopes fitted with D. C. amplifiers, such as e. g. Křižik T 531, D 536 and K 552. By means of the instrument voltages within a frequency range of from 0 c/s. to 50 kc/s. ore omplified uniformly, as a result of which the instrument is suited very well for ascilloscope routine and laboratory work.

DESCRIPTION

A flot-shaped cosing, the plan of which is identical with that of the Křižík Type T 531 or T 565 Oscilloscope, incorporates a built-in single-stage amplifier fitted with a ECH 21 tube. The heating anade voltage of this tube is stabilized and, in addition, the effect of the variable cothode potentional is compensated for by a suitable kind of connection.

The anode voltage is reduced by means of a resistance divider to the input voltage level, so that the oscilloscope can be connected directly to the applifier output.

The casing comprising the amplifier is placed below the T 531 Oscilloscope as a sort of stand. The control knobs, the mains switch, the terminols for both the input and the output voltages are located on the front panel which forms on extension of the oscilloscope front panel.

If several amplifiers ore used (as e. g. with oscilloscopes for simultaneous observing of several phenomeno), the individual amplifiers can be loid one upon another, thus occupying o very small orea.

ADVANTAGES

Considerably large frequency range of the pre-amplifier which is suited also for amplifying of D. C. voltages enables a universal utilization of the instrument. Practicable shape saves room and enables easy operation.

TECHNICAL DATA

Energizing voltage:

220 V, 50 c/s. (for 60 c/s. a special

type is available)

Admissible mains voltage fluctuation: 180 to 240 V

Minimum amplification: 10

quency range:

from 0 to 50 kc/s.

Short-time stability: better than 1 mV D. C.

Maximum input voltage: 1000 mV

Maximum input voltage:
Maximum input voltage:


in conjunction with Křižík T 531 oscilloscope: 1 mV

Tube complement: 1 x ECH 21 TESLA 4 x 11 TA 31 TESLA

4 x 11 TA 31 TESLA 1 x 6 F 32 2 x 14 TA 31

Sanitized Copy Approved for Release 2011/02/08 CIA-RDP82-00038R001400280001-


Sanitized Cooy Approved for Release 2011/02/08 C/A-RDP82-00038R001400280001

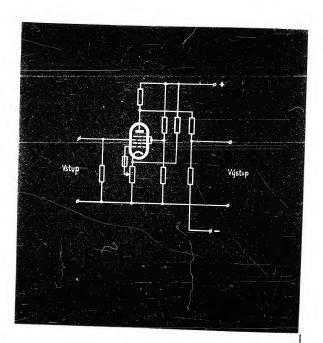



KOVO PRAHA-CZECHOSLOVAKIA

ke |324 a · 542* = \$G 3 5: 26 · ·

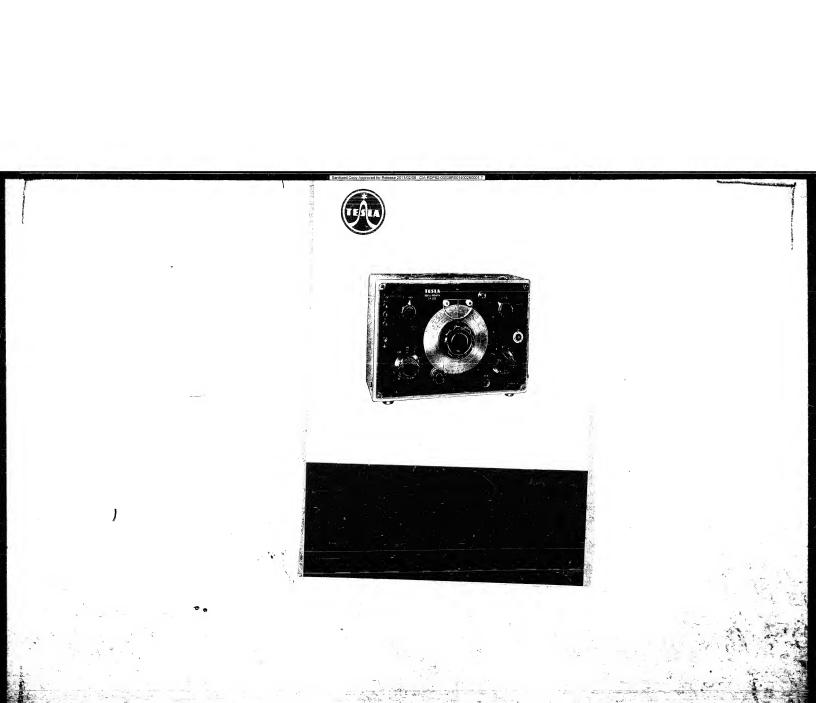

APPLICATION

The TESLA BM 205 universal test oscillator is designed primarily for use in radio servicing, but it is suitable also for routine laboratory work. It is applied generally for the alignment of R. F. circuits, for fault finding, and for the making of sensitivity, selectivity and A. V. C. tests on radio receivers.

DESCRIPTION

The instrument consists of two oscillators; a variable R. F. oscillator, and an A. F. oscillator which produces 400 c/s. The produced R. F. voltage, constant or variable, externally or internally modulated, or unmodulated, can be taken from two coaxial outputs sockets. The built-in source of modulating A. F. and the input for the connection of an external source of modulation also are connected to sockets on the panel of the apparatus.

ADVANTAGES

Direct reading frequency dial. Wide frequency range. Good stability. The modulating frequency is applicable also outside the apparatus. The output circuit of the oscillator and the capacitance of the supplied H. F. cable replace the generally applied dummy aerials.

TECHNICAL DATA

Frequency range: 94 kc/s — 30 Mc/s, divided into 5 bands

Stability of the R. F. frequency: better than 0.1 $^{\rm o}_{\rm o}$ at mains voltage fluctuations of

 \pm 10 %

Accuracy of the R. F. frequency: better than $\pm\,1\%$; in the band 9.4 $\pm\,30$ Mc/s it is better

than ± 3 %

Output voltage:

a) constant: 1 V \pm 3 dB within the range 9,4 kc/s - 9.6 Mc/s (above

8 Mc/s the voltage drops to 0.6 V); 0.6 to 0.2 V within

the range 9.4 — 30 Mc/s

b) variable: within the range 0 — 100 mV with 5 step divider and

continuous controll

Output impedance: constant output — 1,000 Ω , variable output — 10 Ω_* of

the 5th step — 100 Ω


Modulating frequency: 400 c/s, source impedance 10,000 Ω

Tube complement: EF 22, ECH 21, AZ 11, 7475 or 12 TA 31

Mains connection: 220 or 120 V, 50 c/s

Power consumption: 20 W approx.

Fuse: mains fuse 220 V — 0.2 A (120 V — 0.4 A)

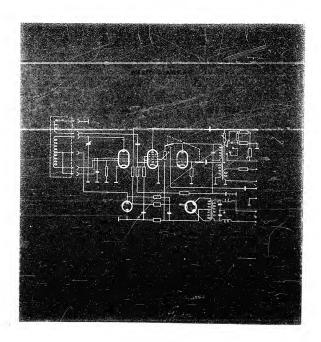



KO 1651 a - 6006